

Guide de l'utilisateur

Bedienungsanleitung

Guida per l'utente


Guia del usuario

Bruksanvisning

Guia do usuário

Gebruikershandleiding

Руководство по применению

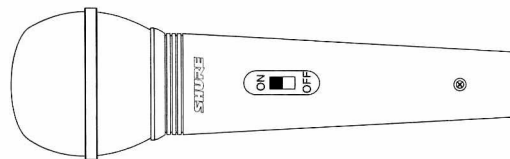

Frequency range
Gamme de fréquences
Frequenzbereich
Gama de frecuencias
Gamma di frequenze
Frekvensområde
Resposta a frequências
Frequentiebereik
Диапазон частот

50–15,000 Hz

Impedance
Impédance
Impedanz
Impedancia
Impedenza
Impedans
Impedância
Impedantie
Полное сопротивление

600 Ohm

Sensitivity
Sensibilité
Empfindlichkeit
Sensibilidad
Sensibilità
Känslighet
Sensibilidade
Gevoeligheid
Чувствительность

–52 dBV/Pa (1000 Hz)

1 Pa = 94 dB SPL

Connector
Connecteur
Stecker
Conector
Connettore
Kontaktidon
Conector
Stekker
Соединитель


XLR

Length of cord (if included)
Longueur du câble (si inclus)
Kabellänge (falls mitgeliefert)
Largo del cable (si se incluye)
Lunghezza del cavo
(se incluso)
Kabelns längd
(om inkluderad)

15' (4.6 meter)


Comprimento do cabo (se incluído)
Lengte van de kabel (indien bijgeleverd)
Длина провода (если входит в комплект)

FIGURE 1

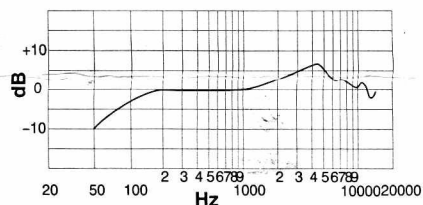

TYPICAL FREQUENCY RESPONSE

FIGURE 2

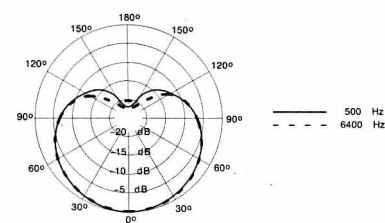

PICKUP PATTERN

FIGURE 3



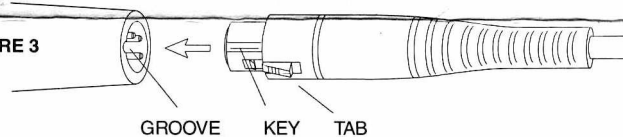


FIGURE 4

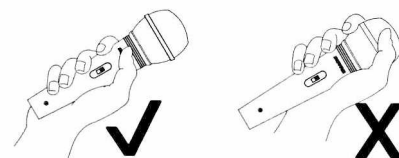

HOLD MICROPHONE HANDLE, NOT GRILLE

FIGURE 5

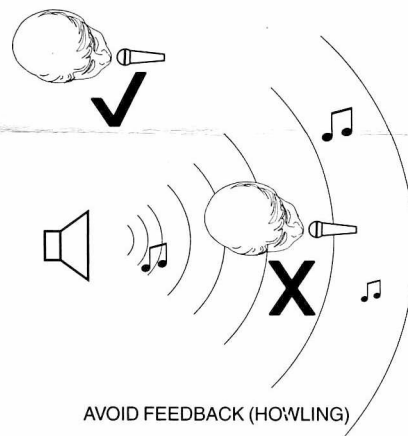

AVOID FEEDBACK (HOWLING)

SHURE MICROPHONE USER'S GUIDE

This Shure microphone can be used for karaoke, sound reinforcement, and multimedia applications (compatible with most major sound cards). Its wide frequency response, unidirectional pickup pattern, and high output make vocal performances sound clear and vibrant. It is also suitable for instrument pickup.

CONNECTING AND DISCONNECTING THE MICROPHONE CABLE

1. Insert the XLR connector into the microphone as shown in Figure 3. If necessary, rotate the connector to align the key on the connector and the groove in the microphone. Push the connector into the microphone until it clicks.
2. To disconnect the cable and microphone, grasp the connector while depressing the tab. Pull the connector away from the microphone.

OPERATION

1. Turn on the microphone by sliding the switch to "ON". Turn off the microphone by sliding the switch to "OFF". Keep the switch in the "OFF" position while connecting or disconnecting the microphone from a karaoke machine, mixer or tape recorder.
2. Position the microphone grille one to two inches (2 to 5 cm.) away from the mouth. Move farther away from the microphone to produce a more balanced, natural sound. Move closer to the microphone to enhance low-frequency response.

PRECAUTIONS

1. Hold the microphone by its handle. Avoid covering the grille with your hand. See Figure 4.
2. Keep the microphone ball grille securely screwed to the handle.
3. To minimize the chance of feedback (a loud howling or squealing noise), position the microphone beside or behind loudspeakers. See Figure 5.
4. Avoid dropping the microphone.
5. Keep the microphone dry. Avoid extreme temperatures and humidities.
6. If necessary, clean the microphone and cable with a soft, dry cloth.

CERTIFICATION

Eligible to bear CE mark; conforms to European Union EMC Directive; Immunity per EN 50082-1 (1992).

OPTIONAL ACCESSORIES

Swivel adapter A25D, CA25D
Desktop stand S41A (5/8" thread); S41E (3/8" thread)

For additional information about service, please contact your local authorized Shure Service Center or visit Shure at www.shure.com.

