


GRUNDIG


CUC 4410
CUC 4411 183-28093









AENDERUNGEN VORNEHMTEN
SUBJECT TO ALTERATION
SOMS RESERVE DE MODIFICAR
CON RISERVA DI MODIFICARE
RESERVADO EL DERECHO DE








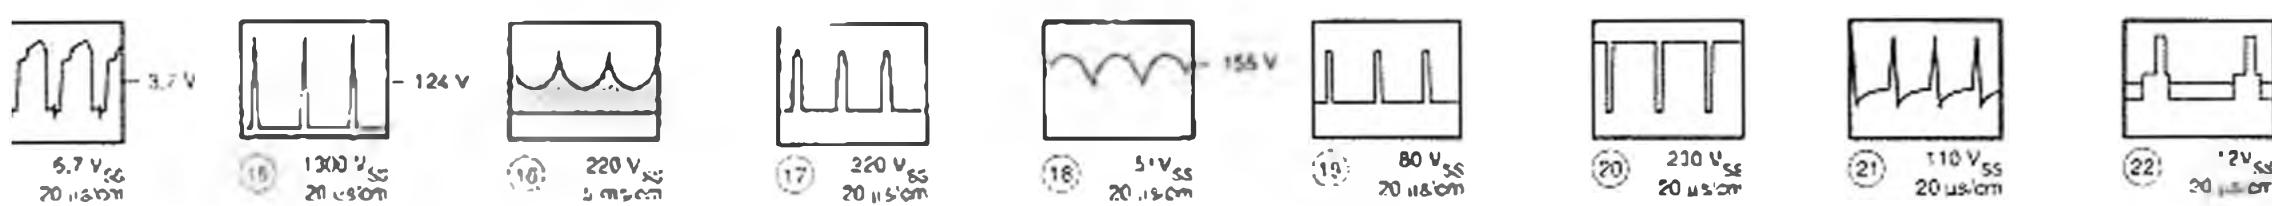










TP 661
TP 661 FASTTEXT
TP 661 TDP


PERABESTELLUNG 29622-053.01
REMO CONTROL -053.12 FASTTEXT
TLE COMMAND -053.13 TOPTEXT
TELECOMMAND
TELE MANDO

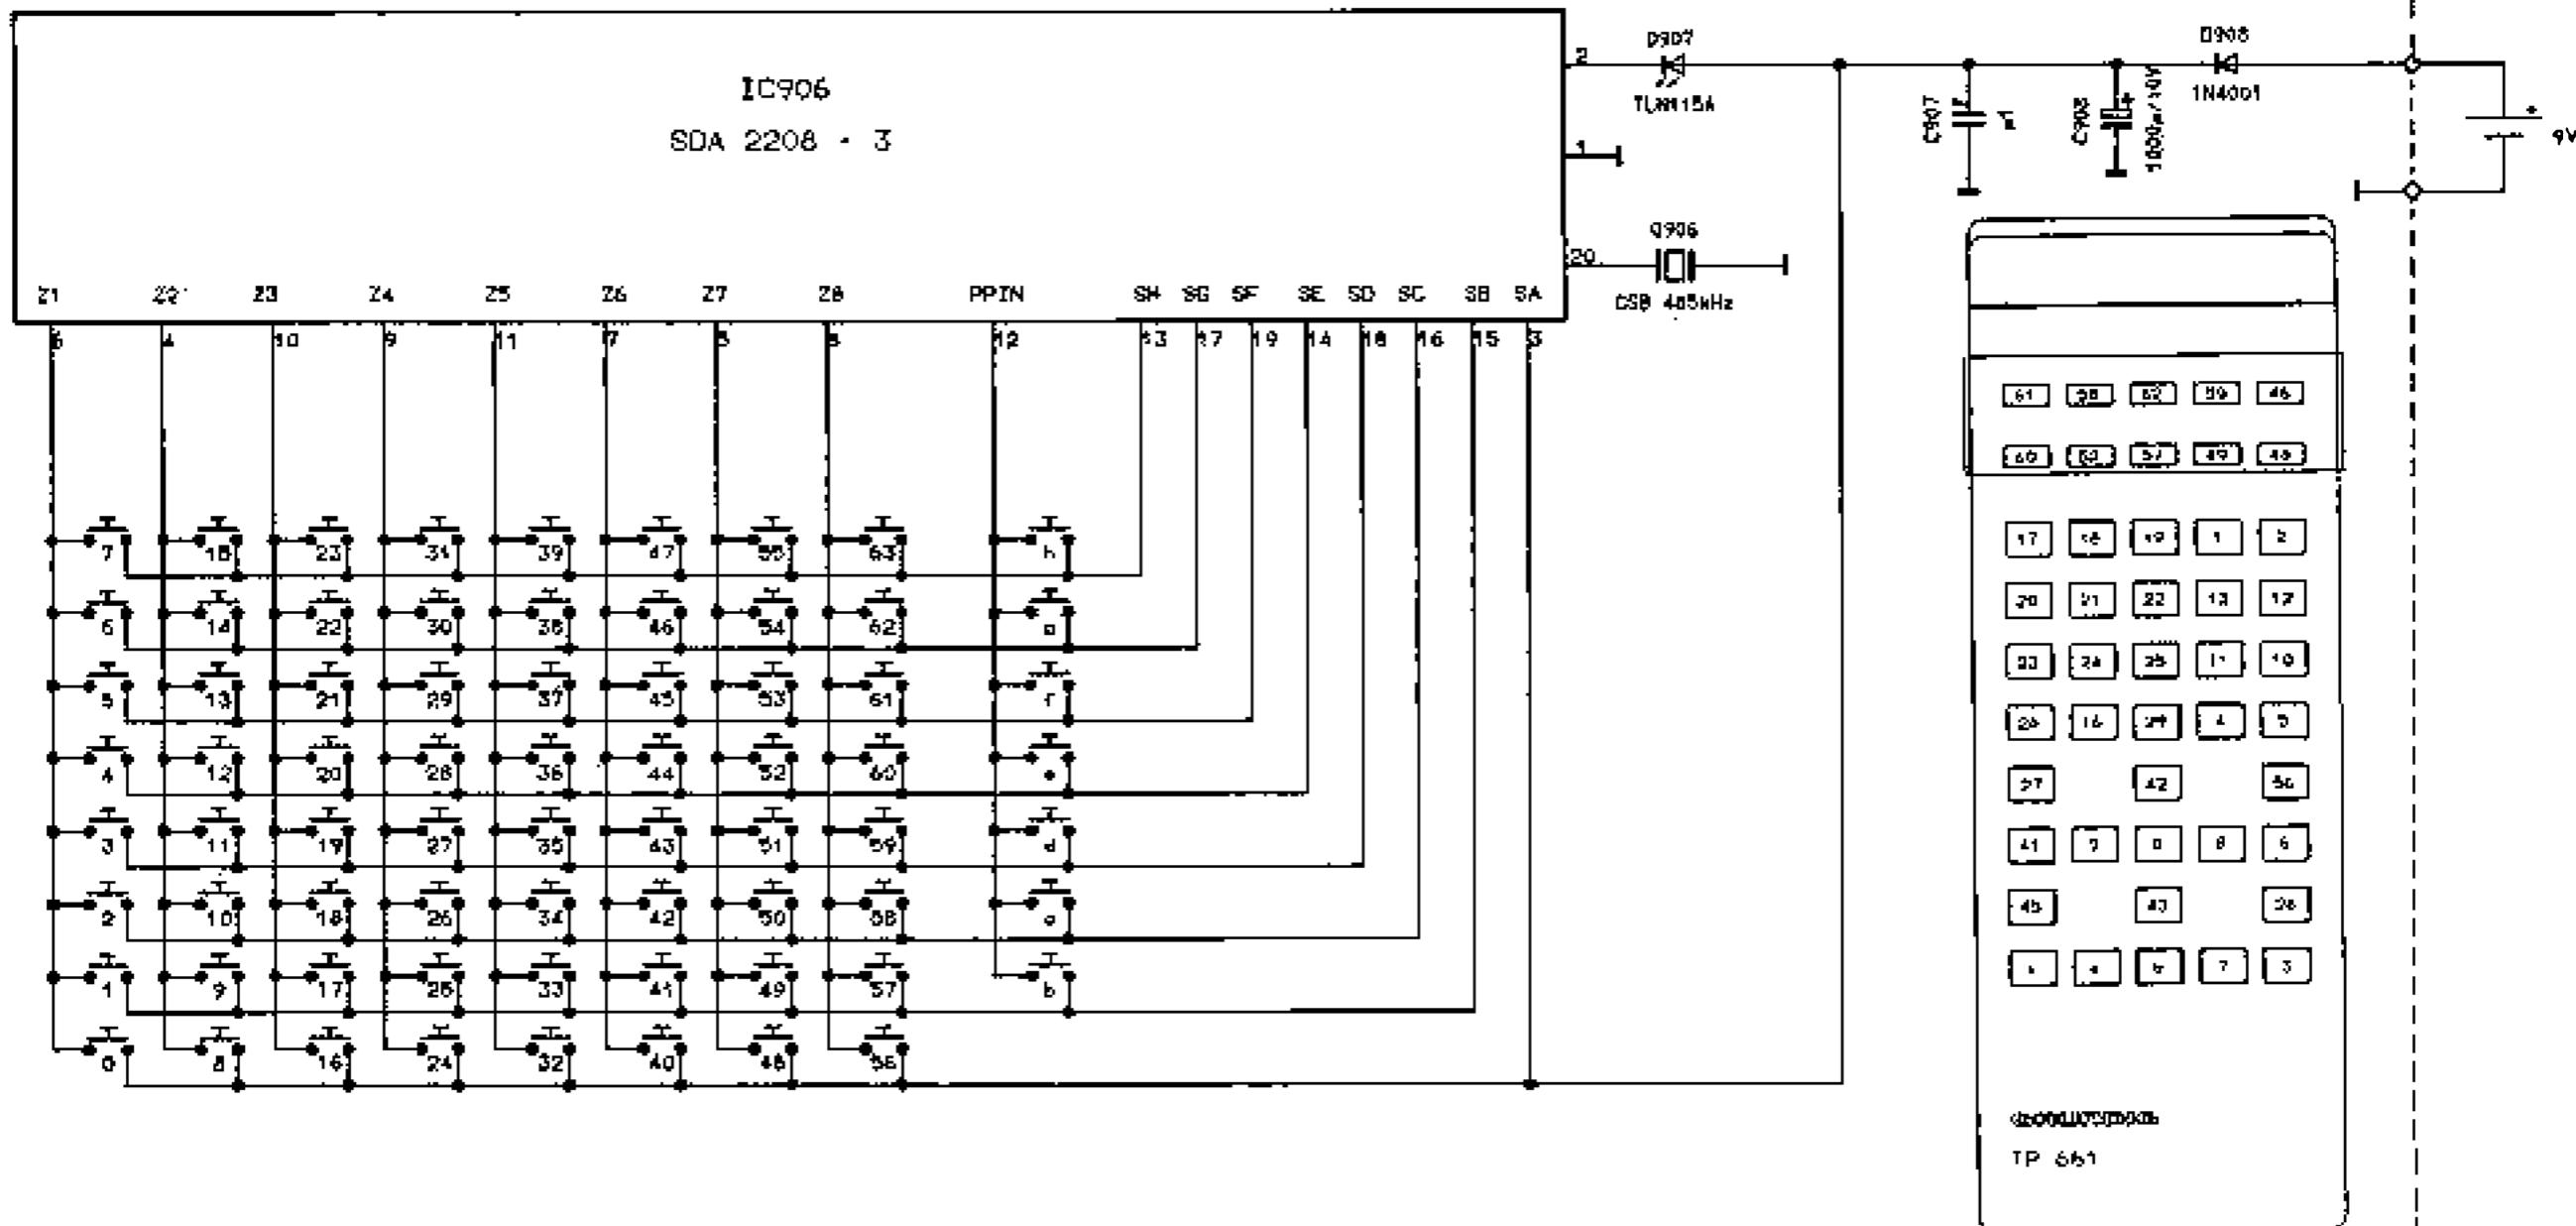

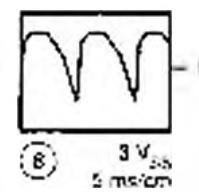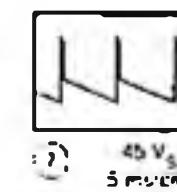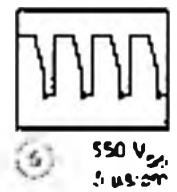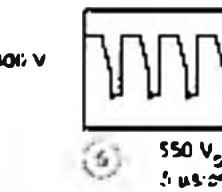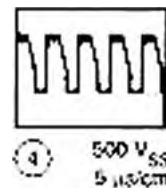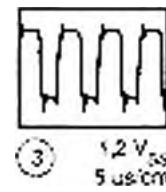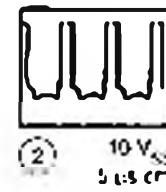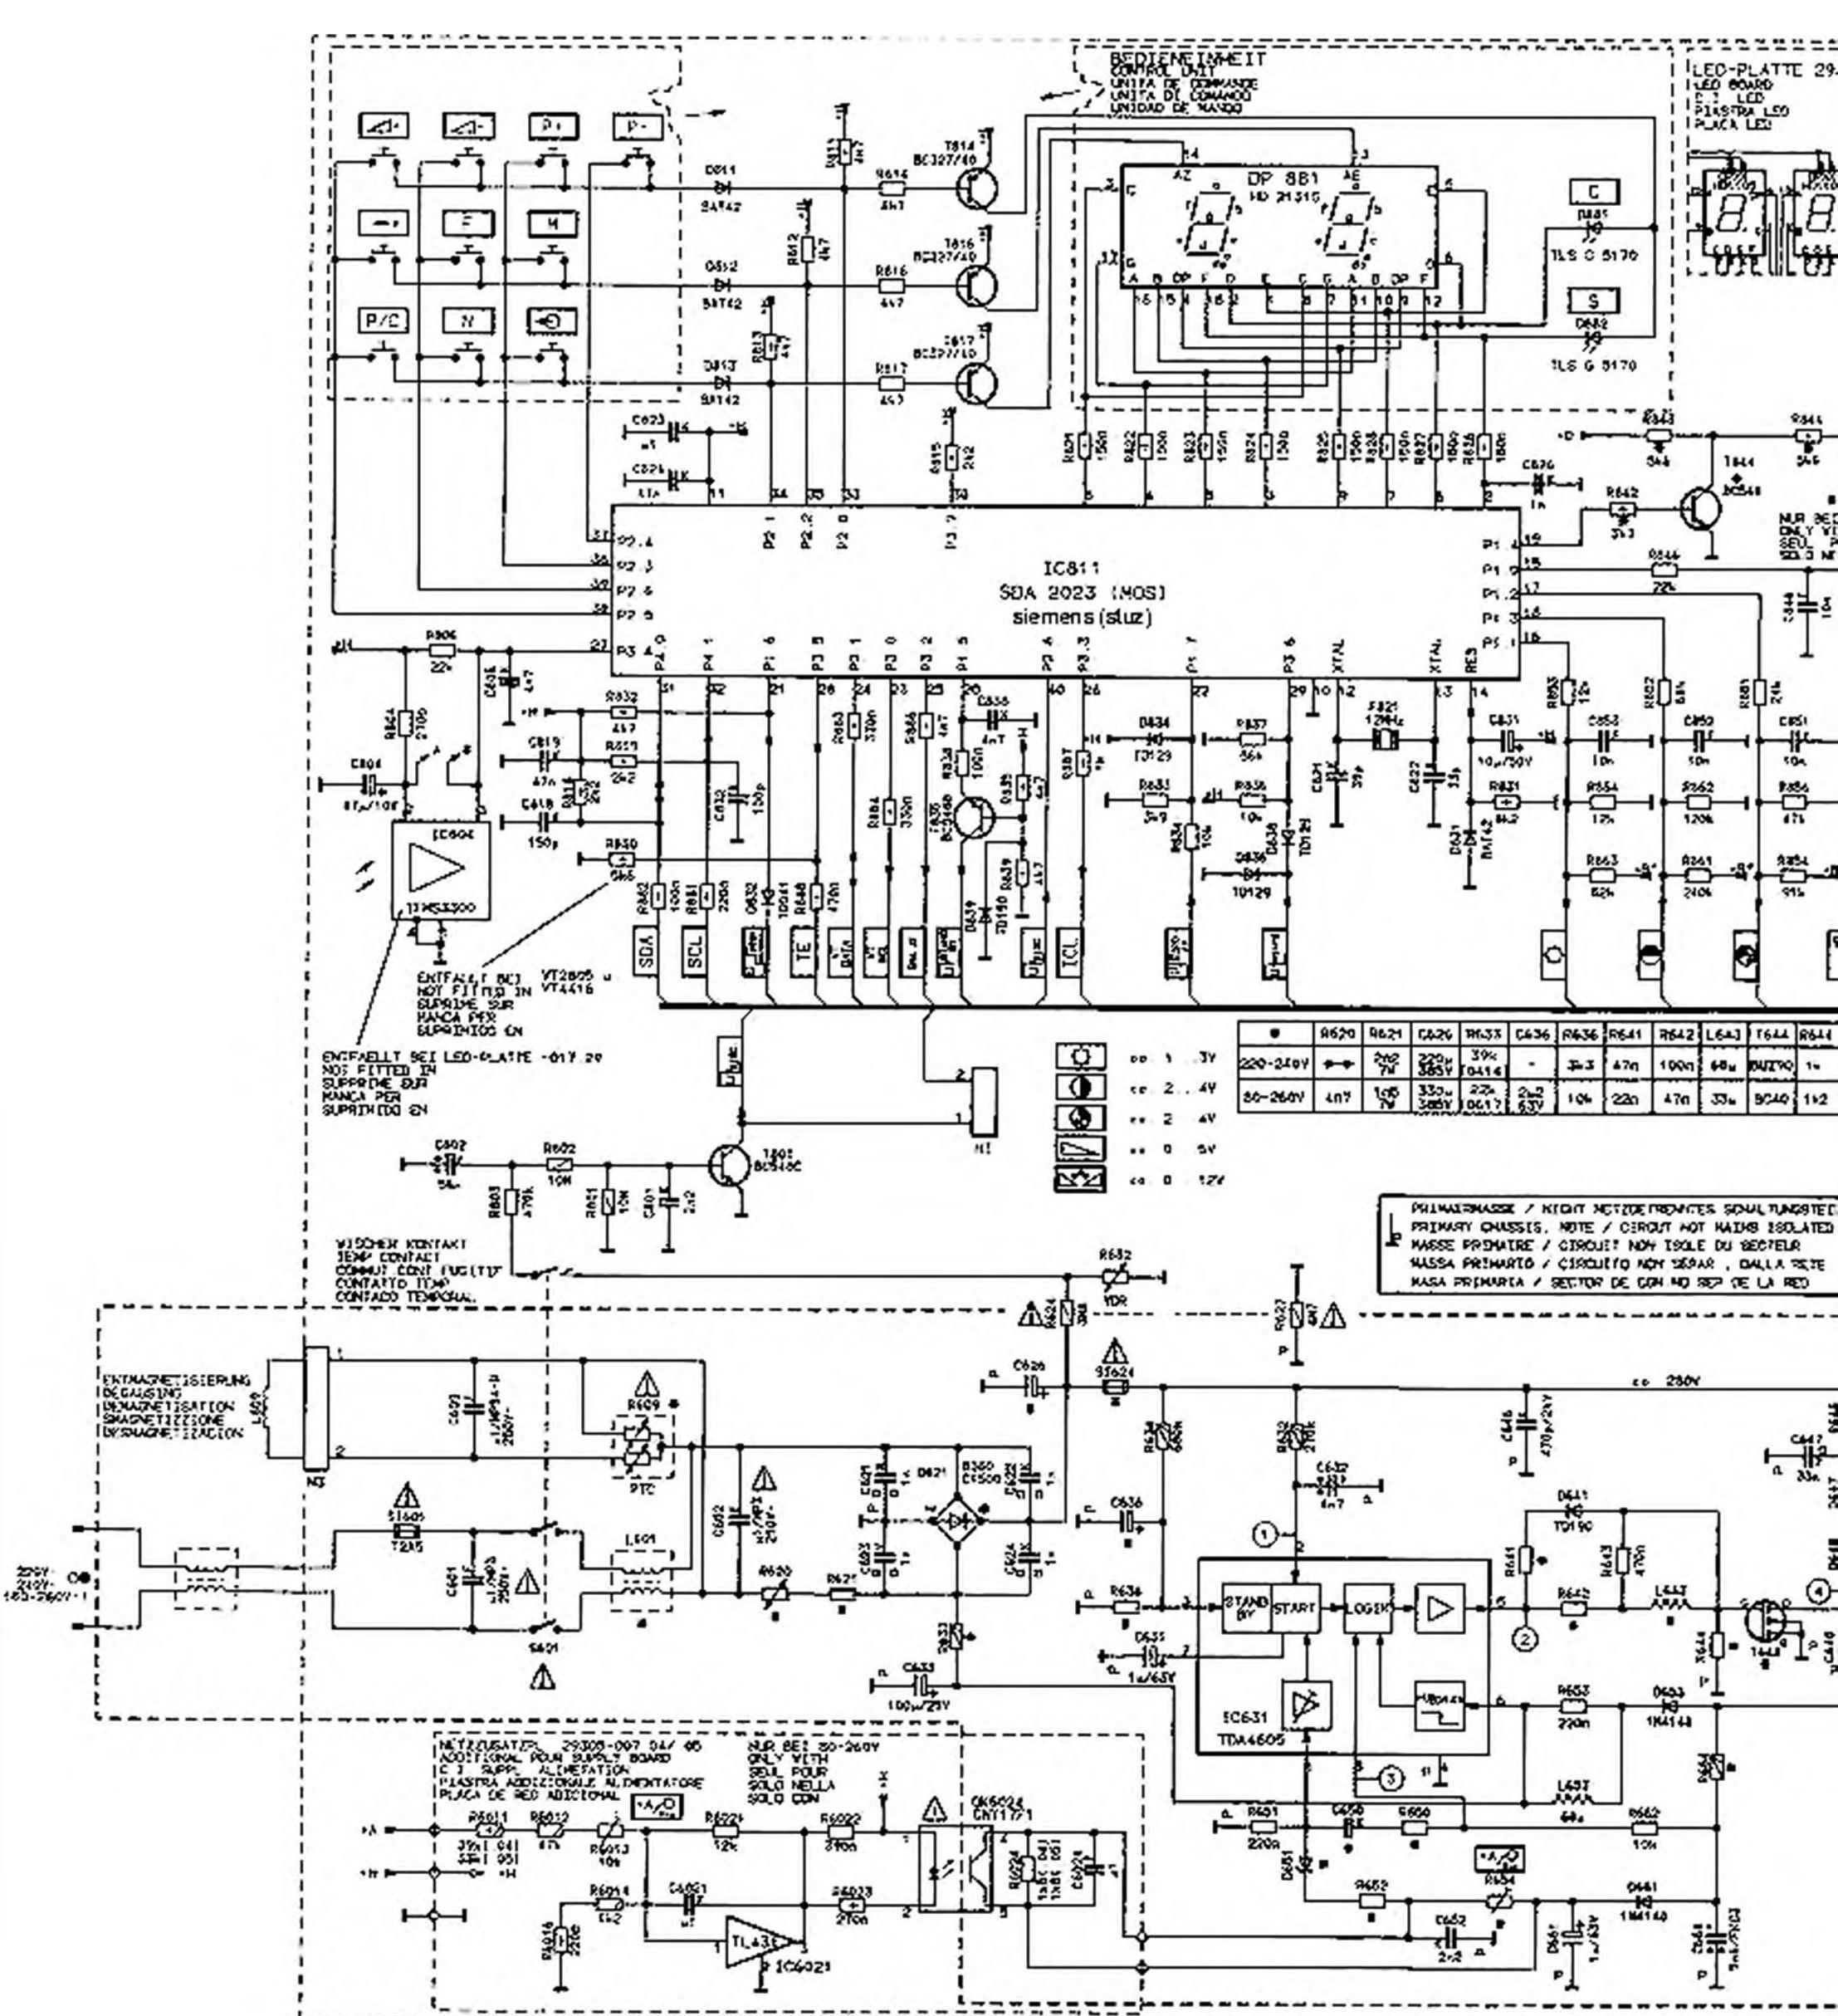

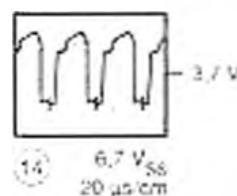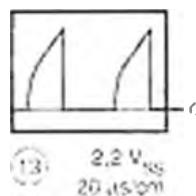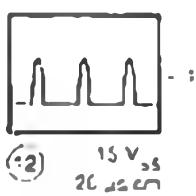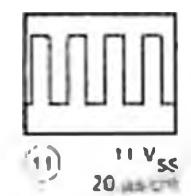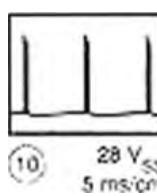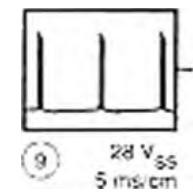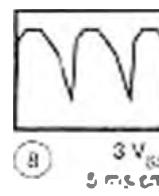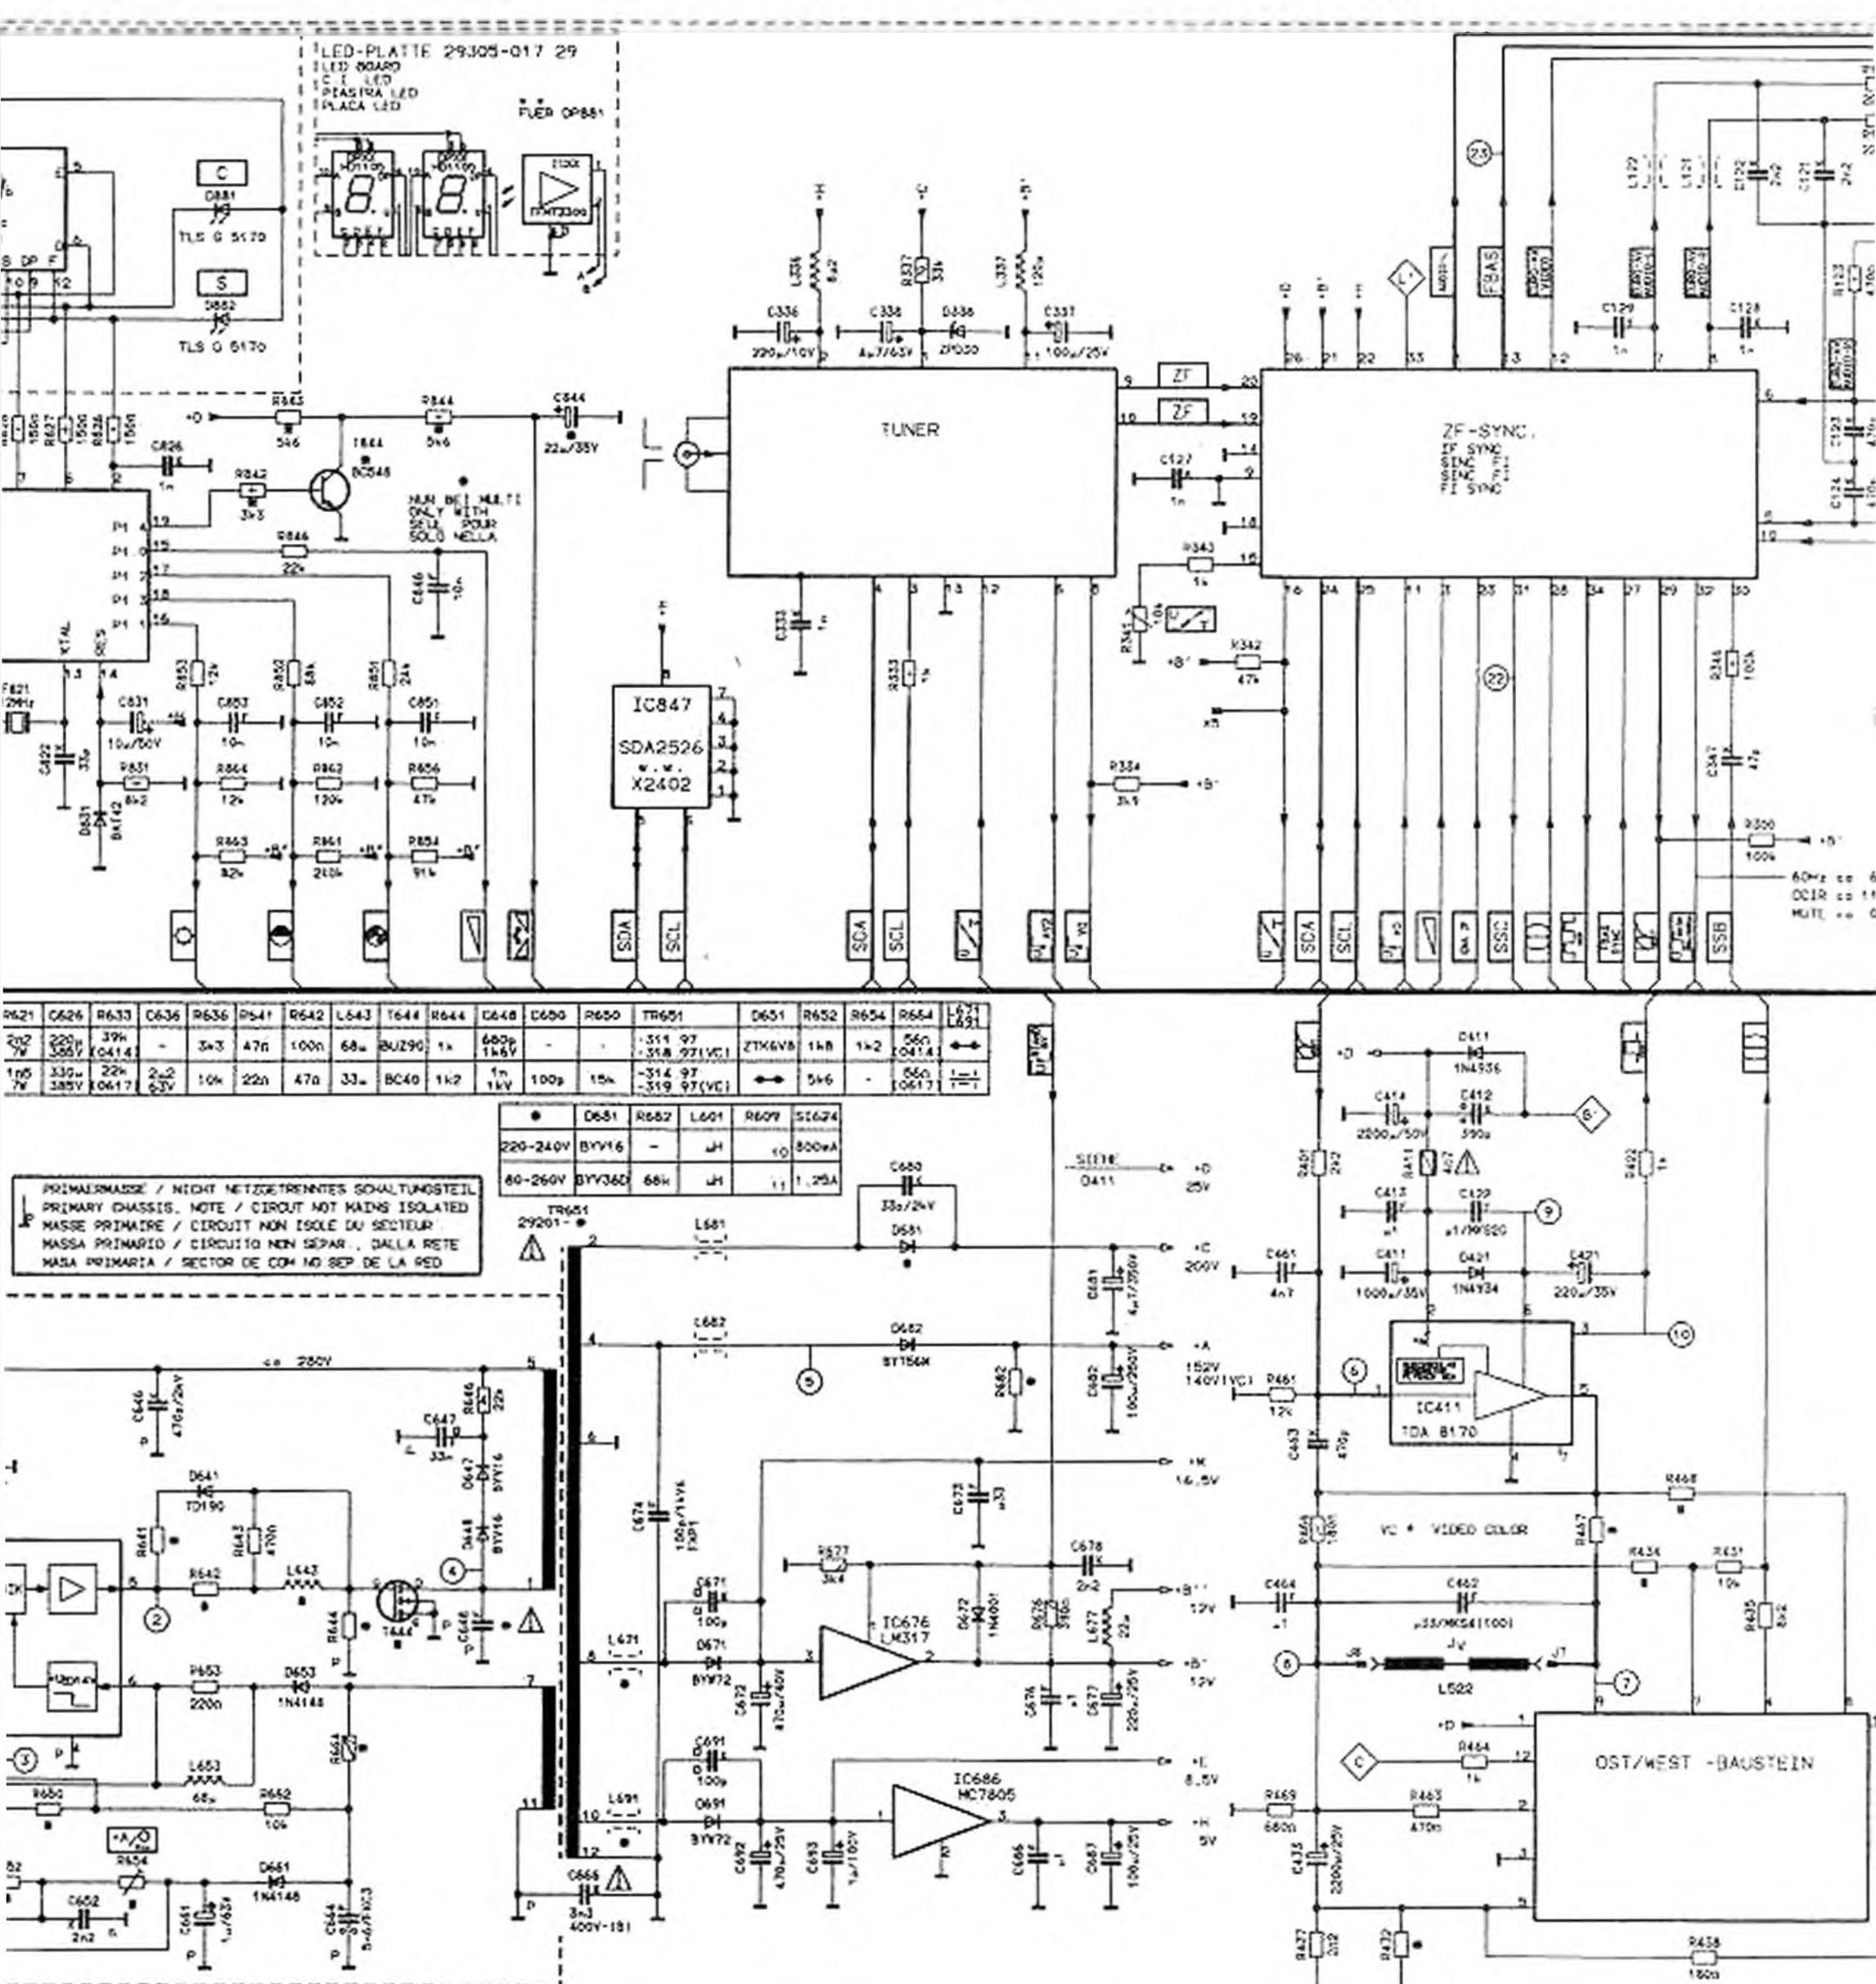

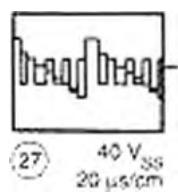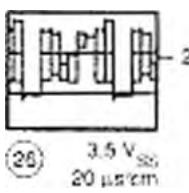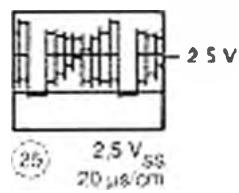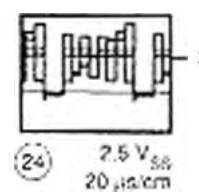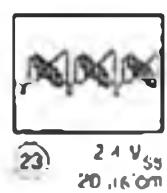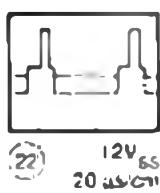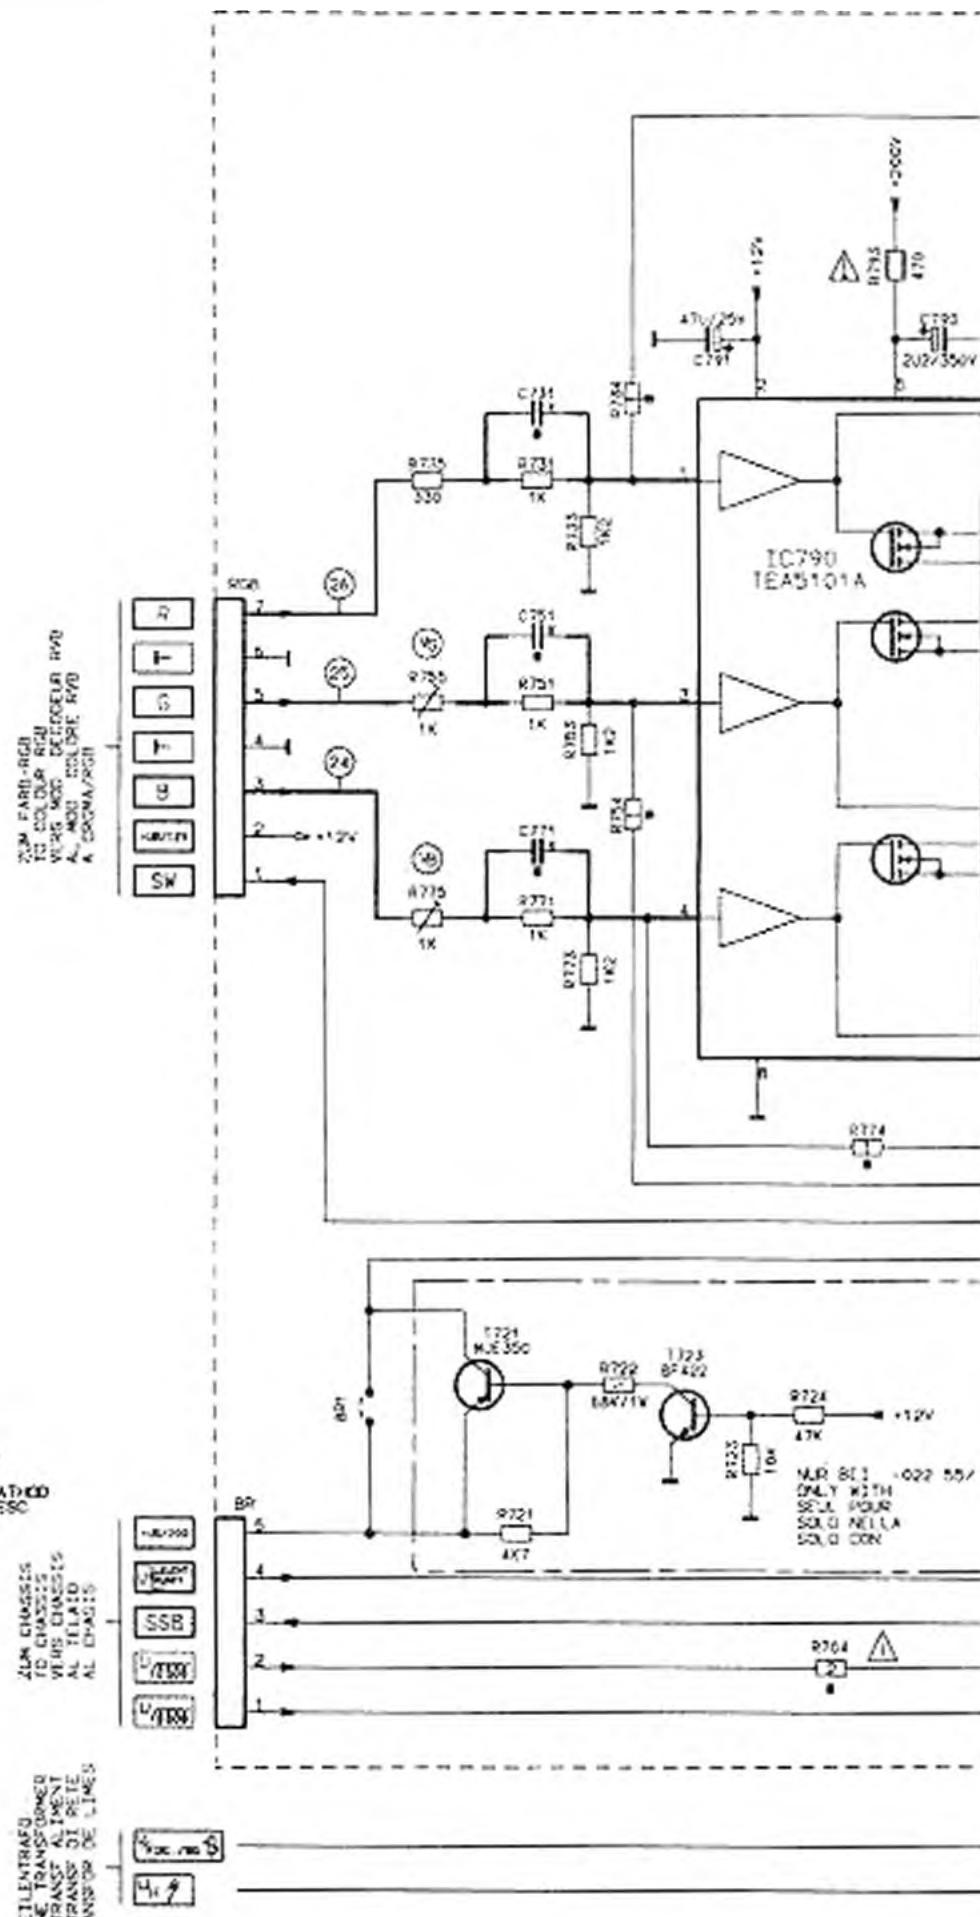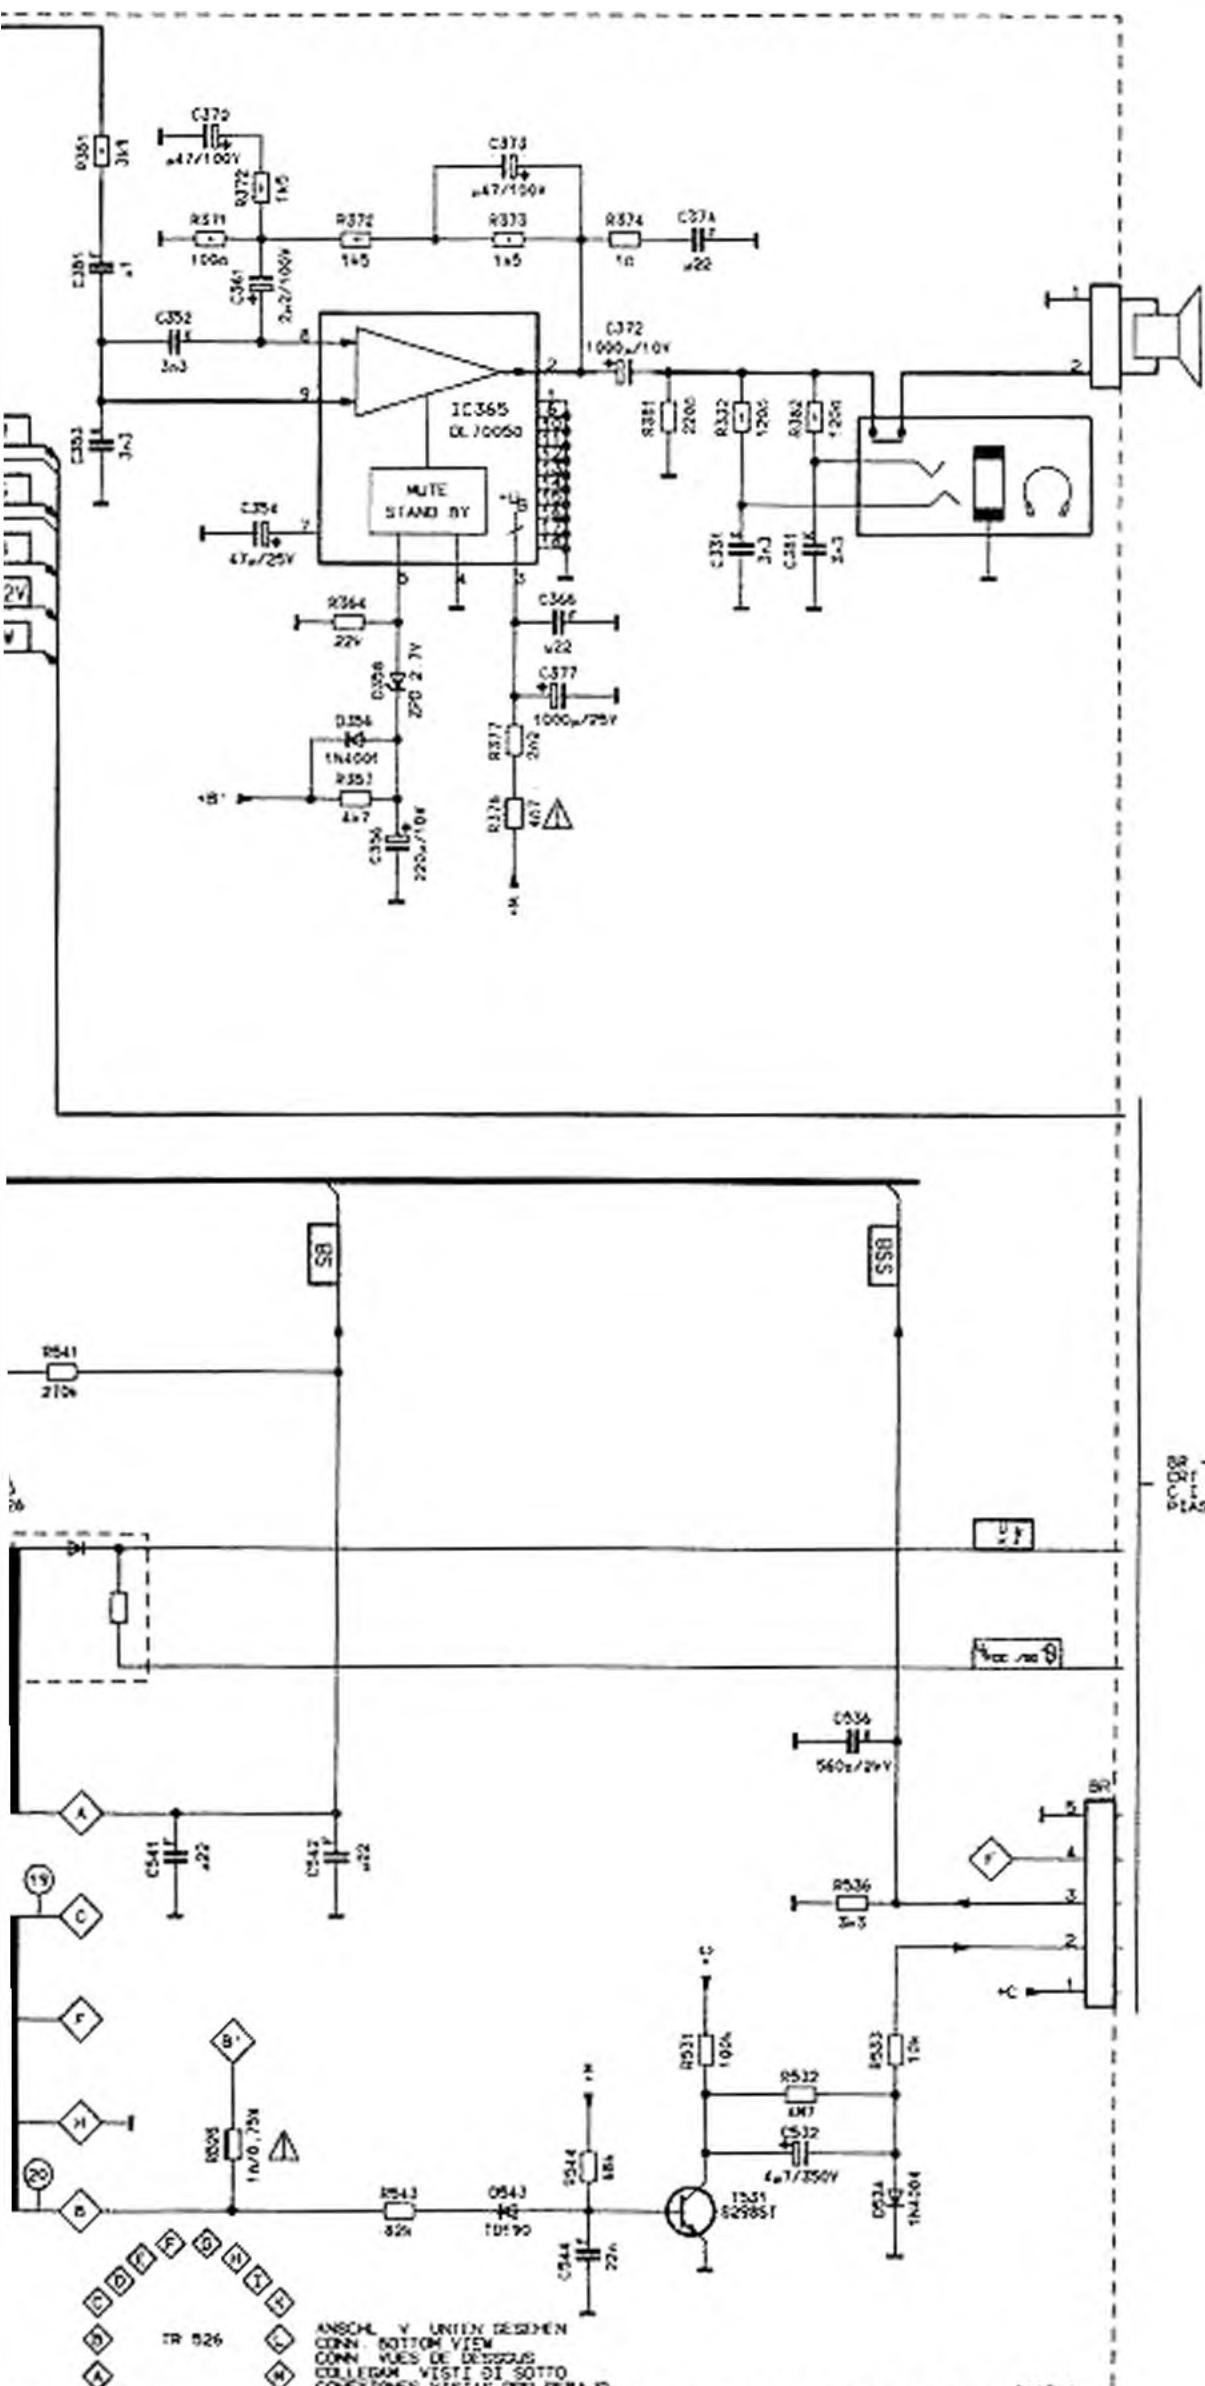

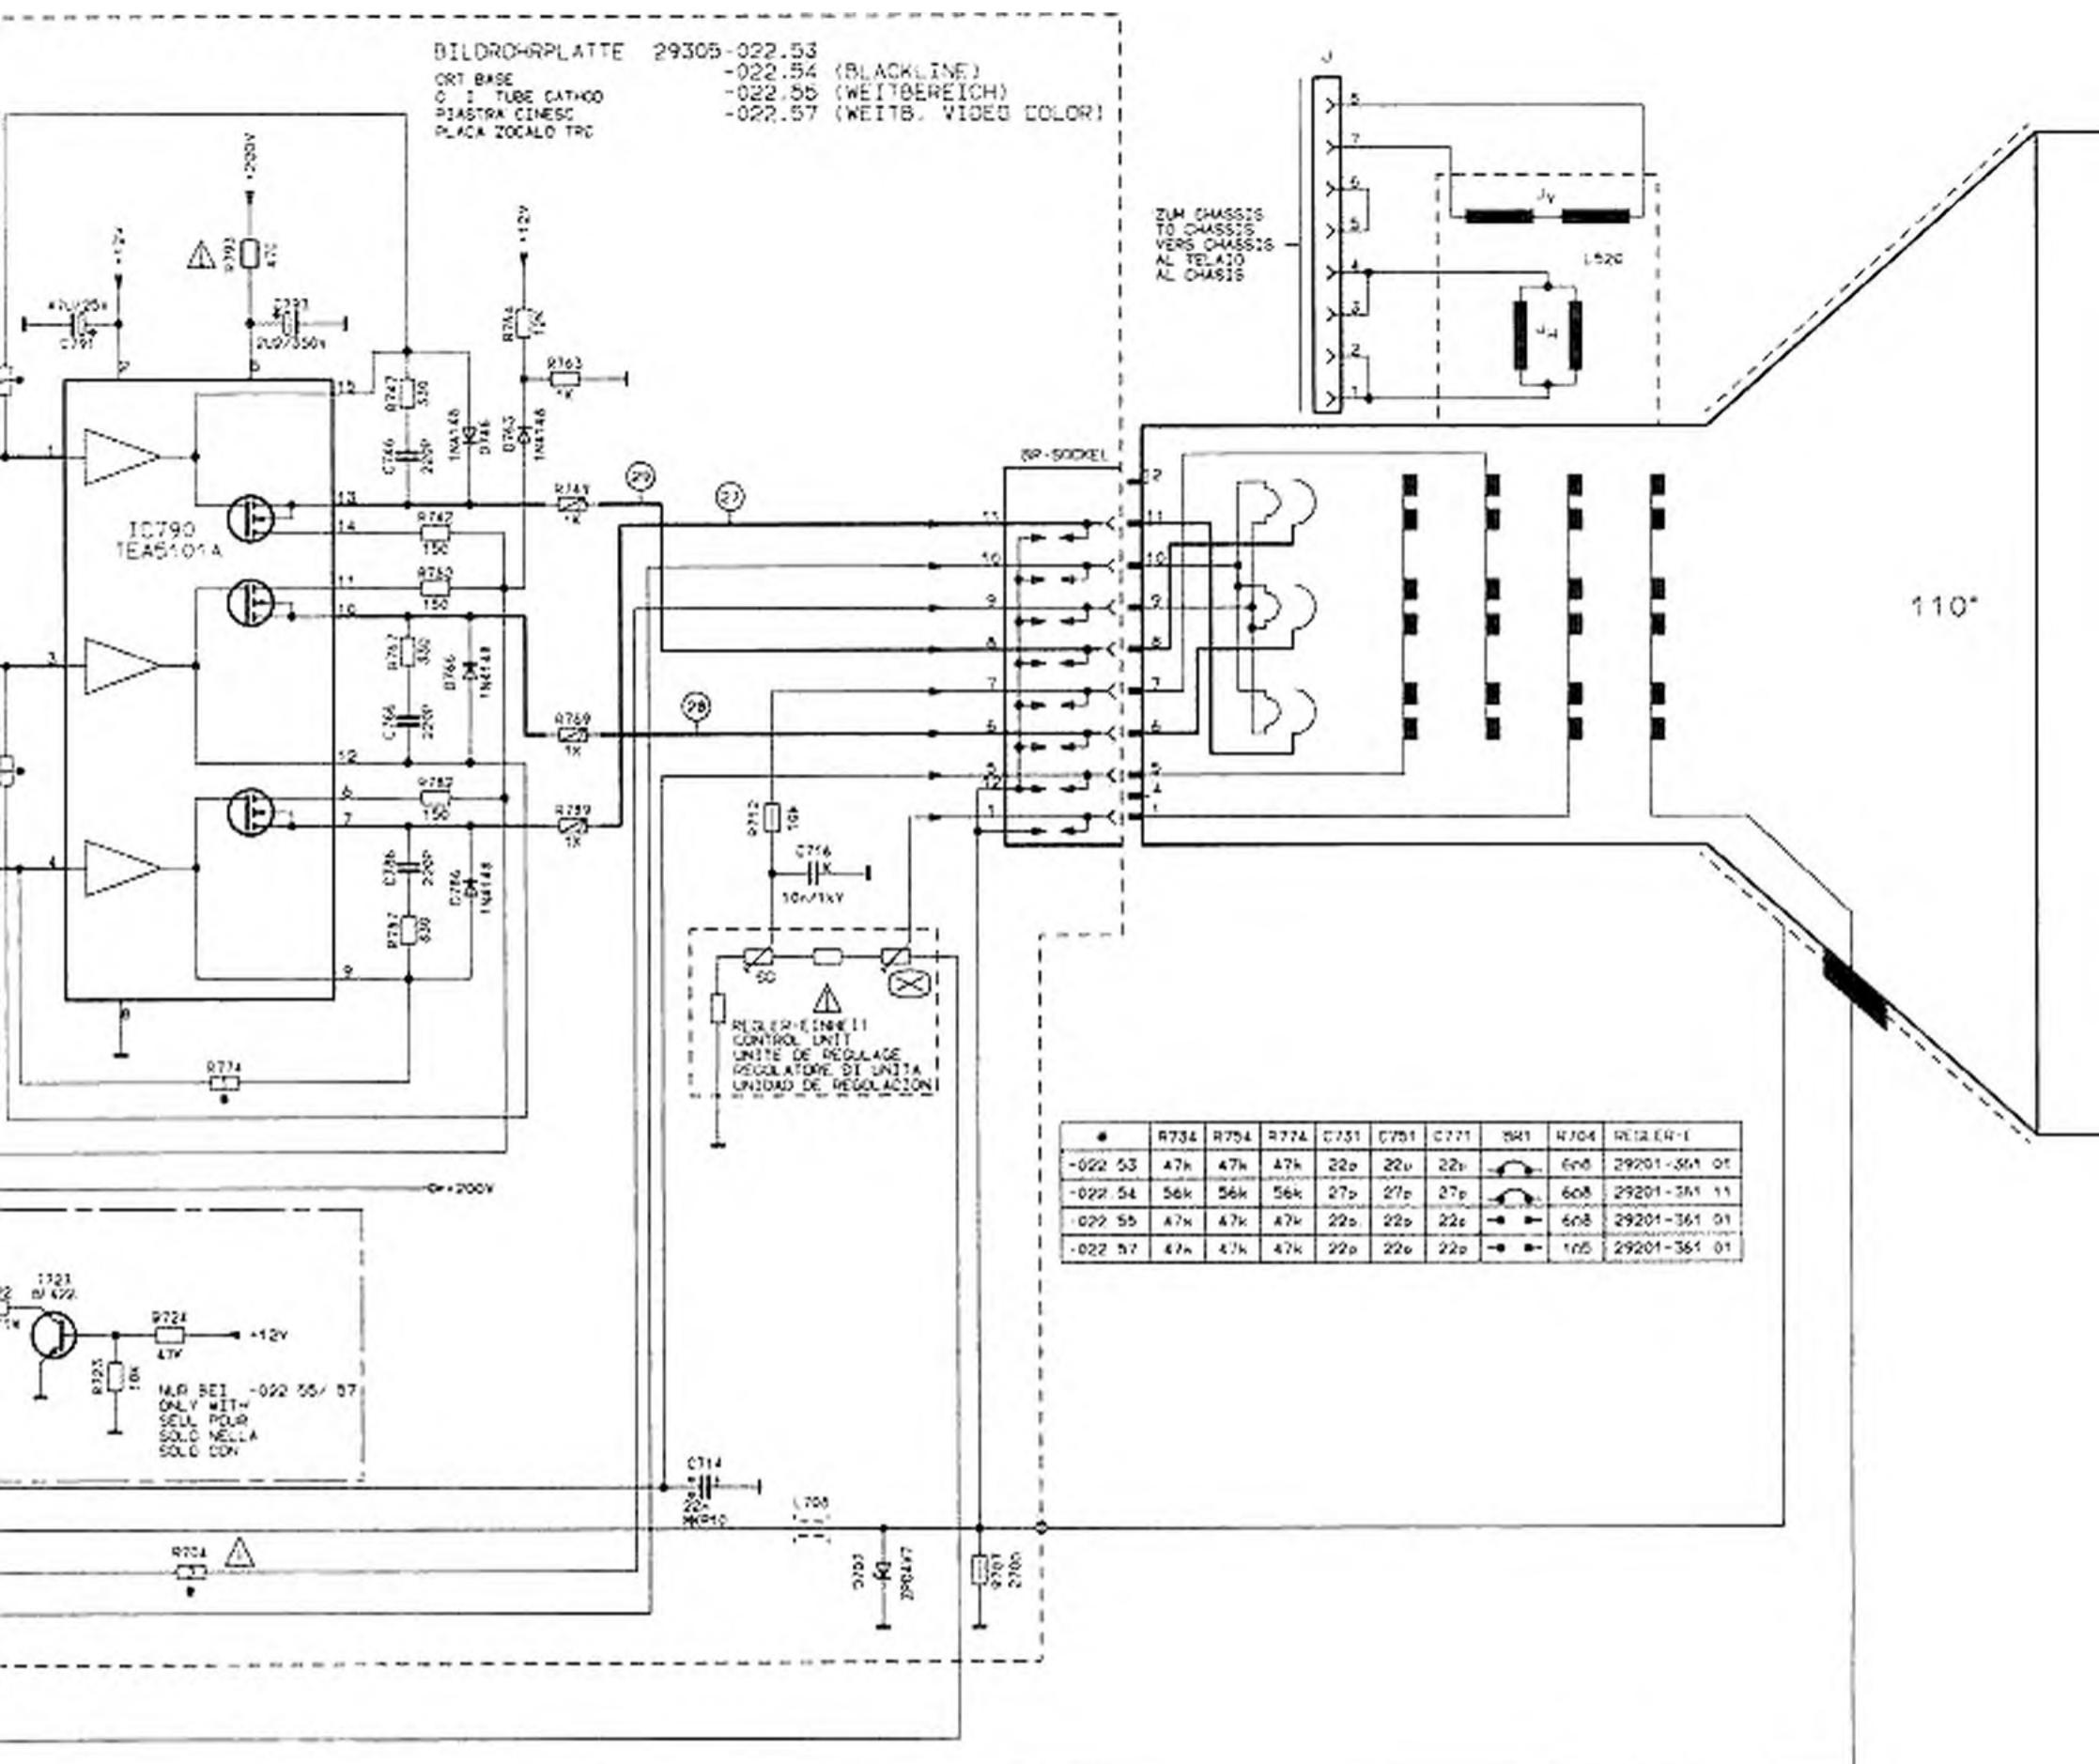

D

www.OsborneBooks.co.uk

Weindogleich
FUNK-TELEGRAMM

FUBR - Taschen einspeisen
3 min. bei 100° gewaschen

Regler VG und VB auf der Bedieneinheit zu einstellen, daß keine Verarbeitungen sich über eine

By [Bassirzadeh](#) ([@bassirzadeh](#))

IV) Hauptspannungsvorzugsrichtung (Tuner)
Normtestbild auf holzen UHF-Kanallogen, die MF sollte mind. drosselk. 1,5 mV betragen (rauschesfreies Bild). Regler R 341 (Kontakt 15, ZF-Verst.) in Richtung Linkenanschlagdrehen bis das Bild zu rauschen beginnt, dann wieder zurückdrehen bis das Bild gerade rauschfrei wird.

ABGLEICH DER BRÜCKENSPULE L 511

Den Bildbreitensregler R 700? (Ost-West Bauset) auf Minimum stellen, den Testkopf eines Zweistrahlzylindroskopus an den Kollektor des Transistors T 572 (BLU 508 A) einhängen. Den anderen Testkopf zwischen den Dioden D 502 und U 503 anschließen.
Mit der Spule L 511 bede Oszillogramma auf gleiche Impuls-

GB

White-level adjustment

Display only the first name

Display colour bar test pattern.
Set Ω to min, O to norm, \odot to min
Adjust presets VG and VB on the CRT base so that the picture does not show any colouration.

RV Delayed Automatic Gain Control Voltage (Tuner)
Feed in a standard test pattern at a channel in the upper range of the UHF Band. The RF should be at least 1.5 mV (noise free picture). Rotate the control R 341 (contact 15, IF Amp) towards the left hand and stop until noise just begins to appear in the picture, then reverse the direction of the control until the picture has maximum noise level.

ADJUSTMENT OF THE BRIDGE COIL - S11

ADJUSTMENT OF THE BRIDGE COIL L 511
Set the picture width control A 7002 (east-west modul) to minimum, then connect one test probe of a twin beam oscilloscope to the collector of transistor T 572 (BU 508 A). Connect the other test probe to the junction of D 502, D 503. Adjust the coil L 511 so that both oscilloscopes have the same scale.