# Micro-Stepping Stepper Motor Bridge Controller

#### Introduction

The AMIS-30421 is a micro-stepping stepper motor bridge controller for large current range bipolar applications. The chip interfaces via a SPI interface with an external controller in order to control 2 external power NMOS H-bridges. It has an on-chip voltage regulator, current sensing, self adapting PWM controller and pre-driver with smart slope control switching allowing the part to be EMC compliant with industrial and automotive applications. It uses a proprietary PWM algorithm for reliable current control.

The AMIS-30421 contains a current translation table and takes the next micro-step depending on the clock signal on the "NXT" input pin and the status of the "DIR" (direction) register or input pin. The chip provides a so-called "Speed and Load Angle" output. This allows the creation of stall detection algorithms and control loops based on load angle to adjust torque and speed.

The AMIS-30421 is implemented in a mature technology, enabling fast high voltage analog circuitry and multiple digital functionalities on the same chip. The chip is fully compatible with automotive voltage requirements.

The AMIS-30421 is easy to use and ideally suited for large current stepper motor applications in the automotive, industrial, medical and marine environment. With the on-chip voltage regulator it further reduces the BOM for mechatronic stepper applications.


#### **Key Features**

- Dual H-Bridge Pre-Drivers for 2-Phase Stepper Motors
- Programmable Current via SPI
- On-chip Current Translator
- SPI Interface
- Speed and Load Angle Output
- 8 Step Modes from Full Step up to 64 Micro-Steps
- Current-Sense via Two External Sense Resistors
- PWM Current Control with Automatic Selection of Fast and Slow Decay
- Low EMC PWM with Selectable Voltage Slopes
- Full Output Protection and Diagnosis
- Thermal Warning and Shutdown
- Compatible with 3.3 V Microcontrollers
- Integrated 3.3 V Regulator to Supply External Microcontroller
- Integrated Reset Function to Reset External Microcontroller
- These Devices are Pb–Free and are RoHS Compliant\*



### ON Semiconductor®

http://onsemi.com



QFN44 CASE 485BY

#### **MARKING DIAGRAM**

AMIS30421 0C421-001 AWLYYWWG

A = Assembly Location
WL = Wafer Lot
YY = Year

YY = Year WW = Work Week G = Pb-Free Package

### ORDERING INFORMATION

See detailed ordering and shipping information in the package dimensions section on page 40 of this data sheet.

<sup>\*</sup>For additional information on our Pb-Free strategy and soldering details, please download the ON Semiconductor Soldering and Mounting Techniques Reference Manual, SOLDERRM/D.

#### **BLOCK DIAGRAM**

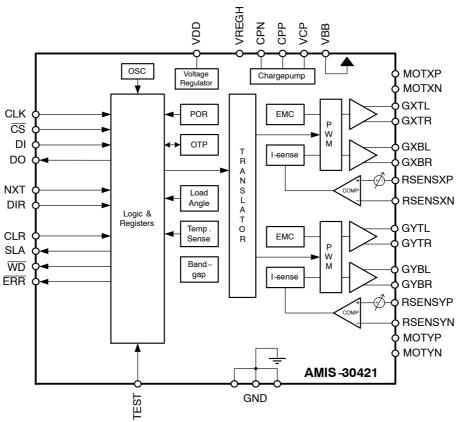


Figure 1. Block Diagram AMIS-30421

### **PIN OUT**

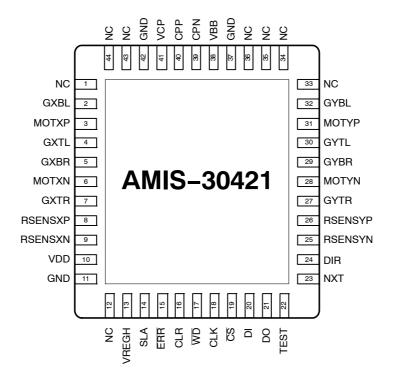


Figure 2. Pin Out AMIS-30421


**Table 1. PIN LIST AND DESCRIPTION** 

Name	Pin	Description	Туре	Equivalent Schematic
GXBL	2	Gate of external NMOS FET of the X bridge bottom left side	Analog Output	
MOTXP	3	Positive end of phase X-coil	Analog I/O	
GXTL	4	Gate of external NMOS FET of the X bridge top left side	Analog Output	
GXBR	5	Gate of external NMOS FET of the X bridge bottom right side	Analog Output	
MOTXN	6	Negative end of phase X-coil	Analog I/O	
GXTR	7	Gate of external NMOS FET of the X bridge top right side	Analog Output	
RSENSXP	8	Resistor sense of the X bridge positive pin	Analog Input	
RSENSXN	9	Resistor sense of the X bridge negative pin	Analog Input	
VDD	10	Low voltage supply output (needs external decoupling capacitor)	Supply	Type 7
GND	11	Ground, heat sink	Supply	
VREGH	13	High voltage supply output	Analog output	
SLA	14	Speed and Load Angle output	Analog output	Type 6
ERRb	15	Error output	Digital Output	Type 2 or 4
CLR	16	Clear input	Digital Input	Type 1
WDb	17	Watchdog and Power On Reset output	Digital Output	Type 2 or 4
CLK	18	SPI Clock input	Digital Input	Type 1
CSb	19	SPI Chip Select input	Digital Input	Type 3
DI	20	SPI Data input	Digital Input	Type 1
DO	21	SPI Data output	Digital Output	Type 2 or 4
TEST	22	Test input. To be tied to ground.	Digital Input	Type 1
NXT	23	Next Microstep input	Digital Input	Type 1
DIR	24	Direction input	Digital Input	Type 1
RSENSYN	25	Resistor sense of the Y bridge negative pin	Analog Input	
RSENSYP	26	Resistor sense of the Y bridge positive pin	Analog Input	
GYTR	27	Gate of external NMOS FET of the Y bridge top right side	Analog Output	
MOTYN	28	Negative end of phase Y-coil	Analog I/O	
GYBR	29	Gate of external NMOS FET of the Y bridge bottom right side	Analog Output	
GYTL	30	Gate of external NMOS FET of the Y bridge top left side	Analog Output	
MOTYP	31	Positive end of phase Y-coil	Analog I/O	
GYBL	32	Gate of external NMOS FET of the Y bridge bottom left side	Analog Output	
GND	37	Ground, heat sink	Supply	
VBB	38	High voltage supply input	Supply	Type 8
CPN	39	Negative connection of charge pump capacitor	Analog I/O	
CPP	40	Positive connection of charge pump capacitor	Analog I/O	
VCP	41	Charge Pump filter capacitor	Analog I/O	
GND	42	Ground, heat sink	Supply	
NC	1, 12, 33, 34, 35, 36, 43, 44	Not connected or connect with ground		


NOTE: Output type of WDb-, ERRb- and DO-pin is selectable through SPI

### **EQUIVALENT SCHEMATICS**


Following figure gives the equivalent schematics of the user relevant inputs and outputs. The diagrams are simplified representations of the circuits used.

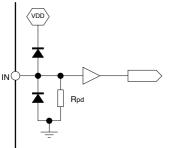


TYPE 1: CLK, DI, NXT, DIR, CLR, TEST Input

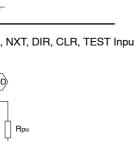


TYPE 3: CSb Input




TYPE 7: VDD Power Supply

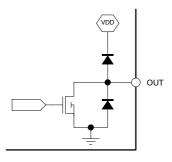


TYPE 2: DO, WDb, ERRb Open Drain Output

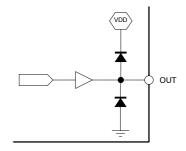

TYPE 4: DO, WDb, ERRb Push Pull Output

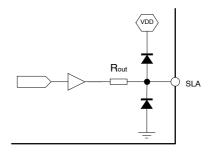

TYPE 6: SLA Analog Output

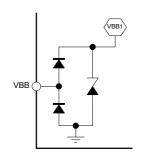

TYPE 8: VBB Power Supply

NOTE: Output type of WDb-, ERRb- and DO-pin is selectable through SPI

Figure 3. In- and Output Equivalent Diagrams

#### **ELECTRICAL SPECIFICATION**

Table 2. ABSOLUTE MAXIMUM RATINGS (Notes 1 and 2)

Symbol	Parameter	Min	Max	Unit
$V_{BB}$	Analog DC supply voltage (Note 3)	-0.3	+40	V
I <sub>load</sub>	Logic supply external load current, Normal Mode	0	-10	mA
	Logic supply external load current, Sleep Mode	0	-1	mA
V <sub>RSENS</sub>	Voltage on pins RSENSXP, RSENSXN, RSENSYP and RSENYN	-2.0	+2.0	V
$V_{LVIO}$	Voltage on digital I/O pins and SLA-pin	-0.3	3.6	V
			V <sub>DD</sub> + 0.3	1
I <sub>SLA</sub>	Load current on SLA-pin	0	-40	μΑ
T <sub>ST</sub>	Storage temperature	-55	+160	°C
TJ	Junction Temperature under bias (Note 4)	-50	+175	°C
$V_{HBM}$	Human Body Model electrostatic discharge immunity (Note 5)	-1.5	+1.5	kV
$V_{HBM}$	Human Body Model electrostatic discharge immunity, high voltage pins (Note 6)	-4	+4	kV
$V_{MM}$	Machine Model electrostatic discharge immunity (Note 7)	-150	+150	V
$V_{CDM}$	Charge Device Model electrostatic discharge immunity (Note 8)	-500	+500	V

Stresses exceeding Maximum Ratings may damage the device. Maximum Ratings are stress ratings only. Functional operation above the Recommended Operating Conditions is not implied. Extended exposure to stresses above the Recommended Operating Conditions may affect device reliability.

- 1. If more than one value is mentioned, the most stringent applies.
- 2. Convention: currents flowing in the circuit are defined as positive.
- 3. +36 V < V<sub>BB</sub> < +40 V limited to 1 day over lifetime
- 4. Circuit functionality not guaranteed.
- 5. According to JEDÉC JESD22-A114C
- 6. High Voltage Pins MOTxx, VBB, GND; According to JEDEC JESD22-A114C
- 7. According to JEDEC EIA-JESD22-A115-A
- 8. According to STM5.3.1-1999

### **RECOMMEND OPERATION CONDITIONS**

Operating ranges define the limits for functional operation and parametric characteristics of the device. Note that the functionality of the chip outside these operating ranges is not guaranteed. Operating outside the recommended operating ranges for extended periods of time may affect device reliability.

**Table 3. OPERATING RANGES** 

Symbol	Parameter	Min	Max	Unit
$V_{BB}$	Analog DC supply	+6	+30	V
$V_{DD}$	Logic Supply Output Voltage (Normal Mode)	+3.0	+3.6	V
$T_J$	Junction temperature (Note 9)	-40	+125	°C

9. High junction temperature can result in reduced lifetime.

### **Table 4. DC PARAMETERS**

The DC parameters are given for  $V_{BB}$  and temperature in their operating ranges unless otherwise specified. Convention: currents flowing in the circuit are defined as positive.

Symbol	Pin(s)	Parameter	Remark/Test Conditions	Min	Тур	Max	Unit
SUPPLY & V	OLTAGE R	EGULATOR					
$V_{BB}$	VBB	Nominal operating supply range		6		30	V
I <sub>BB</sub>		Total internal current consumption	Unloaded outputs, I <sub>INT</sub> included, H-bridge disabled			20	mA
I <sub>SLEEP</sub>		Sleep mode current consumption	Unloaded outputs, CSb = V <sub>DD</sub>			150	μΑ
$V_{DD}$	VDD	Regulated Output Voltage	–10 mA ≤ I <sub>load</sub> ≤ 0 mA	3.0	3.3	3.6	V
V <sub>DD_SLEEP</sub>		Regulated Output Voltage in Sleep	-1 mA ≤ I <sub>load</sub> ≤ 0 mA	2.1	2.95	3.63	V
I <sub>INT</sub>		Internal load current	Unloaded outputs			8	mA
I <sub>LOAD</sub>		External load current				-10	mA
I <sub>DDLIM</sub>		Current limitation	Pin shorted to ground	-20		-80	mA
I <sub>LOAD_PD</sub>		Output current in sleep				-1	mA
$V_{REGH}$	VREGH	High voltage regulator	$V_{BBLV} \le V_{BB} \le 30 \text{ V}$ Based on Figure 9 H-bridge disabled $13.25 \text{ V} \le V_{BBLV} \le 15.75 \text{ V}$	8.0	9.5	11.5	V
			$6 \text{ V} \leq \text{V}_{BB} < \text{V}_{BBLV}$ Based on Figure 9 H-bridge disabled $13.25 \text{ V} \leq \text{V}_{BBLV} \leq 15.75 \text{ V}$			V <sub>BB</sub>	V
POWER ON	RESET (PC	DR)					-
$V_{DDH}$		Internal POR comparator threshold	V <sub>DD</sub> rising, see Figure 4	1.44	1.8	2.53	
$V_{DDL}$	VDD	Internal POR comparator threshold	V <sub>DD</sub> falling, see Figure 4	1.16	1.5	1.93	V
$V_{DDhys}$	VDD	Internal POR comparator hysteresis			0.3		
UNDERVOL	TAGE						
V <sub>BBUH</sub>		V <sub>BB</sub> undervoltage release level	V <sub>BB</sub> rising, see Figure 5	5.5		6.5	
V <sub>BBUL</sub>	VBB	V <sub>BB</sub> undervoltage trigger level	V <sub>BB</sub> falling, see Figure 5	5.3		6.3	V
V <sub>BBUhys</sub>		V <sub>BB</sub> undervoltage hysteresis			0.25		
OVERVOLTA	AGE						
V <sub>BBOH</sub>		V <sub>BB</sub> overvoltage trigger level	V <sub>BB</sub> rising, see Figure 5	30.0		32.0	
$V_{BBOL}$	VBB	V <sub>BB</sub> overvoltage release level	V <sub>BB</sub> falling, see Figure 5	29.0		31	V
V <sub>BBOhys</sub>		V <sub>BB</sub> overvoltage hysteresis			1		
PRE-DRIVE	R						
I <sub>ON</sub>		Gate charge current	Selectable through SPI	-1.25		-33.00	mA
I <sub>ON_tol</sub>	GXTL, GXBL, GYTL, GYBL	Gate charge current tolerance		-45		+45	%
I <sub>OFF</sub>	6,6,6,6,0 6,0,0,0	Gate discharge current	Selectable through SPI	-10.5		-115.5	mA
I <sub>OFF_tol</sub>	GXTR, GXBR, GYTR, GYBR,	Gate discharge current tolerance		-45		+45	%
R <sub>SW</sub>		Switch On-resistance	See also Figure 10	5	10	25	Ω

### **Table 4. DC PARAMETERS**

The DC parameters are given for  $V_{BB}$  and temperature in their operating ranges unless otherwise specified. Convention: currents flowing in the circuit are defined as positive.

Symbol	Pin(s)	Parameter	Remark/Test Conditions	Min	Тур	Max	Unit
PRE-DRIVE	R		•				
V <sub>SENS0</sub>		PWM comparator toggle level 0		78	100	122	mV
V <sub>SENS1</sub>	1	PWM comparator toggle level 1		105.3	135	164.7	mV
V <sub>SENS2</sub>	1	PWM comparator toggle level 2		156	200	244	mV
V <sub>SENS3</sub>		PWM comparator toggle level 3		210.6	270	391.4	mV
V <sub>SENS4</sub>	RSENSxx	PWM comparator toggle level 4		261.3	335	408.7	mV
V <sub>SENS5</sub>	1	PWM comparator toggle level 5		312	400	488	mV
V <sub>SENS6</sub>		PWM comparator toggle level 6		390	500	610	mV
V <sub>SENS7</sub>		PWM comparator toggle level 7		468	600	732	mV
DIGITAL INF	PUTS		•				
V <sub>IL</sub>	OLIK DI	Logic Low Threshold		0		0.3 x V <sub>DD</sub>	V
V <sub>IH</sub>	CLK, DI, CSb,	Logic High Threshold		0.7 x V <sub>DD</sub>		$V_{DD}$	V
R <sub>pd</sub>	NXT, DIR, CLR	Internal Pull Down Resistor	CSb excluded, See also Figure 3	25	50	75	kΩ
R <sub>pu</sub>	CSb	Internal Pull Up Resistor	See also Figure 3	25	50	75	kΩ
DIGITAL OU	TPUTS		<u> </u>				
V <sub>OL</sub>		Logic low output level	Output set to type 4 (see			0.5	
V <sub>OH</sub>	DO, ERRb,	Logic high output level	Figure 3)	V <sub>DD</sub> – 0.5			V
V <sub>OL_OPEN</sub>	WDb	Logic Low level open drain	I <sub>OL</sub> = 8 mA, Output set to type 2 (see Figure 3)			0.5	V
SPEED AND	LOAD ANG	GLE OUTPUT	•	<u>.                                    </u>	<u>.                                    </u>		
V <sub>out</sub>		Output Voltage Range		0.5		V <sub>DD</sub> – 0.5	V
V <sub>off</sub>		Output Offset SLA-pin	Selectable through SPI	0.6		1.2	V
V <sub>off_tol</sub>		Tolerance on SLA output offset		-17		+17	%
G <sub>SLA</sub>	SLA	Gain of SLA-pin = V <sub>BEMF</sub> / V <sub>SLA</sub>	Selectable through SPI	0.0625		1	
G <sub>SLA_tol</sub>		Tolerance on SLA gain		-10		+10	%
R <sub>out</sub>		Output Resistance SLA-pin	See also Figure 3			1	kΩ
I <sub>SLA load</sub>	1	Load current SLA-pin		0		-40	μΑ
THERMAL V	WARNING &	SHUTDOWN	•	<u>.                                    </u>	<u>.                                    </u>		
T <sub>1</sub>		Trigger level thermal range 1	See Figure 22	-5	15	35	°C
T <sub>2</sub>		Trigger level thermal range 2	See Figure 22	55	70	85	°C
T <sub>3</sub>	1	Trigger level thermal range 3	See Figure 22	138	150	162	°C
T <sub>TW</sub>	1	Thermal Warning	See Figure 22	138	150	162	°C
T <sub>TSD</sub>	1	Thermal shutdown	See Figure 22		T <sub>TW</sub> + 20		°C
CHARGE P	JMP		•				•
V <sub>CP</sub> – V <sub>BB</sub>		Chargepump overdrive voltage	Based on Figure 9	3.5	$V_{BB}-2.5$	15.75	V
V <sub>CPP</sub> – V <sub>CPN</sub>	VCP	Chargepump pumping voltage		3.5	V <sub>BB</sub> – 2.5	15.75	V
C <sub>pump</sub>	1	External pump capacitor	See also C <sub>2</sub> Figure 9		220		nF
C <sub>buffer</sub>	CPP CPN	External buffer capacitor	See also C <sub>3</sub> Figure 9		220		nF

### **Table 4. DC PARAMETERS**

The DC parameters are given for  $V_{BB}$  and temperature in their operating ranges unless otherwise specified. Convention: currents flowing in the circuit are defined as positive.

Symbol	Pin(s)	Parameter	Remark/Test Conditions	Min	Тур	Max	Unit
PACKAGE T	HERMAL F	RESISTANCE VALUE					
Dth		Thermal Resistance	Simulated Conform JEDEC JESD-51, (2S2P)		30		K/W
Rth <sub>ja</sub>		Junction-to-Ambient	Simulated Conform JEDEC JESD-51, (1S0P)		60		K/W
Rth <sub>jp</sub>		Thermal Resistance Junction-to-Exposed Pad			0.95		K/W

**Table 5. AC PARAMETER** The AC parameters are given for  $V_{BB}$  and temperature in their operating ranges unless otherwise specified.

Symbol	Pin(s)	Parameter	Remark/Test Conditions	Min	Тур	Max	Unit
INTERNAL (	OSCILLATO	DR .			•		
f <sub>osc</sub>		Frequency of internal oscillator		6.4	8	9.6	MHz
POWER-UP	1						
t <sub>PU</sub>		Power-up time	C <sub>VDD</sub> = 200 nF, See Figure 4			60	μs
t <sub>POR</sub>	POR	Reset duration	See Figure 4	80	100	120	ms
t <sub>RF</sub>	POR	Reset filter time	See Figure 4	1		15	μs
t <sub>DSPI</sub>		SPI Delay	See Figure 4			500	μs
PREDRIVER	1						
f <sub>PWM</sub>		PWM frequency	Frequency depends only on internal oscillator	20	25	30	kHz
t <sub>1</sub>		Bridge MOSFET switch on time t <sub>1</sub>	Selectable through SPI. See Figure 11.	375		1250	ns
t <sub>2</sub>		Bridge MOSFET switch on time t <sub>2</sub>	Selectable through SPI. See Figure 11.	1250		4750	ns
t <sub>off</sub>		Bridge MOSFET switch off time	Selectable through SPI. See Figure 11.	1250		4750	ns
t <sub>switch_tol</sub>		Bridge MOSFET switch on/off toler- ance		-20		+20	%
t <sub>open</sub>		Open circuit time out	Selectable through SPI	0.32		163.84	ms
topen_acc		Open circuit time out accuracy		-20		+20	%
t <sub>nocross</sub>		Non overlap time	Selectable through SPI	0		1	μs
t <sub>nocross_acc</sub>		Non overlap accuracy		-20		+20	%

**Table 5. AC PARAMETER** The AC parameters are given for  $V_{BB}$  and temperature in their operating ranges unless otherwise specified.

Symbol	Pin(s)	Parameter	Remark/Test Conditions	Min	Тур	Max	Unit
DIGITAL INP				<u> </u>	1	<u> </u>	1
t <sub>NXT_HI</sub>		NXT Minimum, high pulse width		625			ns
t <sub>NXT_LO</sub>		NXT Minimum, low pulse width		625			ns
t <sub>DIR_SET</sub>		NXT set up time, following change of DIR or <dirctrl></dirctrl>		1			μS
t <sub>DIR_HOLD</sub>		NXT hold time, before change of DIR or <dirctrl></dirctrl>		1			μs
t <sub>SLP_SET</sub>		<slp> set up time</slp>	See Figure 6	300			μs
t <sub>SLP_HOLD</sub>		<slp> hold time</slp>		1			μs
t <sub>MOTEN_</sub> SET		<moten> set up time</moten>		1			μs
t <sub>MOTEN_HO</sub>		<moten> hold time</moten>		1			μs
t <sub>MSP</sub>		<msp[7:0]> update delay</msp[7:0]>				1	μs
CLEAR FUN	CTION				•		
t <sub>CLR_SET</sub>	61.5	Clear set up time	See Figure 7	40			μs
t <sub>CLR</sub>	CLR	Clear duration time	See Figure 7	20		90	μs
DIGITAL OU	TPUTS				•		
t <sub>H2L</sub>	DO, WDb, ERRb	Output fall-time from V <sub>OH</sub> to V <sub>OL</sub>	Output type 2, capacitive load 400 pF and pull–up resistor of 1.5 $k\Omega$			50	ns
WATCHDOG	ì						1
t <sub>WDPR</sub>		Prohibited watchdog acknowledge time				2.5	ms
t <sub>WDTO</sub>		Watchdog time out interval		32		512	ms
t <sub>WDTO_acc</sub>		Watchdog time out accuracy		-20		+20	%
t <sub>WDRD</sub>		Watchdog Reset Delay				500	ns
SERIAL PER	RIPHERAL I	NTERFACE (SPI)			•		
t <sub>CLK</sub>		SPI Clock period		1			μs
t <sub>CLK_HIGH</sub>	CLK	SPI Clock high time		100			ns
t <sub>CLK_LOW</sub>		SPI Clock low time		100			ns
t <sub>DI_SET</sub>	ī	SPI Data Input set up time	05	50			ns
t <sub>DI_HOLD</sub>	DI	SPI Data Input hold time	See Figure 8	50			ns
t <sub>CS_HIGH</sub>		SPI Chip Select high time		2.5			μs
t <sub>CS_SET</sub>	CSb	SPI Chip Select set up time		100			ns
t <sub>CS_HOLD</sub>		SPI Chip Select hold time		100			ns
SPEED AND	LOAD AN	GLE OUTPUT					
t <sub>SLA_DELAY</sub>	SLA	SLA output update delay	Not-transparent Mode See Figure 20			60	μs
t <sub>MinSLA</sub>		Minimum zero crossing time	Selectable through SPI	40		360	μs
t <sub>MinSLA_Acc</sub>		Minimum zero crossing accuracy		-20		+20	%
CHARGE PL	JMP				_		
f <sub>CP</sub>	CPN CPP	Charge pump frequency		160	200	250	kHz
t <sub>CPU</sub>	MOTxx	Start-up time of charge pump	Spec external components in Table 4		250		μs



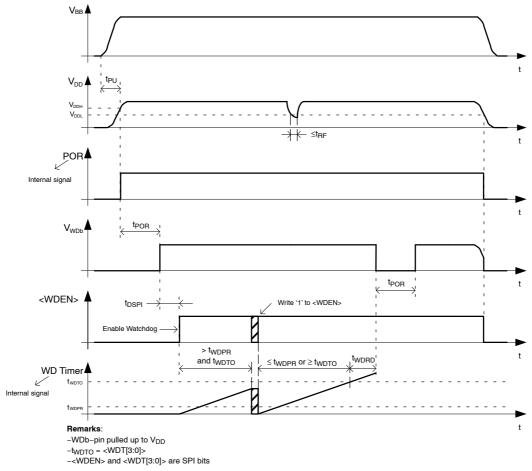


Figure 4. Power-On-Reset Timing Diagram

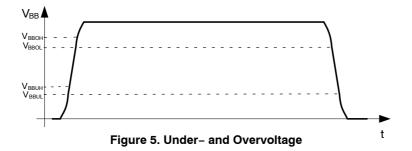

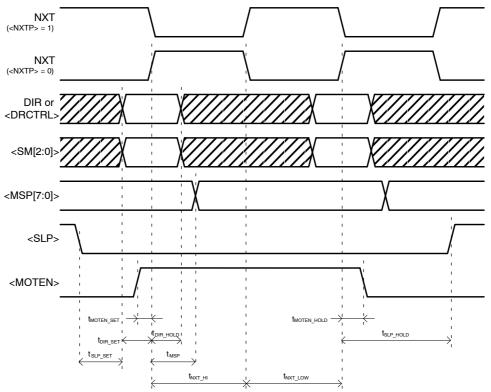

#### Remarks:

- -CIRCTRL>, <SM[2:0]>, <MSP[7:0]>, <SLP>, <MOTEN> and <NXTP> are SPI bits -Timing for SPI bits starts after CS is high
- -T<sub>SLP\_SET</sub> only relates to the digital inputs pins DIR and NXT

Figure 6. Digital Input Timing Diagram

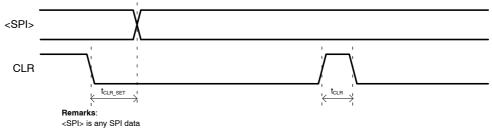


Figure 7. CLR-pin Timing Diagram

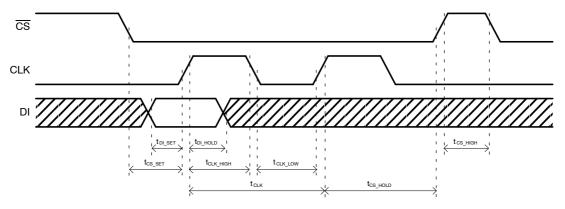


Figure 8. SPI Bus Timing Diagram

### **TYPICAL APPLICATION SCHEMATIC**

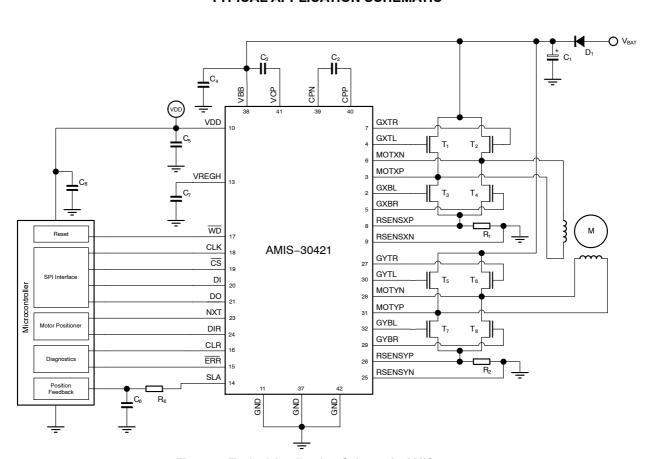


Figure 9. Typical Application Schematic AMIS-30421

Table 6. EXTERNAL COMPONENTS LIST AND DESCRIPTION

Component	Function	Typ Value	Tolerance	Unit
C <sub>1</sub>	V <sub>BB</sub> buffer capacitor (Note 1)	100	±20%	μF
C <sub>2</sub>	Charge-pump pumping capacitor	220	± 20%	nF
C <sub>3</sub>	Charge-pump buffer capacitor	220	±20%	nF
C <sub>4</sub>	V <sub>BB</sub> decoupling capacitor (Note 2)	100	±20%	nF
C <sub>5</sub> , C <sub>8</sub>	V <sub>DD</sub> buffer capacitor	100	±20 %	nF
C <sub>6</sub>	Low pass filter SLA	1	±20%	nF
C <sub>7</sub>	VREGH buffer capacitor	4.7	±20%	uF
R <sub>1</sub> , R <sub>2</sub>	Sense Resistors	>25	±1%	mΩ
R <sub>6</sub>	Low pass filter SLA	5.6	±1%	kΩ
D <sub>1</sub>	Optional reverse protection diode	MBRD1045		
T <sub>1</sub> T <sub>8</sub>	H-Bridge N-MOSFET	NTD4815N or NTD4813N or NTD40N03R or NTD5807N		

10. ESR < 1  $\Omega$ .

11. ESR < 50 m $\Omega$ .

#### **FUNCTIONAL DESCRIPTION**

#### H-Bridge Pre-Drivers

The H-bridge pre-drivers for external N-type MOSFETs are controlled by means of current sources for slope regulation (Figure 10). The current source value can be set through SPI (see p35 and further). During the MOSFET switch-on and switch-off phase this current source will be applied for a certain time (respectively  $t_{on}$  and  $t_{off}$  where  $t_{on}$  is divided in  $t_1$  and  $t_2$ ). After this time ( $t_{on}$  or  $t_{off}$ ) the gate of the MOSFET is pulled high or low by means of a switch (SW<sub>on</sub> or SW<sub>off</sub>). The timings can also be set through SPI (see p37 and further).

To prevent short circuits, an additional time  $t_{nocross}$  can be added between switching off one MOSFET and switching on the other MOSFET of a half H-bridge (SPI bits <NO CROSS[1:0]>).

More information on the current sources and timings can be found in Table 5. A detailed description of the SPI settings for the H-bridge pre-drivers can be found at p31 and further.

Figure 11 gives a detailed view on the different stages during switching of the MOSFET.

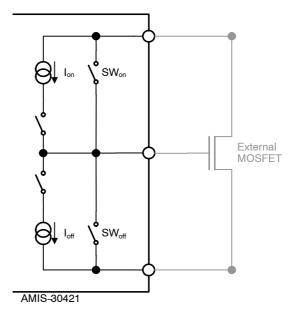


Figure 10. Pre-driver Topology

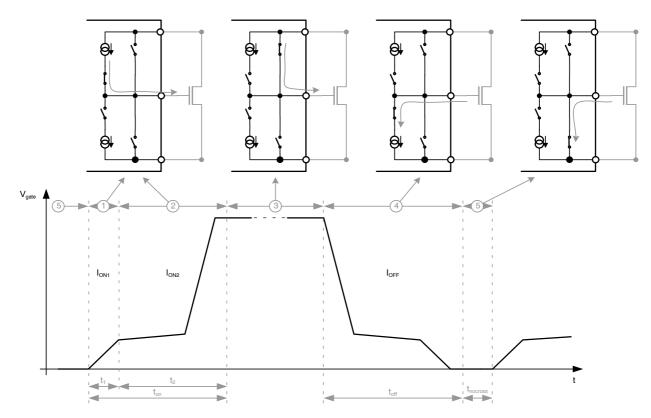


Figure 11. Detailed View on MOSFET Switching

#### **PWM Current Control**

A PWM comparator compares continuously the actual winding current (measured over the external sense resistor) with the requested current and feeds back the information to a digital regulation loop. This loop then generates a PWM signal, which turns on/off the current sources (I<sub>on</sub>, I<sub>off</sub>) and switches (SW<sub>on</sub>, SW<sub>off</sub>). The switching points of the PWM duty-cycle are synchronized to the on-chip PWM clock. The frequency of the PWM controller is fixed and will not vary with changes in the supply voltage. Also variations in motor-speed or load-conditions of the motor have no effect. There are no external components required to adjust the PWM frequency.

For EMC reasons it's possible to add jitter to the PWM by means of the <PWMJ> bit.

#### Step Translator and Step Mode

The step translator provides the control of the motor by means of the stepmode SPI bits <SM[2:0]>, the enable SPI bit <MOTEN>, the direction SPI bit <DIRCTRL> and input

pins DIR and NXT. It is translating consecutive steps in corresponding currents in both motor coils for a given step mode. One out of 8 possible stepping modes can be selected through SPI bits <SM[2:0]>.

After power-up or clear (CLR-pin) the coil current translator is set to position 0. For all stepping modes except full step this means that the coil current is maximum in the Y-coil and zero in the X-coil (see Table 7). If NXT pulses are applied when the DIR-pin is pulled low, SPI bit <DIRCTRL> is zero and SPI bit <MOTEN> is one, the coil current translator will step through Table 7 from top till bottom. If DIR-pin is pulled high or SPI bit <DIRCTRL> is set to '1', the coil current translator will step in opposite direction through the table.

Figures 12 up to 15 gives another view on the different stepping modes. The Y-coil current is plotted on the Y-axes, the X-coil current on the X-axes. Notice that all stepping modes from Table 7 can be plotted on a circle with the exception of half step uncompensated and full step. These are plotted on a square.

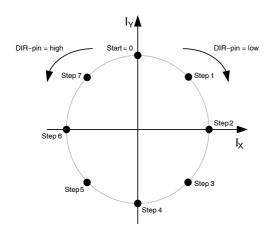


Figure 12. Circular representation Half-step Compensated

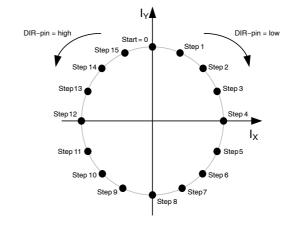


Figure 13. Circular representation 1/4 Microstepping

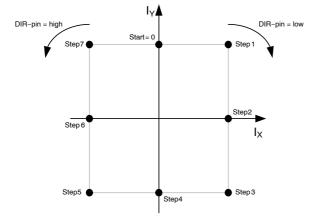


Figure 14. Square Representation Half-step Uncompensated

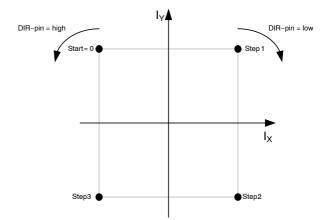


Figure 15. Square Representation Full-step

### Remark:

- Positive coil current flows from MOTXP to MOTXN and MOTYP to MOTYN.
- In above figures SPI bit <DIRCTRL> is set to '0'. When set to '1', rotation will be reversed.

**Table 7. CIRCULAR TRANSLATOR TABLE** 

				Stepmod	e ( <sm[2:0]> )</sm[2:0]>			% of I	max
000	001	010	011	100	101	110	111		
1/64	1/32	1/16	1/8	1/4	1/2 comp	1/2 uncomp	Full	Coil x	Coil y
0	0	0	0	0	0	0	-	0	100
1	-	-	-	-	-	-	-	3	100
2	1	-	-	-	-	-	-	5	100
3 4	2	- 1	-	-	-	-	-	8 10	100 100
5	-	-	_	_	_	_	-	13	100
6	3	-	-	-	-	-	-	14	100
7	-	-	-	-	-	-	-	17	98
8	4	2	1	-	-	1	-	19	98
9	- 5	_	-	_	-	-	-	22 25	98 97
11	-	_	_	_	_		_	27	97
12	6	3	-	-	-	-	-	30	97
13	-	-	-	-	-	-	-	32	95
14	7	-	-	-	-	-	-	35	95
15	-	-	-	-	-	-	-	37	94
16 17	8	4	2	1 -	-	-	-	38 41	94 92
17	9	_	_	_	-	-	-	41	92
19	-	_	_	_	-	-	-	46	90
20	10	5	-	-	-	-	-	48	89
21	-	-	-	-	-	-	_	51	87
22	11	-	-	-	-	-	-	52	87
23 24	-	-	-	-	-	-	-	54	86
25	12	6	3	-	-	-	-	56 59	84 83
26	13	-	-	-	_	_	_	60	81
27	-	-	-	-	-	-	-	62	79
28	14	7	-	-	-	-	-	63	78
29	-	-	-	-	-	-	-	67	76
30	15	-	-	-	-	-	-	68	75
31 32	- 16	- 8	- 4	2	- 1	- 1	- 1	70 71 / 100	73 71 / 100
33	-	-	-	_	-	-	-	73	70
34	17	-	-	-	-	-	-	75	68
35	-	-	-	-	-	-	-	76	67
36	18	9	-	-	-	-	-	78	63
37	-	-	-	-	-	-	-	79	62
38 39	19 -	_	_	_	-	-	-	81 83	60 59
40	20	10	5	-	_	_	_	84	56
41	-	-	-	-	_	_	-	86	54
42	21	_	-	-	-	-	-	87	52
43	-	-	-	-	-	-	-	87	51
44	22	11	-	-	-	-	-	89 90	48 46
45 46	- 23	-	-	-	-	-	-	90	46
47	-	_	-	-	_	_	-	92	41
48	24	12	6	3	_	-	-	94	38
49	-	-	-	-	_	-	-	94	37
50	25	-	-	-	-	-	-	95	35
51	- 26	- 10	-	-	-	-	-	95 97	32
52 53	26 -	13	-	_	-	-	-	97 97	30 27
54	27	_	_	_	_	_	_	97	25
55	-	-	-	-	-	-	-	98	22
56	28	14	7	-	-	-	-	98	19
57	-	-	-	-	-	-	-	98	17
58	29	-	-	-	-	-	-	100	14
59	- 30	- 15	-	-	-	-	-	100	13
60	30	15	-	-	-	-	-	100 100	10 8
60 61	_	_	_						
60 61 62	- 31	-	-	-	-	_	-	100	5

**Table 7. CIRCULAR TRANSLATOR TABLE** 

				Stepmode	e ( <sm[2:0]> )</sm[2:0]>			% of Ir	nax
000	001	010	011	100	101	110	111		
1/64	1/32	1/16	1/8	1/4	1/2 comp	1/2 uncomp	Full	Coil x	Coil y
64	32	16	8	4	2	2	-	100	0
65	-	-	-	-	-	-	-	100	-3
66	33	-	-	-	-	-	-	100	-5
67	-	-	-	-	-	-	-	100	-8
68 69	34	17	-	-	_	-	_	100 100	-10
70	- 35	-	-	-	<u> </u>	-	-	100	-13 -14
71	-	_	_	-		_		98	-17
72	36	18	9	-	_	_	_	98	-19
73	-	-	-	-	_	-	_	98	-22
74	37	-	-	-	_	-	_	97	-25
75	-	-	-	-	-	-	-	97	-27
76	38	19	-	-	-	-	-	97	-30
77	-	-	-	-	-	-	-	95	-32
78	39	-	-	-	-	-	-	95	-35
79	-	-	-	-	-	-	-	94	-37
80	40	20	10	5		-		94	-38
81	- 41	-	-	-	-	-	_	92	-41
82	41	-	-	-		-	-	90 90	-43 -46
83 84	- 42	- 21	-	-	-	-		90 89	-46 -48
84 85	-	-	_	-		-		89 87	-48 -51
86	43	_	-	-		_		87	-52
87	-	-	-	-	_	-	_	86	-54
88	44	22	11	-	_	_	_	84	-56
89	-	-	-	-	-	-	-	83	-59
90	45	-	-	-	_	_	-	81	-60
91	-	-	-	-	-	-	-	79	-62
92	46	23	-	-	-	-	-	78	-63
93	-	-	-	-	-	-	-	76	-67
94	47	-	-	-	-	-	-	75	-68
95	-	-	-	-	-	-	-	73	-70
96	48	24	12	6	3	3	2	71 / 100	-71 / -100
97	-	-	-	-	-	-	-	70	-73
98	49	-	-	-	-	-	_	68	-75
99 100	- 50	- 25	_	-	<u>-</u>	-		67 63	-76 -78
101	-	-	_	-		_		62	-78 -79
102	51	_	_	-	_	_		60	-81
103	-	-	-	-	_	-	_	59	-83
104	52	26	13	-		-	_	56	-84
105	-	-	-	-	-	-	-	54	-86
106	53	-	-	-	_	-	-	52	-87
107	-	-	-	-	-	-	_	51	-87
108	54	27	-	-	-	-	-	48	-89
109	-	-	-	-	-	-	-	46	-90
110	55	-	-	-	-	-	_	43	-90
111	-	-	-	-	-	-	-	41	-92
112	56	28	14	7	_	-	_	38	-94
113	-	-	-	-	-	-	_	37	-94 OF
114	57	-	-	-	-	-	-	35 32	-95 05
115 116	- 58	- 29	-	-		-		32 30	-95 -97
116	-	-	_	-	-	-	-	27	-97 -97
117	59	_	_	_		_		25	-97 -97
119	-	_	_	-		_		22	-98
120	60	30	15	-		_		19	-98
21	-	-	-	-		_		17	-98
122	61	-	-	-	-	-	_	14	-100
123	-	-	-	-	-	-	_	13	-100
124	62	31	-	-	-	-	-	10	-100
127		1	-	_	_	-	_	8	-100
	-	-	_						
125 126	63	-	-	-	_	-	-	5	-100

**Table 7. CIRCULAR TRANSLATOR TABLE** 

				Stepmod	e ( <sm[2:0]> )</sm[2:0]>			% of l	lmax
000	001	010	011	100	101	110	111		
1/64	1/32	1/16	1/8	1/4	1/2 comp	1/2 uncomp	Full	Coil x	Coil y
128	64	32	16	8	4	4	-	0	-100
129	-	-	-	-	_	_	-	-3	-100
130	65	-	-	-	-	-	-	-5	-100
131	-	-	-	-	-	-	-	-8	-100
132	66	33	-	-	-	-	-	-10	-100
133 134	- 67	-	-	-	-	-		-13 -14	-100 -100
135	-	_	_	_	_	_	_	-17	-98
136	68	34	17	-	-	-	-	-19	-98
137	-	-	-	-	-	-	-	-22	-98
138	69	-	-	-	-	-	-	-25	-97
139	-	-	-	-	-	-	-	-27	-97
140	70	35	-	-	-	-	-	-30	-97
141	-	-	-	-	-	-	-	-32	-95
142	71	-	-	-	-	-	-	-35	-95
143 144	- 72	- 36	- 18	9	-	-	-	-37 -38	-94 -94
144	-	-	-	-	-	-		-38 -41	-94 -92
146	73	_	_	_	_	_	_	-43	-92 -90
147	-	-	-	-	-	-	-	-46	-90
148	74	37	-	-	-	-	-	-48	-89
149	-	-	-	-	-	-	-	-51	-87
150	75	-	-	-	-	-	-	-52	-87
151	-	-	-	-	-	-	-	-54	-86
152	76	38	19	-	-	-	-	-56	-84
153	-	-	-	-	-	-	-	-59	-83
154	77	-	-	-	-	-	-	-60	-81
155 156	- 78	39	_	-	-	-	-	-62 -63	-79 -78
157	-	-	_	_		_		-67	-76 -76
158	79	_	_	_	_	_	_	-68	-75
159	-	-	-	-	-	-	-	-70	-73
160	80	40	20	10	5	5	3	-71 / -100	-71 / -100
161	-	-	-	-	-	-	-	-73	-70
162	81	-	-	-	-	-	-	-75	-68
163				-	-	-	-	-76	-67
	-	-	-						
164	82	41	-	-	-	-	-	-78	-63
164 165	82 -	41 -	-	-	-	-	-	-78 -79	-62
164 165 166	82 - 83	41 - -	-	- - -	-	-	-	-78 -79 -81	-62 -60
164 165 166 167	82 - 83 -	41 - -	- - -	- - -	-	- - -	-	-78 -79 -81 -83	-62 -60 -59
164 165 166 167 168	82 - 83 - 84	41 - - - 42	- - - - 21	- - -	- - -	- - -		-78 -79 -81 -83 -84	-62 -60 -59 -56
164 165 166 167 168	82 - 83 -	41 - -	- - -	- - -	-	- - -	-	-78 -79 -81 -83	-62 -60 -59
164 165 166 167 168 169	82 - 83 - 84 -	41 - - - 42 -	- - - - 21	- - - -	- - - -	- - - -	- - -	-78 -79 -81 -83 -84 -86	-62 -60 -59 -56
164 165 166 167 168 169 170	82 - 83 - 84 - 85	41 - - - 42 -	- - - - 21 -	- - - - -	- - - - -	- - - - -	- - - -	-78 -79 -81 -83 -84 -86	-62 -60 -59 -56 -54 -52
164 165 166 167 168 169 170	82 - 83 - 84 - 85	41 - - - 42 - -	- - - 21 - -	- - - - -	- - - - - -	- - - - - -	- - - - -	-78 -79 -81 -83 -84 -86 -87	-62 -60 -59 -56 -54 -52 -51
164 165 166 167 168 169 170 171 172 173	82 - 83 - 84 - 85 - 86 - 87	41 - - - 42 - - - 43	- - - 21 - - -	- - - - - -	- - - - - - -	- - - - - - -	- - - - - -	-78 -79 -81 -83 -84 -86 -87 -87 -89 -90	-62 -60 -59 -56 -54 -52 -51 -48 -46
164 165 166 167 168 169 170 171 172 173 174	82 - 83 - 84 - 85 - 86 - 87	41 - - 42 - - - 43 - -	- - - 21 - - - - -	- - - - - - - - - -	- - - - - - - - - -	- - - - - - - - - - -	- - - - - - - - - -	-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41
164 165 166 167 168 169 170 171 172 173 174 175	82 - 83 - 84 - 85 - 86 - 87 - 88	41 - - 42 - - 43 - - 44	- - - 21 - - - - - - - - - - - - - - - -	- - - - - - - - - - - - 1 11	- - - - - - - - - - - -	- - - - - - - - - - - - -	- - - - - - - - - - -	-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38
164 165 166 167 168 169 170 171 172 173 174 175 176	82 - 83 - 84 - 85 - 86 - 87 - 88	41 - - 42 - - - 43 - - - 44	- - - 21 - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -		-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38
164 165 166 167 168 169 170 171 172 173 174 175 176 177	82 - 83 - 84 - 85 - 86 - 87 - 88 -	41 - - 42 - - 43 - - - 44 -	- - - 21 - - - - - - - - - - - - - - - -	- - - - - - - - - - - - 1 11	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -		-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37
164 165 166 167 168 169 170 171 172 173 174 175 176 177 178	82 - 83 - 84 - 85 - 86 - - 87 - 88 -	41 - - 42 - - 43 - - 44 - -	- - - 21 - - - - - - - 22	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -		-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94 -95 -95	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32
164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179	82 - 83 - 84 - 85 - 86 - - 87 - 88 - 90	41 - - 42 - - - 43 - - - 44 - - - 44 - - - 45	- - - 21 - - - - - - - 22 - -	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -		-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94 -95 -95 -97	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30
164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180	82 - 83 - 84 - 85 - 86 - - 87 - 88 -	41 - - 42 - - 43 - - 44 - -	- - - 21 - - - - - - - 22	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -		-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94 -95 -95	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32
164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180	82 - 83 - 84 - 85 - 86 - 87 - 88 - 90	41 - - 42 - - 43 - - 44 - - 44 - - 45 -	- - - 21 - - - - - - - 22 - - -	- - - - - - - - - - 111 - - - - - - -	- - - - - - - - - - - - - - - - - - -	- - - - - - - - - - - - - - - - - - -		-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94 -95 -95 -97	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27
1164 1165 1166 1167 1168 1169 1170 1171 1172 1173 1174 1175 1177 1178 1180 1181 1182	82 - 83 - 84 - 85 - 86 - 87 - 88 - 90 - 91	41 - - 42 - - 43 - - 44 - - 44 - - - 45 - -	- - - 21 - - - - - - 22 - - - -	- - - - - - - - - 111 - - - - - - - - -	- - - - - - - - - - - - - - - - - - -			-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94 -95 -95 -97 -97	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27
1164 1165 1166 1167 1168 1169 1170 1171 1172 1173 1174 1175 1177 1178 1179 1180 1181 1182 1183	82 - 83 - 84 - 85 - 86 - 87 - 88 - 89 - 90 - 91	41 - - 42 - - 43 - - 44 - - 45 - -		- - - - - - - - - - 111 - - - - - - - -	- - - - - - - - - - - - - - - - - - -			-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94 -95 -95 -97 -97 -97	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22
1164 1165 1166 1167 1168 1169 1170 1171 1172 1174 1175 1176 1177 1178 1180 1181 1182 1184 1185 1186	82 - 83 - 84 - 85 - 86 - 87 - 88 - 89 - 90 - 91 - 92	41 - - 42 - - 43 - - 44 - - 44 - - - 44 - - - 46	- - - 21 - - - - - - - 22 - - - - - - -	- - - - - - - - - - 111 - - - - - - - -	- - - - - - - - - - - - - - - - - - -			-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94 -95 -95 -97 -97 -97 -98 -98 -98	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17 -14
1164 1165 1166 1167 1168 1169 1170 1171 1172 1174 1175 1176 1177 1178 1180 1181 1182 1183 1184 1185 1186	82 - 83 - 84 - 85 - 86 - 87 - 88 - 90 - 91 - 92 - 93	41 - - 42 - - 43 - - - 44 - - - 45 - - 46 - -			- - - - - - - - - - - - - - - - - - -			-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -90 -92 -94 -94 -95 -95 -97 -97 -97 -98 -98 -98 -100 -100	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17 -14 -13
1164 1165 1166 1167 1168 1169 1170 1171 1172 1173 1174 1175 1176 1177 1178 1179 1180 1181 1182 1183 1184 1185 1186	82 - 83 - 84 - 85 - 86 - 87 - 88 - 89 - 90 - 91 - 92 - 93 - 94	41 - - 42 - - 43 - - - 44 - - - 45 - - 46 - - 47						-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -92 -94 -94 -95 -97 -97 -97 -98 -98 -98 -100 -100	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17 -14 -13 -10
164 165	82 - 83 - 84 - 85 - 86 - 87 - 88 - 90 - 91 - 92 - 93	41 - - 42 - - 43 - - - 44 - - - 45 - - 46 - -						-78 -79 -81 -83 -84 -86 -87 -87 -89 -90 -90 -90 -92 -94 -94 -95 -95 -97 -97 -97 -98 -98 -98 -100 -100	-62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17 -14

**Table 7. CIRCULAR TRANSLATOR TABLE** 

Stepmode ( <sm[2:0]> )</sm[2:0]>							% of Imax		
000	001	010	011	100	101	110	111		
1/64	1/32	1/16	1/8	1/4	1/2 comp	1/2 uncomp	Full	Coil x	Coil y
192	96	48	24	12	6	6	-	-100	0
193	-	-	-	-	-	-	-	-100	3
194 195	97	-	-	-	-	-	-	-100 -100	5 8
196	98	49	-	_	_	_	_	-100	10
197	-	-	-	-	-	-	-	-100	13
198	99	-	-	-	-	-	-	-100	14
199 200	100	- 50	- 25	-	-	-	-	-98 -98	17 19
200	-	-	-	-	-	-	-	-98 -98	22
202	101	-	-	-	-	-	-	-97	25
203	-	-	-	-	-	-	-	-97	27
204	102	51	-	-	-	-	-	-97	30
205 206	103	-	-	-	-	_ _	-	-95 -95	32 35
207	-	-	-	-	-	-		-93 -94	37
208	104	52	26	13	-	-	-	-94	38
209	-	-	-	-	-	-	-	-92	41
210 211	105	-	-	-	-	-	-	-90 -90	43 46
211	106	- 53	-	-	-	-	-	-90 -89	46
213	-	-	-	-	-	-	-	-87	51
214	107	-	-	-	-	-	-	-87	52
215	-	-	-	-	-	-	_	-86	54
216 217	108	54 -	27 -	-	-	-	-	-84 -83	56 59
217	109	-	-	-	-	_	-	-63 -81	60
219	-	-	-	-	-	-	-	-79	62
220	110	55	-	-	-	-	-	-78	63
221	-	-	-	-	-	-	-	-76 -75	67 68
222	111	-	_	_	_	_	_		
223	_		<del></del>						
223 224	- 112	- 56	- 28	- 14	7	- 7	- 0	-73 -73 -71 / -100	70 71 / 100
		-		-	_	_	_	-73	70
224 225 226	112 - 113	- 56 - -	28 - -	- 14 - -	- 7 - -	- 7 - -	- 0 - -	-73 -71 / -100 -70 -68	70 71 / 100 73 75
224 225 226 227	112 - 113 -	- 56 - -	28 - - -	- 14 - -	- 7 - -	- 7 - -	- 0 - -	-73 -71 / -100 -70 -68 -67	70 71 / 100 73 75 76
224 225 226 227 228	112 - 113 - 114	- 56 - - - - 57	28 - - - -	- 14 - - -	- 7 - - -	- 7 - - -	- 0 - - -	-73 -71 / -100 -70 -68 -67 -63	70 71 / 100 73 75 76 78
224 225 226 227	112 - 113 -	- 56 - -	28 - - -	- 14 - -	- 7 - -	- 7 - -	- 0 - -	-73 -71 / -100 -70 -68 -67	70 71 / 100 73 75 76
224 225 226 227 228 229 230 231	112 - 113 - 114 - 115	- 56 - - - 57 - -	28 - - - - - - -	- 14 - - - -	- 7 - - - -	- 7 - - - -	- 0 - - - -	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59	70 71 / 100 73 75 76 78 79 81
224 225 226 227 228 229 230 231 232	112 - 113 - 114 - 115 - 116	- 56 - - - - 57 - - - - 58	28 - - - - - - - - 29	- 14 - - - - - -	- 7 - - - - - -	- 7 7	- 0 - - - - - - -	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59	70 71 / 100 73 75 76 78 79 81 83
224 225 226 227 228 229 230 231 232 233	112 - 113 - 114 - 115 - 116	- 56 - - - 57 - - - 58	28 - - - - - - -	- 14 - - - - -	- 7 - - - - - - - -	- 7 7	- 0 - - - - - - - -	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56	70 71 / 100 73 75 76 78 79 81 83 84
224 225 226 227 228 229 230 231 232	112 - 113 - 114 - 115 - 116	- 56 - - - - 57 - - - - 58	28 - - - - - - - 29	- 14 - - - - - - - -	- 7 - - - - - -	- 7 7	- 0 - - - - - - -	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59	70 71 / 100 73 75 76 78 79 81 83
224 225 226 227 228 229 230 231 232 233 234 235	112 - 113 - 114 - 115 - 116 - 117	- 56 - - - 57 - - - 58 -	28 - - - - - - - 29 -	- 14 - - - - - - - - - -	- 7 7	- 7 7	- 0 - - - - - - - - -	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87
224 225 226 227 228 229 230 231 232 233 234 235 236 237	112 - 113 - 114 - 115 - 116 - 117 - 118 - 118 - 110 - 117	- 56 57 57 58 59	28 - - - - - - - - - - - - -	- 14 - - - - - - - - - - - - - - - - - -	- 7 7	- 7 7	- 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87
224 225 226 227 228 229 230 231 232 233 234 235 236 237	1112 - 113 - 114 - 115 - 116 - 117 - 118 - 119	- 56 - - - 57 - - - 58 - - - 59 -	28 - - - - - - - - - - - - -	- 14 - - - - - - - - - - - - - - - - - -	- 7 7	- 7 7	- 0 	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 87 89
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238	1112 - 1113 - 1114 - 115 - 116 - 117 - 118 - 119	- 56 57 57 58 59	28 - - - - - - - - - - - - -	- 14 - - - - - - - - - - - - - - - - - -	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87
224 225 226 227 228 229 230 231 232 233 234 235 236 237	1112 - 113 - 114 - 115 - 116 - 117 - 118 - 119	- 56 57 58 59 	28	- 14 - - - - - - - - - - - - - - - - - -	- 7 7	- 7 7	- 0 	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 99 90 90
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241	1112 - 1113 - 1114 - 115 - 116 - 117 - 118 - 119 - 120	- 56 57 58 59 60	28 - - - - - - - - - - - - -	- 14 - - - - - - - - - - - - - - - - - -	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35	70 71 / 100 73 75 76 78 79 81 83 84 86 87 89 90 90 92 94 94
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242	1112 - 113 - 114 - 115 - 116 - 117 - 118 - 119 - 120 - 121	- 56 57 58 59 60 	28 - - - - - - - - - - - - -	- 14	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 87 89 90 90 92 94 94 94 95
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243	1112 - 113 - 114 - 115 - 116 - 117 - 118 - 119 - 120 - 121	- 56 57 58 58 59 60 61	28 - - - - - - - - - - - - -	- 14	- 7 7	- 7 7	- 0 0	-73 -71/-100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 89 90 90 92 94 94 95 95
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242	1112 - 113 - 114 - 115 - 116 - 117 - 118 - 119 - 120 - 121	- 56 57 58 59 60 	28 - - - - - - - - - - - - -	- 14	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 87 89 90 90 92 94 94 94 95
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244	1112 - 1113 - 114 - 115 - 116 - 117 - 118 - 119 - 120 - 121 -	- 56 57 58 58 60 61	28 - - - - - 29 - - - - - - - - - - - - -	- 14	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 89 90 90 92 94 94 94 95 95 97
224 225 226 227 228 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247	1112 1113 1114 115 1116 117 118 119 120 121 122 123 124	- 56 57 58 59 60 61 62	28	- 14	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19	70 71/100 73 75 76 78 79 81 83 84 86 87 87 89 90 90 90 92 94 94 94 95 95 97 97
224 225 226 227 228 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248	1112 1113 1114 1115 1116 1117 118 120 121 122 123 124	- 56 57 58 58 59 60 61 62	28	- 14	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 89 90 90 92 94 94 95 95 97 97 97 98 98
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250	1112 1113 1114 1115 1116 1117 118 120 121 122 123 124 125	- 56 57 58 58 59 60 61 62 62	28	- 14	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17	70 71/100 73 75 76 78 79 81 83 84 86 87 87 89 90 90 90 92 94 94 95 95 97 97 97 98 98
224 225 226 227 228 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248	1112 1113 1114 1115 1116 1117 118 120 121 122 123 124	- 56 57 58 58 59 60 61 62	28	- 14	- 7 7	- 7 7	- 0 0	-73 -71 / -100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 89 90 90 92 94 94 95 95 97 97 97 98 98
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 249	1112 113 114 115 116 117 118 120 121 122 123 124 125	- 56 57 58 58 59 60 61 61 62 62	28	- 14	- 7 7	- 7 7	- 0 0	-73 -71/-100 -70 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17 -14	70 71/100 73 75 76 78 79 81 83 84 86 87 87 89 90 90 92 94 94 95 95 97 97 97 98 98 98
224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251	1112 1113 1114 115 1116 117 118 120 121 122 123 124 125 126	- 56 57 58 58 60 61 61 62 63	28	- 14	- 7 7	- 7 7	- 0 0	-73 -71/-100 -70 -68 -67 -68 -67 -63 -62 -60 -59 -56 -54 -52 -51 -48 -46 -43 -41 -38 -37 -35 -32 -30 -27 -25 -22 -19 -17 -14 -13 -10	70 71 / 100 73 75 76 78 79 81 83 84 86 87 87 89 90 90 92 94 94 95 95 97 97 97 98 98 98 98

### Remarks:

- Positive coil current conducts from MOTXP to MOTXN or MOTYP to MOTYN.
- For some microstep positions 2 values are given for Coil X and Coil Y. The second value is only valid for <SM[2:0]> = "11x"

#### **Direction**

The direction of rotation can be changed by means of the DIR-pin and the SPI bit <DIRCTRL>. See also Figure 12 up to Figure 15. Setup and hold times need to be respected when changing direction (see Figure 6).

#### **NXT Input**

Every rising or falling edge on the NXT-pin (selectable through SPI bit <NXTP>) will move the coil current one step up or down (dependant on the DIR-pin and <DIRCTRL> bit) in the translator table (see Table 7). The motor current will be updated at the next PWM cycle.

#### **Enable**

The enable SPI bit <MOTEN> is used to enable the PWM regulator and drive coil current through the stepper motor coils. When '1' the motor driver is enabled and coil current will be conducted. If '0' (zero), the H-bridge drivers are disabled.

When the motor driver is enabled, the NXT- and DIR-pin as also the <DIRCTRL> SPI bit can be used to control the movement of the stepper motor. It's not allowed to apply pulses on the NXT-pin when the motor driver is disabled.

Certain errors (see Error Output p24) will automatically disable the motor driver (<MOTEN> = 0). The errors first need to be cleared before one is able to enable the motor driver again.

Setup and hold times need to be respected (see Figure 6).

### **Microstep Position**

To be able to track the position in the current translator table (Table 7), the microstep position SPI byte can be used (<MSP[7:0]>). This byte gives the position within the current translator table in units of 1/64 microsteps. This means that when working in 1/4<sup>th</sup> microstepping the read out microstep positions will be 0, 16, 32, ...

The microstep position can be used to track/verify the real position of the stepper motor and as a reference point for changing the stepping mode (to avoid phase shift (see further)). See also Application Note AND8399 for more information on this (this application note is based on AMIS-305xx but is similar for AMIS-30421).

Keep in mind that <MSP[7:0]> will only be update 1 μs after the NXT pulse was applied.

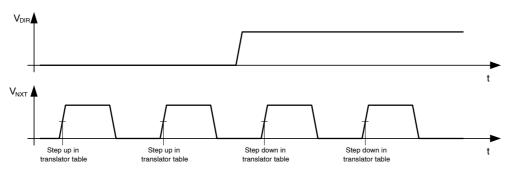


Figure 16. Translator table update

### Microstep

<SM[2:0]> is used to set the microstep stepping mode. Changing to another microstep stepping mode can be done but the setup and hold timings need to be respected (see Figure 6). Additionally, one needs to be careful to not introduce an offset (or phase shift) in the translator table.


Increasing to a higher stepping mode (e.g. from 1/2 to 1/4) can be done at any moment without introducing an offset or phase shift. Decreasing to a lower stepping mode (e.g. from 1/4 to 1/2) can introduce an offset or phase shift if the change to the lower stepping mode is not done at the right moment. One needs to make sure that the translator table position is shared both by the old and new stepping mode setting. Figure 17 gives a good and bad example of reducing the stepping mode.

To avoid the creation of an offset it's advised to only change the stepping mode at a full-step position (<MSP[7:0]> equal to 0, 64, 128 or 192).

Changing the stepping mode to (or from) full step stepping mode also needs to be done with care. Changing to full step mode at the moment the coil current is 100% in one of the coils will result in a movement of the rotor. Reversed, changing from full step to any other stepping mode will also result in a movement of the rotor (see Figure 18, top left).

If the stepping mode is changed to full step when the coil current in both coils is 71%, the coil current in both coils will only be 71% in full step stepping mode instead of 100% (see Figure 18, top right). Changing to full step stepping mode when the coil current in one of the coils is not 100% nor 71% will result in an offset (see Figure 18, bottom). Notice that stepping is now done on a rectangle instead of a square.

There will always be coil current present in both coils when working in full step stepping mode (see Table 7). When zero current is requested in one of the coils, half step stepping mode can be used to mimic full step (see section *Full Step Stepping Mode* in application note AND8399/D for more info).

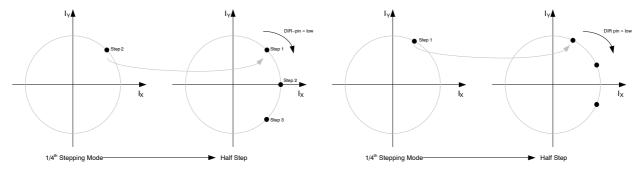

Correct change to a lower stepping mode. Step 2 of 1/4<sup>th</sup> stepping mode is equal to Step 1 of half step stepping mode (see Table 7). No offset or phase shift is created.

Incorrect change to a lower stepping mode. Step 1 of 1/4<sup>th</sup> stepping mode is not shared with a step in half step stepping mode (see Table 7). An offset or phase shift will be created!

Figure 17. NXT-Step Mode Synchronization

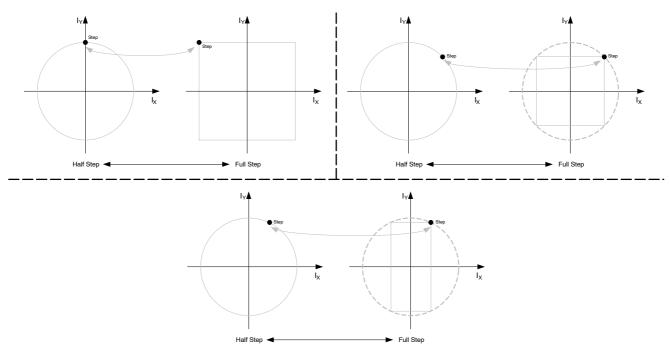


Figure 18. Changing to/from Full step Stepping Mode

#### **Programmable Peak-Current**

The amplitude of the current waveform in the motor coils  $(I_{max})$  can be programmed through SPI bits <CUR[2:0]>. The coil current can be calculated as next:

$$I_{max} = \langle CUR[2:0] \rangle / R_{SENSE}$$

R<sub>SENSE</sub> is resistor R<sub>1</sub> and R<sub>2</sub> as given in Figure 9.

A change in the coil current (<CUR[2:0]>) will be updated at the next PWM cycle.

### Clear

Logic 0 on the CLR-pin allows normal operation of the chip. To clear the complete digital inside AMIS-30421, the CLR-pin needs to be pulled to logic 1 for a minimum time of  $t_{\rm CLR}$  (Table 5). Clearing the motor driver can not be done during Sleep Mode. During a clear the charge pump remains

active. The voltage regulator remains functional during and after the clear action and the WDb-pin is not activated.

After a clear, NXT pulses can be applied after  $t_{CLR\_SET}$  (see Figure 7).

### Speed and Load Angle Output

The SLA-pin provides an output voltage that indicates the level of the BEMF (Back Electro Magnetic Force) voltage of the motor. This BEMF voltage is sampled during every so-called "coil current zero crossing". Per coil, two zero-current positions exist per electrical period, yielding in a total of four zero-current observation points per electrical period.

Because of the relatively high recirculation currents in the coil during current decay, the coil voltage  $V_{COIL}$  shows a

transient behavior. This transient behavior (which is not the BEMF) can be made visible or invisible on the SLA-pin by means of SPI bit <SLAT>. When set to transparent (<SLAT> = '1'), the coil voltage is sampled every PWM cycle and updated on the SLA-pin (see Figure 19). When set to not-transparent (<SLAT> = '0'), only the last sample (taken right before leaving the "coil current zero crossing") will be copied to the SLA-pin (see Figure 20).

When working in not-transparent mode ( $\langle SLAT \rangle = '0' \rangle$ ) keep in mind that there is a delay between applying the NXT pulse (to leave the "coil current zero crossing") and the updated voltage on the SLA-pin (see  $t_{SLA\_DELAY}$  in Figure 20 and Table 5).

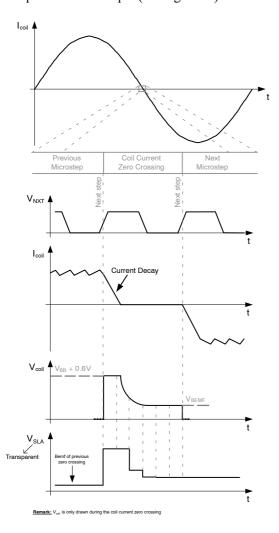


Figure 19. Principle of BEMF Measurement in Transparent Mode

The relationship between the voltage measured on the SLA-pin and the coil voltage is:

 $V_{SLA} = 0.6 + (0.6 \text{ x} < SLA\_OFFS>) + (V_{coil} \text{ x} < SLAG>)$  SPI bit  $< SLA\_OFFS>$  can be used to add an additional offset of 0.6 V. Five different SLA gain values can be set by means of SPI bits < SLAG[2:0]>.

AMIS-30421 has the ability to stretch the "coil current zero crossing". If NXT pulses are applied too fast it's possible that the "coil current zero crossing" is too short making it impossible to measure the real BEMF (see

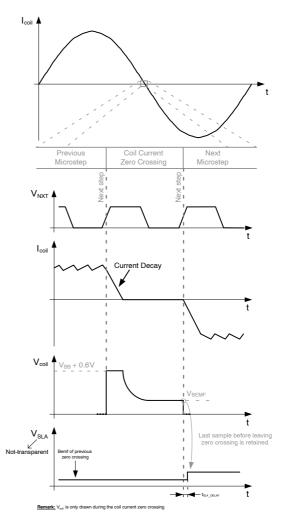


Figure 20. Principle of BEMF Measurement in Not-Transparent Mode

Figure 21). By using SPI bits <MIN\_SLA\_TIME[1:0]> one can stretch the "coil current zero crossing" without changing the speed of the motor (see Figure 21). AMIS-30421 will ignore but keep track of the NXT pulses applied during the "stretched coil current zero crossing" and compensate the ignored pulses when leaving the "coil current zero crossing".

More information on using the SLA-pin can be found in application note AND8399. Although this application note refers to AMIS-305xx, it is also valid for AMIS-30421.

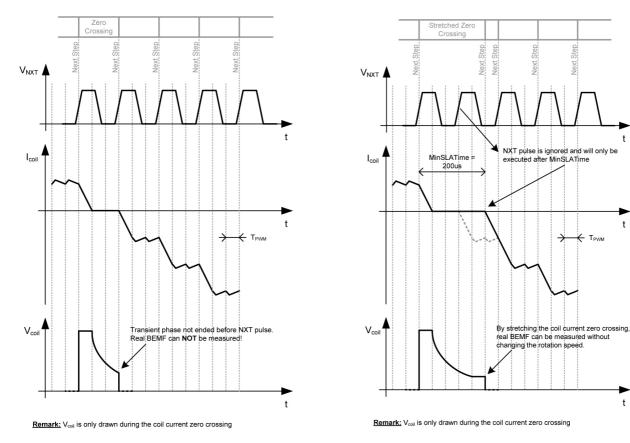


Figure 21. BEMF sampling without (left) and with (right) zero crossing stretching

#### Sleep Mode

AMIS-30421 can be placed in Sleep Mode by means of SPI bit <SLP>. This mode allows reduction of current-consumption when the motor is not in operation. The effect of sleep mode is as follows:

- The drivers are put in HiZ
- All analog circuits are disabled and in low-power mode
- All SPI registers maintain their logic content
- SPI communication is still possible (slightly current increase during SPI communication).
- Status Registers can not be cleared by reading out
- NXT and DIR inputs are forbidden
- Oscillator and digital clocks are silent
- Motor driver can not be cleared by means of the CLR-pin

The voltage regulator remains active but with reduced current-output capability ( $I_{LOAD\ PD}$ ).

When Sleep Mode is left a start—up time is needed for the charge pump to stabilize. After this time (t<sub>SLP\_SET</sub>) NXT commands can be issued (see also Figure 6).

Enabling the motor when the charge pump is not stable can result in overcurrent errors (see section *Over-Current Detection*). Because of this it's advised to keep the motor disabled during the stabilization time (t<sub>SLP</sub> <sub>SET</sub>).

The IO-pins of AMIS-30421 have internal pull-down or pull-up resistors (see Figure 3). Keep this in mind when entering Sleep Mode.

In Sleep Mode  $V_{DD}$  can drop to 2.1 V minimum (see  $V_{DD\_SLEEP}$  in Table 4). Keep in mind that in this case it's not allowed to pull the input pins above 2.1 V!

### WARNING, ERROR DETECTION AND DIAGNOSTICS FEEDBACK

#### **Thermal Warning and Shutdown**

AMIS–30421 has 4 thermal ranges which can be read out through SPI bits <TR[1:0]> and <TSD>. Thermal Range 1 goes from –40°C up to  $T_1$ . Thermal Range 2 goes from  $T_1$  to  $T_2$  and Thermal Range 3 goes from  $T_2$  up to  $T_3$  ( $T_1$ ,  $T_2$  and  $T_3$  can be found in Table 4). Once above  $T_3$  the 4<sup>th</sup> thermal level is reached which is the thermal warning range.

When junction temperature rises above  $T_{TW}$  (=  $T_3$ ), the ERRb-pin will be activated. If junction temperature increases above thermal shutdown level ( $T_{TSD}$ ), then the circuit goes in Thermal Shutdown Mode and all driver transistors are disabled (high impedance). The condition to get out of the Thermal Shutdown Mode is to be at a temperature lower than  $T_{TW}$  and by clearing the <TSD> SPI bit.

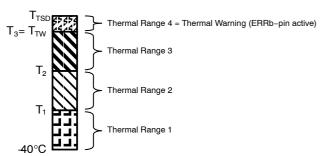


Figure 22. Thermal Ranges

#### **Over-Current Detection**

The over-current detection circuit monitors the load current in each activated output stage. If the load current exceeds the over-current detection threshold, the ERRb-pin will be activated and the drivers are switched off (motor driver disabled) to reduce the power dissipation and to protect the H-bridge. Each driver has an individual detection bit (see Status Register 1 and 2). The error condition is latched and the microcontroller needs to read out the error to reset the error and to be able to re-enable the motor driver again.

Note: Successive resetting the motor driver in case of a short circuit condition may damage the drivers.

### **Open Coil/Current Not Reached Detection**

Open coil detection is based on the observation of 100% duty cycle of the PWM regulator. If in a coil 100% duty cycle is detected for a certain time, an open coil will be latched (see Status Register 1 and 2) and the ERRb-pin will be activated (drivers are disabled). The time this 100% duty cycle needs to be present is adjustable with SPI bits <OPEN\_COIL[1:0]>. A short time will result in fast detection of an open-coil but could also trigger unwanted open-coil errors. Increase the timing if this is the case.

When the resistance of a motor coil is very large and the supply voltage is low, it can happen that the motor driver is not able to deliver the requested current to the motor. Under these conditions the PWM controller duty cycle will be 100% and the ERRb-pin will flag this situation. This feature can be used to test if the operating conditions (supply voltage, motor coil resistance) still allow reaching the requested coil-current or else the coil current should be reduced.

Note: A short circuit could trigger an open coil.

#### Charge Pump Failure

The charge pump is an important circuit that guarantees low  $R_{DS(on)}$  for all external MOSFET's, especially for low supply voltages. If supply voltage is too low or external components are not properly connected to guarantee a low  $R_{DS(on)}$  of the drivers, a charge pump failure is latched (<CPFAIL>), the ERRb-pin is activated and the driver is disabled (<MOTEN> = '0'). One needs to read Status Register 1 to clear the charge pump failure.

After power on reset (POR) the charge pump voltage will need some time to exceed the required threshold. During that time the ERRb-pin will be active but not latched for 250us. If the slope of the power supply  $V_{BB}$  is slow during power up (charge pump not started after 250  $\mu$ s), a charge pump failure will be latched and the ERRb-pin is activated (see also Figure 23).

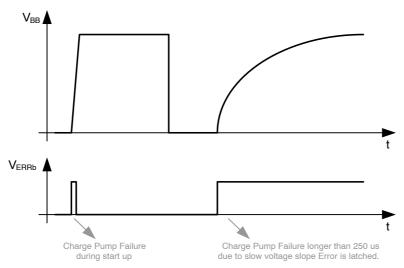


Figure 23. Charge Pump Failure

### Watchdog

When  $V_{BB}$  is applied, the WDb-pin is kept low for  $t_{por}$  (Table 5). This can for instance be used to reset an external microcontroller at power up.

The WDb-pin also has a second function, a Watchdog function. When the watchdog is enabled (<WDEN> = '1'), a timer will start counting up. When the counter reaches a certain value (<WDT[3:0]>), the <WD> SPI bit will be set and the WDb-pin will be pulled low for a time equal to  $t_{POR}$  to reset the external microcontroller. To avoid that the microcontroller gets reset, the microcontroller needs to re-enable the watchdog before the count value is reached (= write '1' to <WDEN> before <WDT[3:0]> is reached). This functionality can be used to reset a "stuck" microcontroller.

The SPI bit <WD> can be used to detect a cold or warm boot. When powering the application (cold boot), <WD> will be zero. If the microcontroller has been reset by the WDb-pin (warm boot), <WD> bit will be '1'. The microcontroller can use this information to detect a cold or warm boot.

It's forbidden to re-enable the watchdog too fast (minimum time between re-enabling must be above two two (see Figure 4)). One may also not enable the watchdog too fast after power up (see to pay). Figure 4).

A small analogue filter avoids resetting due to spikes or noise on the VDD supply  $(t_{rf})$ .

During and after power up the WDb-pin is an open drain output. One can change this to a push-pull output by using SPI bit <IO OT>.

### **Error Output**

The error output (ERRb-pin) will be activated if an error is reported. Next errors will be reported:

- Thermal Warning
- Thermal Shutdown
- Overcurrent
- Open Coil
- Charge Pump Failure
- All errors except a Thermal Warning will disable the H-bridge drivers to protect the motor driver (<MOTEN> = '0'). To reset the error one needs to read out the error. Only when all errors are reset it will be possible to re-enable the motor driver (<MOTEN> = '1').

Keep in mind that during power up a charge pump failure will be reported during the first 250us but will not be latched (see also *Charge Pump Failure*).

During and after power up the ERRb-pin is an open drain output. One can change this to a push-pull output with SPI bit <IO OT>.

#### POWER SUPPLY AND THERMAL CALCULATION

### **Logic Supply Regulator**

AMIS-30421 has an on-chip 3.3V low-drop regulator to supply the digital part of the chip itself, some low-voltage analog blocks and external circuitry. See Table 4 for the limitations.

#### Over- and Undervoltage

AMIS-30421 has undervoltage detection. If  $V_{BB}$  drops below  $V_{BBUL},$  the drivers are disabled. To be able to enable the drivers again the  $V_{BB}$  voltage needs to rise above  $V_{BBUH}.$ 

Overvoltage detection is also present. If the voltage rises above  $V_{BBOH}$  the drivers are disabled. The voltage needs to drop below  $V_{BBOL}$  to be able to enable the driver again. See also Figure 5.

#### Start-Up Behavior

Figure 4 gives the start–up of AMIS–30421. After  $V_{BB}$  is applied and after a certain power up time ( $t_{PU}$ ), the internal voltage regulator  $V_{DD}$  will start–up. When  $V_{DD}$  gets above  $V_{DDH}$ , the internal POR will be released and the digital will start–up. The WDb–pin will be kept low for an additional 100ms ( $t_{POR}$ ). After the WDb–pin is deactivated and after a time  $t_{DSPI}$ , SPI communication can be initiated.

#### **Junction Temperature Calculation**

To calculate the junction temperature of AMIS-30421 the thermal resistance junction-to-ambient must be known. When only a PCB heat sink is used, a typical value is 30°C/W (see Table 4).

There are three modes the junction temperature can be calculated for.

- In Sleep Mode (<SLP> = '1') the V<sub>BAT</sub> consumption is maximum 150 μA making T<sub>i</sub> = T<sub>amb</sub>.
- In Normal Mode when the driver is disabled (<MOTEN> = '0'), the V<sub>BAT</sub> consumption is maximum 20 mA (no external load on VDD-pin). The junction temperature can be calculated as next:

$$T_J = T_A + (V_{BAT} \times I_{BAT} \times Rth_{JA})$$

For an 18 V application operating at an ambient temperature of 125°C this would give:

$$T_J = 125^{\circ}C + (18 V \times 20 \text{ mA} \times 30^{\circ}C/W)$$

$$T_{.1} = 135.8^{\circ} C$$

In Normal Mode with the driver enabled (<MOTEN> = '1') the gate charge current needs to be included in the calculations.

$$I_{BAT} = 20 \text{ mA} + (6 \times V_{REGH} \times C_{ISS} \times f_{PWM})$$

For an 18 V application driving external MOSFET's with an input capacitance of 1 nF this would result in:

$$I_{BAT} = 20 \text{ mA} + (6 \times 12.8 \text{ V} \times 1 \text{ nF} \times 30 \text{ kHz})$$

$$I_{B\Delta T} = 22.3 \text{ mA}$$

Operating at 125°C ambient temperature this result in a junction temperature of:

$$T_{J} = 125^{\circ} C + (18 V \times 22.3 \text{ mA} \times 30^{\circ} C/W)$$

$$T_1 = 137^{\circ} C$$

#### **SPI INTERFACE**

The serial peripheral interface (SPI) allows an external microcontroller (Master) to communicate with AMIS-30421. The implemented SPI block is designed to interface directly with numerous microcontrollers from several manufacturers. AMIS-30421 acts always as a Slave and can't initiate any transmission. The operation of the device is configured and controlled by means of SPI registers which are observable for read and/or write from the Master.

#### **SPI Transfer Format and Pin Signals**

During a SPI transfer, data is simultaneously transmitted (shifted out serially) and received (shifted in serially). A serial clock line (CLK) synchronizes shifting and sampling of the information on the two serial data lines (DO and DI).

DO signal is the output from the Slave (AMIS-30421), and DI signal is the output from the Master. A chip select line (CSb) allows individual selection of a Slave SPI device in a multiple-slave system. The CSb line is active low. If AMIS-30421 is not selected, DO is in HiZ and does not interfere with SPI bus activity. The output type of DO can be set in SPI (<IO\_OT>). Since AMIS-30421 operates as a Slave in MODE 0 (CPOL = 0; CPHA = 0) it always clocks data out on the falling edge and samples data in on rising edge of clock. The Master SPI port must be configured in MODE 0 too, to match this operation.

The diagram below is both a Master and a Slave timing diagram since CLK, DO and DI pins are directly connected between the Master and the Slave.

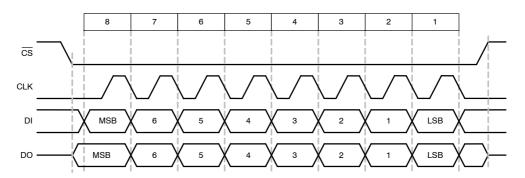


Figure 24. Timing Diagram of a SPI Transfer

#### **Transfer Packet**

Serial data transfer is assumed to follow MSB first rule. The transfer packet contains one or more bytes.

Byte 1 contains the Command and the SPI Register Address and indicates to AMIS-30421 the chosen type of operation and addressed register. Byte 2 contains data, or sent from the Master in a WRITE operation, or received from AMIS-30421 in a READ operation.

Two command types can be distinguished in the communication between master and AMIS-30421:

- CMD2 = '0': READ from SPI Register with address ADDR[4:0]
- CMD2 = '1': WRITE to SPI Register with address ADDR[4:0]




Figure 25. SPI Transfer Packet

#### **READ Operation**

If the Master wants to read data from a Status or Control Register, it initiates the communication by sending a READ command. This READ command contains the address of the SPI register to be read out. At the falling edge of the eight clock pulse the data—out shift register is updated with the content of the corresponding internal SPI register. In the next 8—bit clock pulse train this data is shifted out via DO pin. At

the same time the data shifted in from DI (Master) should be interpreted as the following successive command or dummy data.

Status Register 0, 1 and 2 (see SPI Registers) contain 7 data bits and a parity check bit. The most significant bit (D7) represents a parity of D[6:0]. If the number of logical ones in D[6:0] is odd, the parity bit D7 equals '1'. If the number of logical ones in D[6:0] is even then the parity bit D7 equals

'0'. This simple mechanism protects against noise and increases the consistency of the transmitted data. If a parity check error occurs it is recommended to initiate an additional READ command to obtain the status again.

The CSb-pin is active low and may remain low between successive READ commands as illustrated in Figure 28. There is one exception. In case an error condition occurs the root cause of the problem can be determined by reading out the Status Registers. However, if the error occurs at the moment CSb is low, one first needs to pull CSb high to update the Status Registers properly. Only then the Status Registers can be read out to determine the error. For this reason it is also recommended to keep CSb high when the SPI bus is idle.

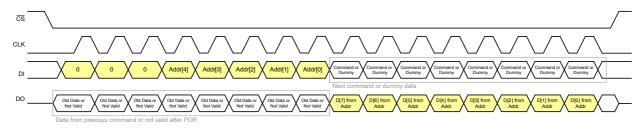


Figure 26. Single READ Operation Where Data from SPI Register is Read by the Master

#### **WRITE Operation**

If the Master wants to write data to a Control Register it initiates the communication by sending a WRITE command. This contains the address of the SPI register to write to. The command is followed with a data byte. This incoming data will be stored in the corresponding Control Register after CSb goes from low to high. It is important that the writing action to the Control Register is exactly 16 bits long and that CSb goes high after these 16 bits. If more or

less bits are transmitted the complete transfer packet is ignored.

A WRITE command executed for a read-only register (e.g. Status Registers) will not affect the addressed register and the device operation.

AMIS-30421 responds on every incoming byte by shifting out via DO the data stored in the last received address. Because after a power-on-reset the initial address is unknown the data shifted out via DO is not valid.

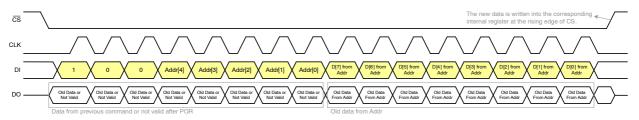


Figure 27. Single WRITE Operation Where Data from the Master is Written in SPI Register

#### **Examples of READ and WRITE Operations**

In the following examples successive READ and/or WRITE operations are combined. In Figure 28 the Master first reads the status from Register at Addr1 and at Addr2

followed by writing a control byte in Control Register at Addr3. Note that during the WRITE command the old data of the pointed register is returned at the moment the new data is shifted in.

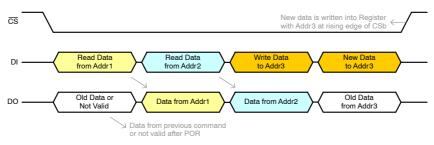


Figure 28. 2 Successive READ Commands Followed by a WRITE Command

After a WRITE operation the Master could initiate a READ command in order to verify the data correctly written as illustrated in Figure 29. During reception of the READ

command the old data is returned for a second time. Only after receiving the READ command the new data is transmitted. This rule also applies when the master device

wants to initiate an SPI transfer to read the Status Registers. Because the internal system clock updates the Status Registers only when CSb line is high, the first read out byte might represent old status information (Figure 30).

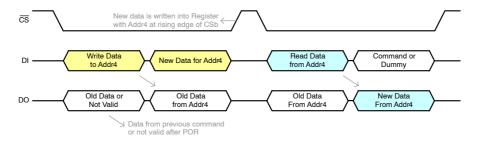


Figure 29. WRITE Operation Followed by a READ operation to verify

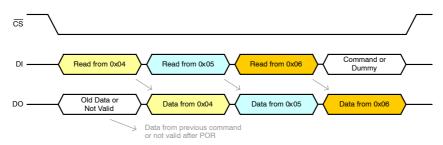


Figure 30. 3 READ Operations in a Row

### **Bad Examples of READ and WRITE Operations**

The following example demonstrates a bad WRITE operation. After a WRITE operation a read operation is done before CSb is made high. The data will not be written in the Register. Figure 32 demonstrates how it should be done (see also Figure 29).

The second example (Figure 33) demonstrates an incorrect way of reading errors. After a WRITE operation the ERRb-pin toggles indication an error. Without toggling CSb the 3 Status Registers are read out to determine the error. Because CSb was not high after the error was detected, the Status Registers will not be updated and the error can not

be determined. A second problem with Figure 33 is that the data written to Addr9 will not be stored because CSb was not toggled after the write operation.

Figure 34 gives the correct way of reading out errors. When the error is detected (toggling of ERRb-pin), CSb is made high to make sure the Status Registers are updated. Then the Status Registers are read out. Notice that ERRb toggles after Status Register 1 is read out (Addr 0x05). This indicates that the error was an overcurrent in the X-coil, a charge pump failure or an open X-coil. Also notice that because CSb is made high after the write operation, the write operation will now be done correctly.

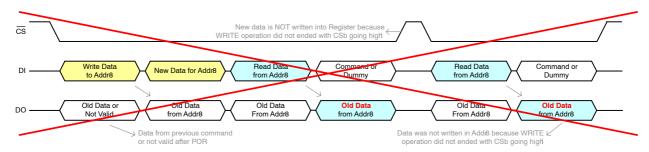


Figure 31. Bad Example of Write Operation

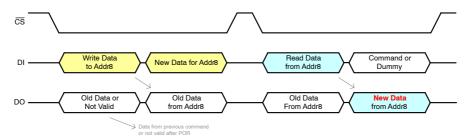


Figure 32. Good Write Operation

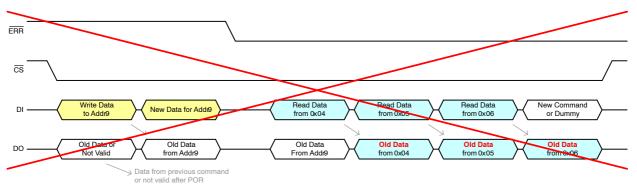


Figure 33. Bad Example of Error Read Out

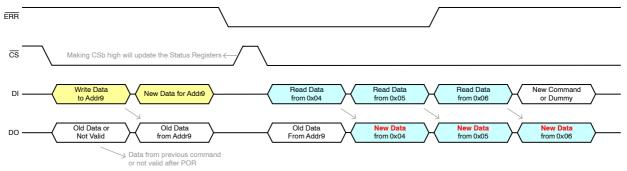


Figure 34. Correct Read Out of Error

### **SPI Register Description**

Below table gives an overview of all SPI Registers that can be used.

**Table 8. SPI REGISTER OVERVIEW** 

SPI Register	Address	Access	Abbreviation
Watchdog Register	0x00	R/W	WR
Control Register 0	0x01	R/W	CR0
Control Register 1	0x02	R/W	CR1
Control Register 2	0x03	R/W	CR2
Status Register 0	0x04	R	SR0
Status Register 1	0x05	R	SR1
Status Register 2	0x06	R	SR2
Status Register 3	0x07	R	SR3
Predriver Register 0	0x09	R/W	PDRV0

**Table 8. SPI REGISTER OVERVIEW** 

SPI Register	Address	Access	Abbreviation
Predriver Register 1	0x0A	R/W	PDRV1
Predriver Register 2	0x0B	R/W	PDRV2
Predriver Register 3	0x0C	R/W	PDRV3
Predriver Register 4	0x0D	R/W	PDRV4
Predriver Register 5	0x0E	R/W	PDRV5
Predriver Register 6	0x0F	R/W	PDRV6
Predriver Register 7	0x10	R/W	PDRV7

Where: R/W = read and write access, R = read access only

### Watchdog Register (WR)

The Watchdog Register is located at address 0x00 and can be used to enable the watchdog and set the watchdog time-out. It can also be used to set the short circuit and open coil detection time-out.

**Table 9. WATCHDOG REGISTER** 

Watchdog Register (WR)									
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0x00	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	Reset	0	0	0	0	0	1	0	0
	Data	WDEN		WDT[3:0]			OPEN_COIL[1:0]		-

**Table 10. WATCHDOG REGISTER PARAMETERS** 

Parameter	Value	Value	Description	Info			
WDEN	0	Disable	Enables the watchdog	p24			
VVDEN	1	Enable	Enables the watchdog	μ24			
	0000	32 ms					
	0001	64 ms					
	0010	96 ms					
	0011	128 ms					
	0100	160 ms					
	0101	192 ms					
	0110	224 ms					
WDT[0.0]	0111	256 ms	Defines the watchdog time-out period. The watchdog needs				
WDT[3:0]	1000	288 ms	to be re-enabled (WDEN) within this time or WDb-pin is activated for tpOR.				
	1001	320 ms	1.511				
	1010	352 ms					
	1011	384 ms					
	1100	416 ms					
	1101	448 ms					
	1110	480 ms					
	1111	512 ms					
	00	2.56 ms	Defines the open coil detection time-out. If an open coil is				
ODENI COILITIO	01	0.32 ms	detected for a time longer than OpenTimeOut[1:0], an open	p23			
OPEN_COIL[1:0]	10	20.48 ms	coil (OPEN_X and/or OPEN_Y) will be reported.	μzs			
	11	163.84 ms	Note: Short circuit could trigger open coil detection.				

Remark: Bit 0 of Watchdog Register should always be '0' (zero)!

### Control Register 0 (CR0)

Control Register 0 is located at address 0x01 and is used to set the maximum coil current and stepping mode. It's also used to set the "coil current zero crossing" duration.

**Table 11. CONTROL REGISTER 0** 

Control Register 0 (CR0)										
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	
0x01	Reset	0	0	0	0	0	0	0	0	
	Data		SM[2:0]			TIME[1:0]		CUR[2:0]		

**Table 12. CONTROL REGISTER 0 PARAMETERS** 

Parameter	Value	Value	Description	Info	
	000	64 <sup>th</sup>			
	001	32 <sup>nd</sup>			
	010	16 <sup>th</sup>			
[0.0]M2	011	8 <sup>th</sup>	Defines the 8 stepping modes for the PWM regulator.	p19	
SM[2:0]	100	4 <sup>th</sup>	Defines the 8 stepping modes for the PWM regulator.	ртө	
	101	Half step compensated			
	110	Half step uncompensated			
	111	Full Step			
	00	40 μs			
MINI OLA TIME(1:0)	01	120 μs	Defines the minimum "coil current zero crossing" duration.  Remark: when NXT frequency gets above PWM frequency		
MIN_SLA_TIME[1:0]	10	200 μs	(f <sub>PWM</sub> ), MIN_SLA_TIME could be 40us longer.		
	11	360 μs			
	000	100 mV			
	001	135 mV			
	010	200 mV			
CUR[2:0]	011	270 mV	Defines the maximum voltage over the coil current sense resistor which defines the maximum coil current.	p20	
CON[2.0]	100	335 mV	The maximum coil current is calculated as next: $I_{coil} = CUR[2:0] / R_{sense}$	μΖυ	
	101	400 mV	100   - 001 1[2.0] / Fisense		
	110	500 mV			
	111	600 mV			

### Control Register 1 (CR1)

Control Register 1 is located at address 0x02 and can used to set the direction, NXT-pin polarity, output configuration of WDb-, ERRb- and DO-pin and to enable PWM jitter. It can also be used to set an additional delay between switching off and on MOSFET's of one half H-bridge (to prevent a short circuit).

**Table 13. CONTROL REGISTER 1** 

	Control Register 1 (CR1)										
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W		
0x02	Reset	0	0	0	1	0	0	0	1		
	Data	DIRCTRL	NXTP	_	IO_OT	-	PWMJ	NO_CRO	DSS[1:0]		

**Table 14. CONTROL REGISTER 1 PARAMETERS** 

Parameter	Value	Value	Description	Info
DIRCTRL	0	CW	Defines the direction of rotation.  Remark: CW and CCW is relative. Direction of rotation will	p19
DINGTHE	1	CCW	be defined by the status of the DIR-pin and connection of the stepper motor!	ртя
NXTP	0 Positive Edge		210	
NATE	1	Negative Edge	Defines the active edge on the NXT-pin.	p19
10.07	0	Push Pull	Defines the cutout time of WDb. EDDb and DO nin	p24
IO_OT	1	Open Drain	<ul> <li>Defines the output type of WDb-, ERRb- and DO-pin</li> </ul>	
PWMJ	0	Disabled	Enghles or dischles DMM iitter	215
PVVIVIJ	1	Enabled	Enables or disables PWM jitter	p15
	00	0 ns		
NO ODOGGIAGI	01	250 ns	Defines the time between switching off one MOSFET and switching on the other MOSFET of the same half H-bridge	-10
NO_CROSS[1:0]	10	500 ns	(= t <sub>nocross</sub> ).	p13
	11	1000 ns		

Remark: Bit 3 and bit 5 of Control Register 1 should always be '0' (zero)!

### Control Register 2 (CR2)

Control Register 2 is located at address 0x03 and can be used to enable the motor driver and to put the motor driver in sleep mode. It also has some parameters that can be used to set the SLA.

**Table 15. CONTROL REGISTER 2** 

	Control Register 2 (CR2)										
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W		
0x03	Reset	0	0	0	0	0	0	0	0		
	Data	MOTEN	SLP	-	SLAT		SLAG[2:0]		SLA_OFFS		

**Table 16. CONTROL REGISTER 2 PARAMETERS** 

Parameter	Value	Value	Description	Info
MOTEN	0	Disabled	Enables the PWM regulator.	-10
MOTEN	1	Enabled	<ul> <li>Remark: the regulator is automatically disabled if one of the bits in Status Register 1 or 2 is set.</li> </ul>	p19
SLP	0	Normal Mode	Enghles the clean made (newer down made)	200
SLP	1	Sleep Mode	Enables the sleep mode (power down mode)	p22
SLAT	0	Not Transparent	Defines the type of SLA sampling.	p20
OLAI	1	Transparent	Defines the type of SEA sampling.	
	000	1		
	001	0.5		
	010	0.25		
SLAG[2:0]	011	0.125	Defines the motor terminal voltage division factor for the	p20
SLAG[2.0]	100	0.0625	SLA-pin.	μ20
	101	0.0625		
	110	0.0625		
	111	0.0625		

**Table 16. CONTROL REGISTER 2 PARAMETERS** 

Parameter	Value	Value	Description	Info
	0	No additional offset		
SLA_OFFS	1	Additional offset of 0.6 V	To enable an additional offset on the SLA-pin of 0.6V.	p20

Remark: Bit 5 of Control Register 2 should always be '0' (zero)!

#### Status Register 0 (SR0)

Status Register 0 is located at address 0x04 and can only be read. Status Register 0 is a non-latched register meaning that the value of the register can change without the need of reading out the register. The register can be used to retrieve the temperature range or to verify a watchdog event.

Notice that bit 7 is the parity bit (see READ operation p26).

**Table 17. STATUS REGISTER 0** 

	Status Register 0 (SR0)										
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
	Access	R	R	R	R	R	R	R	R		
0x04	Reset	0	0	0	0	0	1	0	0		
	Data	PAR	TR[	1:0]	WD	Ī	-	-	-		

**Table 18. STATUS REGISTER 0 PARAMETERS** 

Parameter	Value	Value	Description	Info
	00	-40°C to 15°C	Motor driver thermal range.	
	01	15°C to 72°C	Remark: TR[1:0] = 11 and TSD = 0 => Thermal Warning	
TR[1:0]	10	73°C to 150°C	TR[1:0] = 11 and TSD = 1 => Thermal Shutdown TSD is located in Status Register 2	p23
	11	TSD = 0: 150°C to 170°C TSD = 1: >170°C		
WD	0	No watchdog event	If WDEN = 1 and watchdog not acknowledged before the Watchdog Time-out (WDT[3:0]), WDb-pin will be pulled low for 100ms to reset an external microcontroller and WD	204
VVD		bit will be set to '1' to indicate this event. The external microcontroller can use this bit to verify a cold (WD = 0) or warm boot (WD = 1).	p24	

### Status Register 1 (SR1)

Status Register 1 is located at address 0x05 and can only be read. Status Register 1 is a latched register. If an error occurs the bit will be set and can only be cleared by reading out this bit<sup>1</sup>. The register is used to report an overcurrent or open coil in the X-coil, or to report a charge pump failure.

Notice that bit 7 is the parity bit (see READ operation p26).

Table 19. STATUS REGISTER 1

	Status Register 1 (SR1)										
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
	Access	R	R	R	R	R	R	R	R		
0x05	Reset	0	0	0	0	0	0	0	0		
	Data	PAR	OVCXPT	OVCXPB	OVCXNT	OVCXNB	CPFAIL	OPEN_X	-		

<sup>1.</sup> In Sleep mode the register can be read out but will not be cleared!

**Table 20. STATUS REGISTER 1 PARAMETERS** 

Parameter	Value	Value	Description	Info	
OVCXPT	0	No overcurrent	Overcurrent detection in top transistor XP-terminal	p23	
OVCAPI	1	Overcurrent	Overcurrent detection in top transistor AF-terminal	μ23	
OVCXPB	0	No overcurrent	Overcurrent detection in bottom transistor XP-terminal	p23	
UVCAPB	1	Overcurrent	Overcurrent detection in pottom transistor AP-terminal		
OVCYNIT	0	No overcurrent	Occupant detection in ten translator VNI terminal	p23	
OVCXNT	1	Overcurrent	Overcurrent detection in top transistor XN-terminal	μ20	
OVCXNB	0	No overcurrent	Occurrent detection in bottom translator VNI torrainal	<b>~00</b>	
OVERING	1	Overcurrent	Overcurrent detection in bottom transistor XN-terminal	p23	
CPFAIL	0	No charge pump failure	Channe and failure data sting	00	
OPFAIL	1	Charge pump failure	Charge pump failure detection	p23	
ODEN V	0	No open coil detected	Open coil detection for X-coil	200	
OPEN_X	1	Open coil detected	Note: a short circuit could trigger an open coil	p23	

### Status Register 2 (SR2)

Status Register 2 is located at address 0x06 and can only be read. Status Register 2 is a latched register. If an error occurs the bit will be set and can only be cleared by reading out this bit<sup>2</sup>. The register is used to report an overcurrent or open coil in the Y-coil, or to report a thermal shutdown.

Notice that bit 7 is the parity bit (see READ operation p26).

**Table 21. STATUS REGISTER 2** 

	Status Register 2 (SR2)									
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
	Access	R	R	R	R	R	R	R	R	
0x06	Reset	0	0	0	0	0	0	0	0	
	Data	PAR	OVCYPT	OVCYPB	OVCYNT	OVCYNB	TSD	OPEN_Y	-	

**Table 22. STATUS REGISTER 2 PARAMETERS** 

Parameter	Value	Value	Description	Info	
OVCYPT	0	No overcurrent	Oversument detection in ten transister VD terminal	~00	
OVCYPT	1	Overcurrent	Overcurrent detection in top transistor YP-terminal	p23	
OVCYPB	0	No overcurrent	Oversument detection in bottom translator VD terminal	<b>~</b> 00	
UVCTPB	1	Overcurrent	Overcurrent detection in bottom transistor YP-terminal	p23	
OVCYNT	0	No overcurrent	Oversument detection in ten transister VM terminal	<b>~</b> 00	
OVCYNI	1	Overcurrent	Overcurrent detection in top transistor YN-terminal	p23	
OVCYNB	0	No overcurrent	Overcurrent detection in bottom transistor YN-terminal	200	
OVCYND	1	Overcurrent	Overcurrent detection in bottom transistor fiv-terminal	p23	
TSD	0	No thermal shutdown	Thermal Shutdown detection	<b>~</b> 00	
190	1	Thermal shutdown	Thermal Shuldown detection	p23	
ODEN V	0	No open coil detected	Open coil detection for X-coil	200	
OPEN_Y	1	Open coil detected	Note: a short circuit could trigger an open coil	p23	

2. In Sleep mode the register can be read out but will not be cleared!

#### Status Register 3 (SR3)

Status Register 3 is located at address 0x07 and can only be read. Status Register 3 contains the microstepping position and can be used to retrieve the position in the translator table (see Table 7). It is a non-latched register meaning that the microstepping position can be updated by the motor driver at any moment. Status Register 3 does not contain a parity bit.

**Table 23. STATUS REGISTER 3** 

	Status Register 3 (SR3)									
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
	Access	R	R	R	R	R	R	R	R	
0x07	Reset	0	0	0	0	0	0	0	0	
	Data				MSP	[7:0]				

### **Table 24. STATUS REGISTER 3 PARAMETERS**

Parameter	Value	Value	Description	Info
MSP[7:0]	XXXX XXXX	Microstepping position	Indicates the position within the translator table	p19

### Predriver Register 0 (PDRV0)

Predriver Register 0 is located at address 0x09 and can be used to set the current source for the gate charge of the external top MOSFET's during  $t_1$  (see Figure 11).

#### Table 25. PREDRIVER REGISTER 0

	Predriver Register 0 (PDRV0)										
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W		
0x09	Reset	0	1	0	1	0	0	1	1		
	Data		TOP_IC	N1[6:3]		-	TOP_ION1[2:0]				

#### **Table 26. PREDRIVER REGISTER 0 PARAMETERS**

Parameter	Value	Value	Description	Info
TOP_ION1[6:3]	XXXX	Current source	Defines the current source for the external top MOSFET's during t <sub>1</sub> .  Current source can be calculated as next:	p13
TOP_ION1[2:0]	XXX	value	1 mA + (PDRV0[7:4] x 2 mA) + 0.25 mA + (PDRV0[2:0] x 0.25 mA)	μισ

### Predriver Register 1 (PDRV1)

Predriver Register 1 is located at address 0x0A and can be used to set the current source for the gate charge of the external top MOSFET's during  $t_2$  (see Figure 11).

**Table 27. PREDRIVER REGISTER 1** 

	Predriver Register 1 (PDRV1)										
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W		
0x0A	Reset	0	0	0	0	0	0	1	1		
	Data		TOP_IC	N2[6:3]		-	TOP_ION2[2:0]				

#### **Table 28. PREDRIVER REGISTER 1 PARAMETERS**

Parameter	Value	Value	Description	Info
TOP_ION2[6:3]	xxxx	Current source	Defines the current source for the external top MOSFET's during t <sub>2</sub> .  Current source can be calculated as next:	p13
TOP_ION2[2:0]	xxx	value	1 mA + (PDRV1[7:4] x 2 mA) + 0.25 mA + (PDRV1[2:0] x 0.25 mA)	різ

### Predriver Register 2 (PDRV2)

Predriver Register 2 is located at address 0x0B and can be used to set the current source for the gate charge of the external bottom MOSFET's during  $t_1$  (see Figure 11).

### Table 29. PREDRIVER REGISTER 2

	Predriver Register 2 (PDRV2)											
Address	ess   Bit 7   Bit 6   Bit 5   Bit 4   Bit 3   Bit 2   Bit 1   Bit 0											
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W			
0x0B	Reset	0	1	0	1	0	0	1	1			
	Data		BOT_IC	N1[6:3]		-	BOT_ION1[2:0]					

### **Table 30. PREDRIVER REGISTER 2 PARAMETERS**

Parameter	Value	Value	Description	Info
BOT_ION1[6:3]	xxxx	Current source	Defines the current source for the external bottom MOSFET's during t <sub>1</sub> . Current source can be calculated as next:	n10
BOT_ION1[2:0]	xxx	value	1 mA + (PDRV2[7:4] x 2 mA) + 0.25 mA + (PDRV2[2:0] x 0.25 mA)	p13

### Predriver Register 3 (PDRV3)

Predriver Register 3 is located at address 0x0C and can be used to set the current source for the gate charge of the external bottom MOSFET's during t<sub>2</sub> (see Figure 11).

**Table 31. PREDRIVER REGISTER 3** 

	Predriver Register 3 (PDRV3)											
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W			
0x0C	Reset	0	0	0	0	0	0	1	1			
	Data		BOT_IC	N2[6:3]		-	BOT_ION2[2:0]					

### **Table 32. PREDRIVER REGISTER 3 PARAMETERS**

Parameter	Value	Value	Description	Info
BOT_ION2[6:3]	XXXX	Current source	Defines the current source for the external bottom MOSFET's during to. Current source can be calculated as next:	p13
BOT_ION2[2:0]	XXX	value	1 mA + (PDRV3[7:4] x 2 mA) + 0.25 mA + (PDRV3[2:0] x 0.25 mA)	різ

### Predriver Register 4 (PDRV4)

Predriver Register 4 is located at address 0x0D and can be used to set the current source for the gate discharge of the external MOSFET's (see Figure 11).

#### **Table 33. PREDRIVER REGISTER 4**

	Predriver Register 4 (PDRV4)											
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W			
0x0D	Reset	0	1	0	0	0	1	0	0			
	Data		TOP_IC	FF[3:0]		BOT_IOFF[3:0]						

### **Table 34. PREDRIVER REGISTER 4 PARAMETERS**

Parameter	Value	Value	Description	Info
TOP_IOFF[3:0]	xxxx	Current source value	Defines the current source for the external top MOSFET's during t <sub>off</sub> . Current source can be calculated as next: 10.5 mA + (PDRV4[7:4] x 7 mA)	p13
BOT_IOFF[3:0]	xxxx	Current source value	Defines the current source for the external bottom MOSFET's during $t_{\text{off}}$ . Current source can be calculated as next: 10.5 mA + (PDRV4[3:0] x 7 mA)	p13

### **Predriver Register 5 (PDRV5)**

Predriver Register 5 is located at address 0x0E and can be used to set t<sub>2</sub> (see Figure 11).

#### **Table 35. PREDRIVER REGISTER 5**

	Predriver Register 5 (PDRV5)											
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W			
0x0E	Reset	0	1	0	0	0	1	0	0			
	Data	-		TOP_t2[2:0]		-	BOT_t2[2:0]					

### **Table 36. PREDRIVER REGISTER 5 PARAMETERS**

Parameter	Value	Value	Description	Info
	000	1.25 μs		
	001	1.75 μs		
	010	2.25 μs		
TOD +2[2:0]	011 2.75 μs	2.75 μs	Defines the quitable of duration to favithe external tan MOSEET's	p13
TOP_t2[2:0]	100	3.25 μs	Defines the switch on duration t <sub>2</sub> for the external top MOSFET's.	
	101	3.75 μs		
	110	4.25 μs		
	111	4.75 μs		

**Table 36. PREDRIVER REGISTER 5 PARAMETERS** 

Parameter	Value	Value	Description	Info
	000	1.25 μs		
	001	1.75 μs		
	010	2.25 μs		
DOT 1010 01	011	2.75 μs	Defend the collection of outline to faulte a broad ballous MOOFFT!	-10
BOT_t2[2 :0]	100	3.25 μs	Defines the switch on duration t <sub>2</sub> for the external bottom MOSFET's.	p13
	101	3.75 μs		
	110	4.25 μs		
	111	4.75 μs		

Predriver Register 6 (PDRV6) Predriver Register 6 is located at address 0x0F and can be used to set  $t_{\rm off}$  (see Figure 11).

**Table 37. PREDRIVER REGISTER 6** 

	Predriver Register 6 (PDRV6)											
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W			
0x0F	Reset	0	1	0	0	0	1	0	0			
	Data	-		TOP_toff[2:0]		-	BOT_toff[2:0]					

Table 38. PREDRIVER REGISTER 6 PARAMETERS

Parameter	Value	Value	Description	Info		
	000	1.25 μs				
	001	1.75 μs				
	010	2.25 μs				
TOD +-#[0.0]	011	2.75 μs				
TOP_toff[2:0]	100	3.25 μs	Defines the switch off duration (t <sub>off</sub> ) for the external top MOSFET's.	p13		
	101	3.75 μs				
	110	4.25 μs				
	111	4.75 μs				
	000	1.25 μs				
	001	1.75 μs				
	010	2.25 μs				
DOT +-#10 .01	011	2.75 μs	Defines the suiteboff duration (4.) for the subsect bottom MOCFFT's	-10		
BOT_toff[2:0]	100	3.25 μs	Defines the switch off duration (t <sub>off</sub> ) for the external bottom MOSFET's.	p13		
	101	3.75 μs				
	110	4.25 μs				
	111	4.75 μs				

### Predriver Register 7 (PDRV7)

Predriver Register 7 is located at address 0x10 and can be used to set t<sub>1</sub> (see Figure 11).

### Table 39. PREDRIVER REGISTER 7

	Predriver Register 7 (PDRV7)											
Address		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
	Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W			
0x10	Reset	0	0	1	0	0	0	1	0			
	Data	-		TOP_t1[2:0]		-	BOT_t1[2:0]					

### **Table 40. PREDRIVER REGISTER 7 PARAMETERS**

Parameter	Value	Value	Description	
TOP_t1[2:0]	000	375 ns		p13
	001	500 ns		
	010	625 ns		
	011	750 ns	Defines the suitable of distribute for the substitute MOCFET's	
	100	875 ns	Defines the switch on duration t <sub>1</sub> for the external top MOSFET's.	
	101	1000 ns		
	110	1125 ns		
	111	1250 ns		
BOT_t1[2 :0]	000	375 ns		p13
	001	500 ns		
	010	625 ns		
	011	750 ns	Defines the switch on duration $t_1$ for the external bottom	
	100	875 ns	MOSFET's.	
	101	1000 ns		
	110	1125 ns		
	111	1250 ns		

#### PACKAGE THERMAL CHARACTERISTICS

The AMIS-30421 is available in a NQFP44 package. For cooling optimizations, the NQFP has an exposed thermal pad which has to be soldered to the PCB ground plane. The ground plane needs thermal vias to conduct the heat to the bottom layer.

Figure 35 gives an example of good heat transfer. The exposed thermal pad is soldered directly on the top ground layer (left picture of Figure 35). It's advised to make the top ground layer as large as possible (see arrows Figure 35). To improve the heat transfer even more, the exposed thermal pad is connected to a bottom ground layer by using thermal vias (see right picture of Figure 35). It's advised to make this bottom ground layer as large as possible and with as less as possible interruptions.

For precise thermal cooling calculations the major thermal resistances of the device are given (Table 4). The thermal media to which the power of the devices has to be given are:

- Static environmental air (via the case)
- PCB board copper area (via the exposed pad)


The major thermal resistances of the device are the Rth from the junction to the ambient ( $Rth_{ja}$ ) and the overall Rth from the junction to exposed pad ( $Rth_{jp}$ ). In Table 4 one can find the values for the  $Rth_{ja}$  and  $Rth_{jp}$ , simulated according to JESD-51.

The Rth<sub>ja</sub> for 2S2P is simulated conform JEDEC JESD-51 as follows:

- A 4-layer printed circuit board with inner power planes and outer (top and bottom) signal layers is used
- Board thickness is 1,46mm (FR4 PCB material)
- The 2 signal layers: 70 um thick copper with an area of 5500 mm<sup>2</sup> copper and 20% conductivity
- The 2 power internal planes: 36 µm thick copper with an area of 5500 mm<sup>2</sup> copper and 90% conductivity

  The Rth<sub>ja</sub> for 1S0P is simulated conform to JEDEC

  JESD-51 as follows:
- A 1-layer printed circuit board with only 1 layer
- Board thickness is 1.46 mm (FR4 PCB material)
- The layer has a thickness of 70 μm copper with an area of 5500 mm<sup>2</sup> copper and 20% conductivity

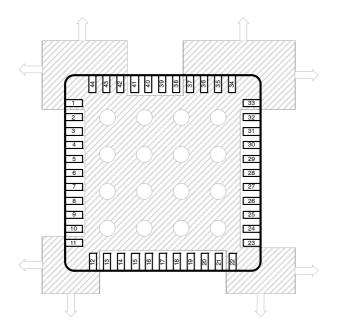

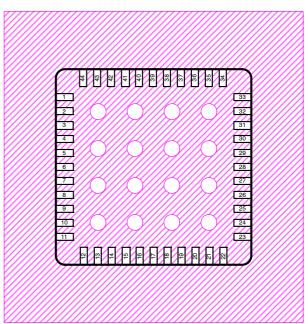



Figure 35. PCB Ground Plane Layout Condition (left picture displays the top ground layer, right picture displays the bottom ground layer)


### **ORDERING INFORMATION**

Part No.	Peak Current	Temperature Range	Package	Shipping <sup>†</sup>
AMIS30421C4211G	NA	−40°C to +170°C	NQFP-44 (7 x 7 mm) (Pb-Free)	Units / Tube
AMIS30421C4211RG				Tape & Reel

<sup>†</sup>For information on tape and reel specifications, including part orientation and tape sizes, please refer to our Tape and Reel Packaging Specifications Brochure, BRD8011/D.

### **PACKAGE DIMENSIONS**



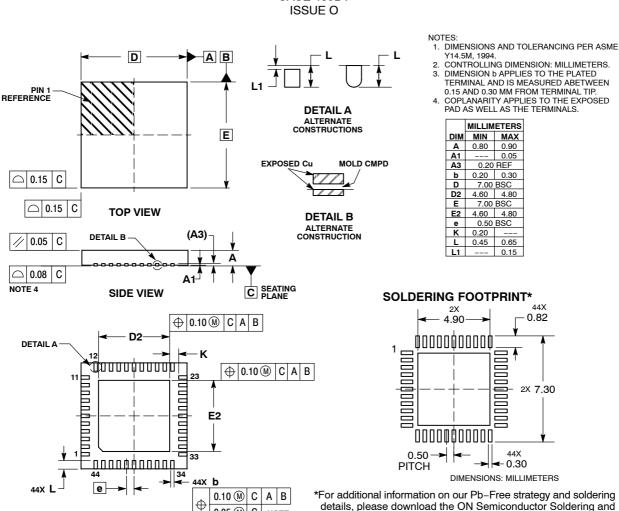

0.05 M C NOTE 3

ON Semiconductor and un are registered trademarks of Semiconductor Components Industries, LLC (SCILLC). SCILLC reserves the right to make changes without further notice on semiconductor and war engineer trademarks of semiconductor components industries, Ite (SciLLC) solitate services are injective to any products herein. SCILLC makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does SCILLC assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. "Typical" parameters which may be provided in SCILLC data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. SCILLC does not convey any license under its patent rights nor the rights of others. SCILLC products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the SCILLC product could create a situation where personal injury or death may occur. Should Buyer purchase or use SCILLC products for any such unintended or unauthorized application, Buyer shall indemnify and hold SCILLC and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that SCILLC was negligent regarding the design or manufacture of the part. SCILLC is an Equal Opportunity/Affirmative Action Employer. This literature is subject to all applicable copyright laws and is not for resale in any manner.

#### **PUBLICATION ORDERING INFORMATION**

#### LITERATURE FULFILLMENT:

Literature Distribution Center for ON Semiconductor P.O. Box 5163, Denver, Colorado 80217 USA Fax: 303-675-2176 or 800-344-3867 Toll Free USA/Canada

Phone: 303-675-2175 or 800-344-3860 Toll Free USA/Canada Email: orderlit@onsemi.com

**BOTTOM VIEW** 

N. American Technical Support: 800-282-9855 Toll Free USA/Canada

Europe, Middle East and Africa Technical Support: Phone: 421 33 790 2910 Japan Customer Focus Center

Phone: 81-3-5817-1050

ON Semiconductor Website: www.onsemi.com

Mounting Techniques Reference Manual, SOLDERRM/D.

Order Literature: http://www.onsemi.com/orderlit

For additional information, please contact your local Sales Representative