



# **Contents**

Page	Section	Title
<b>5</b> 5	<b>1.</b> 1.1.	Introduction MSP 3410D Additional Features and Major Improvements compared with MSP 3410B
<b>6</b> 6 6	2. 2.1. 2.2. 2.3.	Basic Features of the MSP 3410D  Demodulator and NICAM Decoder Section  DSP-Section (Audio Baseband Processing)  Analog Section
<b>7</b> 7 7	<b>3.</b> 3.1. 3.2.	Application Fields of the MSP 3410D NICAM plus FM/AM-Mono German 2-Carrier System (DUAL FM System)
10 10 10 11 11 11 12 12 12 12 12 12 13 13 13 13 13 15 15	4. 4.1. 4.1.1. 4.1.2. 4.1.3. 4.1.4. 4.1.5. 4.1.6. 4.1.7. 4.1.8. 4.1.9. 4.1.10. 4.2. 4.2.1. 4.2.2. 4.3. 4.3.1. 4.4. 4.5. 4.6. 4.7.	Architecture of the MSP 3410D  Demodulator and NICAM Decoder Section  Analog Sound IF – Input Section  Quadrature Mixers  Lowpass Filtering Block for Mixed Sound IF Signals  Phase and AM Discrimination  Differentiators  Lowpass Filter Block for Demodulated Signals  High Deviation FM Mode  FM Carrier-Mute Function in the Dual Carrier FM Mode  DQPSK-Decoder  NICAM-Decoder  Analog Section  SCART Switching Facilities  Standby Mode  DSP Section (Audio Baseband Processing)  Dual Carrier FM Stereo/Bilingual Detection  Audio PLL and Crystal Specifications  ADR Bus Interface  Digital Control Output Pins  I²S Bus Interface
16  17  18  19  19  19  19  20  21  21  22  22  23  23  24	5. 5.1. 5.2. 5.2.1. 5.2.2. 5.2.3. 5.2.4. 5.3. 6. 6.1. 6.2. 6.3. 6.4. 6.4.1. 6.4.2.	I <sup>2</sup> C-Bus Interface: Device and Subaddresses Protocol Description Proposal for MSP 3410D I <sup>2</sup> C Telegrams Symbols Write Telegrams Read Telegrams Examples Start Up Sequence: Power Up and I <sup>2</sup> C-Controlling  Programming the Demodulator and NICAM Decoder Section Autodetection, Short-Programming and General Programming of the Demodulator Part Demodulator Write Registers: Table and Addresses Demodulator Read Registers: Table and Addresses Demodulator Write Registers for Short-Programming: Functions and Values Demodulator Short-Programming AUTO_FM/AM: Automatic Switching between NICAM and FM/AM-Mono

# Contents, continued

Page	Section	Title
25	6.5.	Demodulator Write Registers for the General Programming Mode: Functions and Values
25	6.5.1.	Register 'AD_CV'
27	6.5.2.	Register 'MODE_REG'
28	6.5.3.	FIR-Parameter
30	6.5.4.	DCO-Registers
31	6.6.	Demodulator Read Registers: Functions and Values
32	6.6.1.	Autodetect of Terrestrial TV-Audio Standards
32	6.6.2.	C_AD_BITS
32	6.6.3.	ADD_BITS [10:3] 0038hex
32	6.6.4.	CIB_BITS
33	6.6.5.	ERROR_RATE 0057 hex
33	6.6.6.	CONC_CT (for compatibility with MSP 3410B)
33	6.6.7.	FAWCT_IST (for compatibility with MSP 3410B)
33	6.6.8.	PLL_CAPS
33	6.6.9.	AGC_GAIN
33	6.7.	Sequences to Transmit Parameters and to Start Processing
35	6.8.	Software Proposals for Multistandard TV-Sets
35	6.8.1.	Multistandard Including System B/G with NICAM/FM-Mono only
35	6.8.2.	Multistandard Including System I with NICAM/FM-Mono only
35	6.8.3.	Multistandard Including System B/G with NICAM/FM-Mono and German DUAL FM
35	6.8.4.	Satellite Mode
35	6.8.5.	Automatic Search Function for FM-Carrier Detection
37	7.	Programming the DSP Section (Audio Baseband Processing)
37	7.1.	DSP Write Registers: Table and Addresses
39	7.2.	DSP Read Registers: Table and Addresses
40	7.3.	DSP Write Registers: Functions and Values
40	7.3.1.	Volume Loudspeaker Channel and Headphone Channel
41	7.3.2.	Balance Loudspeaker and Headphone Channel
41	7.3.3.	Bass Loudspeaker and Headphone Channel
42	7.3.4.	Treble Loudspeaker and Headphone Channel
42	7.3.5.	Loudness Loudspeaker and Headphone Channel
42	7.3.6.	Spatial Effects Loudspeaker Channel
43	7.3.7.	Volume SCART1 and SCART2 Channel
44	7.3.8.	Channel Source Modes
44	7.3.9.	Channel Matrix Modes
44	7.3.10.	SCART Prescale
45	7.3.11.	FM/AM Prescale
45	7.3.12.	FM Matrix Modes
45	7.3.13.	FM Fixed Deemphasis
45	7.3.14.	FM Adaptive Deemphasis
46	7.3.15.	NICAM Prescale
46	7.3.16.	NICAM Deemphasis
46	7.3.17.	I <sup>2</sup> S1 and I <sup>2</sup> S2 Prescale
46	7.3.18.	ACB Register
47	7.3.19.	Beeper
47	7.3.20.	Identification Mode
47	7.3.21.	FM DC Notch

Page	Section	Title
47	7.3.22.	Mode Tone Control
47	7.3.23.	Automatic Volume Correction (AVC)
48	7.3.24.	Subwoofer Channel
49	7.3.25.	Equalizer Loudspeaker Channel
49	7.4.	Exclusions for the Audio Baseband Processing
49	7.5.	DSP Read Registers: Functions and Values
49	7.5.1.	Stereo Detection Register
49	7.5.2.	Quasi Peak Detector
50	7.5.3.	DC Level Register
50	7.5.4.	MSP Hardware Version Code
50	7.5.5.	MSP Major Revision Code
50	7.5.6.	MSP Product Code
50	7.5.7.	MSP ROM Version Code
51	8.	Differences between MSP 3400C, MSP 3410B, and MSP 3410D
54	9.	Specifications
54	9.1.	Outline Dimensions
55	9.2.	Pin Connections and Short Descriptions
59	9.3.	Pin Configurations
62	9.4.	Pin Circuits
64	9.5.	Electrical Characteristics
64	9.5.1.	Absolute Maximum Ratings
65	9.5.2.	Recommended Operating Conditions
69	9.5.3.	Characteristics
75	10.	Application Circuit
76	11.	Appendix A: MSP 3410D Version History
76	12.	Data Sheet History

4

#### **Multistandard Sound Processor**

Release Notes: The hardware description in this document is valid for the MSP 3410D version B3 and following versions. Revision bars indicate significant changes to the previous edition.

#### 1. Introduction

The **MSP 3410D** is designed as a single-chip Multistandard Sound Processor for applications in analog and digital TV sets, satellite receivers, video recorders, and PC-cards. As the successor of the MSP 3410B and MSP 3400C, the MSP 3410D combines all features of the two and adds several new features.

The **MSP 3410D**, again, improves function integration: The full TV sound processing, starting with analog sound IF signal-in, down to processed analog AF-out, is performed in a single chip. It covers all European TV-Standards (some examples are shown in Table 3–1).

The MSP 3400 1.0  $\mu$  CMOS version is fully pin and software compatible to the MSP 3410, but is not able to decode NICAM. It is also compatible to the MSP 3400C 0.8  $\mu$  CMOS version.

The IC is produced in submicron CMOS technology, combined with high performance digital signal processing. The MSP 3410D is available in a PLCC68, PSDIP64, PSDIP52, and in a PQFP80 package.

**Note:** The MSP 3410D version is fully downward compatible to the MSP 3410B, the MSP 3400B, and the MSP 3400C. To achieve full software compatibility with MSP 3400C, MSP 3400B, and MSP 3410B, the demodulator part must be programmed as described in the data sheet of MSP 3410B.

# 1.1. MSP 3410D Additional Features and Major Improvements compared with MSP 3410B (section 8.)

- AVC: Automatic Volume Correction
- Subwoofer Output
- 5-band graphic equalizer (as in MSP 3400C)
- Enhanced spatial effect (pseudostereo/basewidth enlargement as in MSP 3400C)
- headphone channel with balance, bass, treble, loudness
- balance for loudspeaker and headphone channels in dB units (optional)
- Additional pair of D/A converters for SCART2 out
- improved oversampling filters (as in MSP 3400C)
- Additional SCART input
- Full SCART in/out matrix without restrictions
- Scart volume in dB units (optional)
- Additional I<sup>2</sup>S input (as in MSP 3400C)
- New FM-identification (as in MSP 3400C)
- Demodulator short programming
- Autodetection for terrestrial TV-sound standards
- Precise bit-error rate indication
- Automatic switching from NICAM to FM/AM or vice versa
- Improved NICAM synchronization algorithm
- Improved carrier mute algorithm
- Improved AM-demodulation
- ADR together with DRP 3510A
- Dolby Pro Logic together with DPL 35xx A
- Reduction of necessary controlling
- Less external components
- Significant reduction of radiation

### 2. Basic Features of the MSP 3410D

#### 2.1. Demodulator and NICAM Decoder Section

The MSP 3410D is designed to simultaneously perform digital demodulation and decoding of NICAM-coded TV stereo sound, as well as demodulation of FM or AMmono TV sound. Alternatively, two carrier FM systems according to the German or Korean terrestrial specs or the satellite specs can be processed with the MSP 3410D.

The MSP offers a powerful feature to calculate the carrier field strength, which can be used for automatic standard detection (terrestrial) and search algorithms (satellite). Therefore, the IC facilitates a first step towards multistandard capability. It may be used in TV-sets, as well as in satellite tuners, and video recorders.

The MSP 3410D facilitates profitable multistandard capability, offering the following advantages:

- two selectable analog inputs (TV and SAT-IF sources)
- Automatic Gain Control (AGC) for analog input: input range: 0.10 – 3 Vpp
- integrated A/D converter for sound-IF inputs
- all demodulation and filtering is performed on chip and is individually programmable
- easy realization of all digital NICAM standards (B/G, I, L, and D/K)
- FM-demodulation of all terrestrial standards (incl. identification decoding)
- FM-demodulation of all satellite standards
- no external filter hardware is required
- only one crystal clock (18.432 MHz) is necessary
- FM carrier level calculation for automatic search algorithms and carrier mute function
- high deviation FM-mono mode (max. deviation: approx. ±360 kHz)

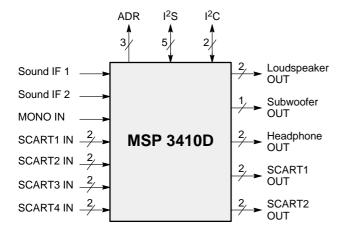


Fig. 2-1: Main I/O Signals MSP 3410D

## 2.2. DSP-Section (Audio Baseband Processing)

- flexible selection of audio sources to be processed
- two digital input and one output interface via I<sup>2</sup>S-Bus for external DSP-processors, featuring surround sound, ADR etc.
- digital interface to process ADR (Astra Digital Radio) together with DRP 3510A
- performance of all deemphasis systems including adaptive Wegener Panda 1 without external components or controlling
- digitally performed FM-identification decoding and dematrixing
- digital baseband processing: volume, bass, treble,
   5-band equalizer, loudness, pseudostereo, and basewidth enlargement
- simple controlling of volume, bass, treble, equalizer etc.

## 2.3. Analog Section

four selectable analog pairs of audio baseband inputs (= four SCART inputs)

input level:  $\leq$ 2 V RMS, input impedance:  $\geq$ 25 k $\Omega$ 

– one selectable analog mono input (i.e. AM sound): input level:  $\leq$ 2 V RMS, input impedance:  $\geq$ 15 k $\Omega$ 

- two high-quality A/D converters, S/N-Ratio: ≥85 dB
- 20 Hz to 20 kHz bandwidth for SCART-to-SCARTcopy facilities
- MAIN (loudspeaker) and AUX (headphones): two pairs of fourfold oversampled D/A-converters output level per channel: max. 1.4 VRMS output resistance: max. 5 kΩ S/N-ratio: ≥85 dB at maximum volume max. noise voltage in mute mode: ≤10 μV (BW: 20 Hz ...16 kHz)
- two pairs of four-fold oversampled D/A converters supplying two selectable pairs of SCART-outputs. output level per channel: max. 2 V RMS, output resistance: max. 0.5 kΩ, S/N-Ratio: ≥85 dB (20 Hz...16 kHz)

## 3. Application Fields of the MSP 3410D

In the following sections, a brief overview about the two main TV sound standards, NICAM 728 and German FM-Stereo, demonstrates the complex requirements of a multistandard audio IC.

## 3.1. NICAM plus FM/AM-Mono

According to the British, Scandinavian, Spanish, and French TV-standards, high-quality stereo sound is transmitted digitally. The systems allow two high-quality digital sound channels to be added to the already existing FM/AM-channel. The sound coding follows the format of the so-called Near Instantaneous Companding System (NICAM 728). Transmission is performed using Differential Quadrature Phase Shift Keying (DQPSK). Table 3–2 gives some specifications of the sound coding (NICAM); Table 3–3 offers an overview of the modulation parameters.

In the case of NICAM/FM (AM) mode, there are three different audio channels available: NICAM A, NICAM B, and FM/AM-mono. NICAM A and B may belong either to a stereo or to a dual language transmission. Information about operation mode and about the quality of the NICAM signal can be read by the CCU via the control bus. In the case of low quality (high bit error rate), the CCU may decide to switch to the analog FM/AM-mono sound. Alternatively, an automatic NICAM-FM/AM switching may be applied.

## 3.2. German 2-Carrier System (DUAL FM System)

Since September 1981, stereo and dual sound programs have been transmitted in Germany using the 2-carrier system. Sound transmission consists of the already existing first sound carrier and a second sound carrier additionally containing an identification signal. More details of this standard are given in Tables 3–1 and 3–4. For D/K and M-Korea, very similar systems are used.

Table 3-1: TV standards

TV-System	Position of Sound Carrier /MHz	Sound Modulation	Color System	Country
B/G	5.5/5.7421875	FM-Stereo	PAL	Germany
B/G	5.5/5.85	FM-Mono/NICAM	PAL	Scandinavia,Spain
L	6.5/5.85	AM-Mono/NICAM	SECAM-L	France
I	6.0/6.552	FM-Mono/NICAM	PAL	UK
D/K	6.5/6.2578125 D/K1 6.5/6.7421875 D/K2 6.5/5.85 D/K-NICAM	FM-Stereo FM-Mono/NICAM	SECAM-East	USSR Hungary
M M-Korea	4.5 4.5/4.724212	FM-Mono FM-Stereo	NTSC	USA Korea
Satellite Satellite	6.5 7.02/7.2	FM-Mono FM-Stereo	PAL PAL	Europe (ASTRA) Europe (ASTRA)

MSP 3410D PRELIMINARY DATA SHEET

Table 3–2: Summary of NICAM 728 sound coding characteristics

Characteristics	Values				
Audio sampling frequency	32 kHz				
Number of channels	2				
Initial resolution	14 bit/sample				
Companding characteristics	near instantaneous, with compression to 10 bits/sample in 32-samples (1 ms) blocks				
Coding for compressed samples	2's complement				
Preemphasis	CCITT Recommendation J.17 (6.5 dB attenuation at 800 Hz)				
Audio overload level	+12 dBm measured at the unity gain frequency of the preemphasis network (2 kHz)				

Table 3–3: Summary of NICAM 728 sound modulation parameters

Specification	ı	B/G	L		D/K		
Carrier frequency of digital sound	6.552 MHz	5.85 MHz	5.85 MHz		5.85 MHz		
Transmission rate			728 kBit/s	;			
Type of modulation	Diffe	rentially encoded	quadrature p	hase shift ke	ying (DQPSk	()	
Spectrum shaping		by means of Roll-off filters					
Roll-off factor	1.0	0.4	0.4		0.4		
Carrier frequency of	6.0 MHz	5.5 MHz	6.5 MHz /	AM mono	6.5 MHz		
analog sound component	FM mono	FM mono	terrestrial	cable	FM mono		
Power ratio between vision carrier and analog sound carrier	10 dB	13 dB	10 dB	16 dB	13 dB		
Power ratio between	10 dB	7 dB	17 dB	11 dB	Hungary	Poland	
analog and modulated digital sound carrier					12 dB	7 dB	

8

Table 3-4: Key parameters for B/G, D/K, and M 2-carrier sound system

Sound Carriers	Carrier FI	VI1		Carrier Fl	M2		
	B/G	D/K	М	B/G	D/K	М	
Vision/sound power difference		13 dB			20 dB		
Sound bandwidth			40 Hz to	15 kHz			
Pre-emphasis	50	μs	75 μs	50	μs	75 μs	
Frequency deviation	±50	kHz	±25 kHz	±50	kHz	±25 kHz	
Sound Signal Components							
Mono transmission		mono			mono		
Stereo transmission	(L+I	R)/2	(L+R)/2	F	₹	(L-R)/2	
Dual sound transmission		language A			language B		
Identification of Transmission Mo	de on Carrie	er FM2					
Pilot carrier frequency in kHz				54.6	8875	55.0699	
Type of modulation					AM		
Modulation depth					50%		
Modulation frequency				stereo: 1	nmodulated 17.5 Hz 74.1 Hz	149.9 Hz 276.0 Hz	

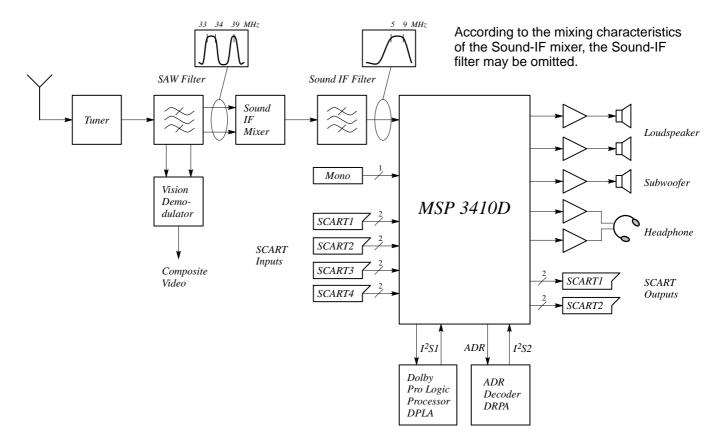


Fig. 3-1: Typical MSP 3410D application

#### 4. Architecture of the MSP 3410D

Fig. 4–1 shows a simplified block diagram of the IC. Its architecture is split into three main functional blocks:

- 1. demodulator and NICAM decoder section
- 2. digital signal processing (DSP) section performing audio baseband processing
- analog section containing two A/D-converters, 9 D/Aconverters, and SCART Switching Facilities.

#### 4.1. Demodulator and NICAM Decoder Section

## 4.1.1. Analog Sound IF - Input Section

The input pins ANA\_IN1+, ANA\_IN2+, and ANA\_IN- offer the possibility to connect two different sound IF (SIF) sources to the MSP 3410D. By means of bit [8] of AD\_CV (see Table 6-5), either terrestrial or satellite sound IF signals can be selected. The analog-to-digital conversion of the preselected sound IF signal is done by an A/D-converter, whose output can be used to control an analog automatic gain circuit (AGC), providing an optimal level for a wide range of input levels. It is possible to switch between automatic gain control and a fixed (setable) input gain. In the optimal case, the input range of the A/D converter is completely covered by the sound IF source. Some combinations of SAW filters and sound IF mixer ICs, however, show large picture components on their outputs. In this case, filtering is recommended. It was found, that the high pass filters formed by the coupling capacitors at pins ANA\_IN1+ and ANA\_IN2+ (as shown in the application diagram) are sufficient in most cases.

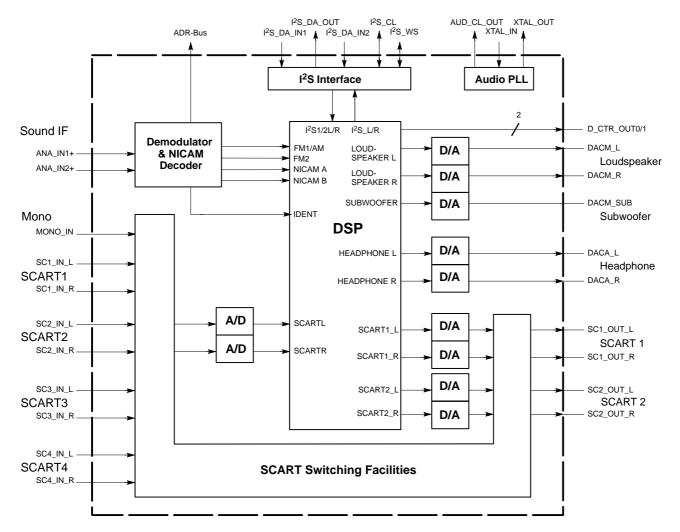


Fig. 4-1: Architecture of the MSP 3410D

## 4.1.2. Quadrature Mixers

The digital input coming from the integrated A/D converter may contain audio information at a frequency range of theoretically 0 to 9 MHz corresponding to the selected standards. By means of two programmable quadrature mixers, two different audio sources; for example, NICAM and FM-mono, may be shifted into baseband position. In the following, the two main channels are provided to process either:

- NICAM (MSP-Ch1) and FM/AM mono (MSP-Ch2) simultaneously or, alternatively,
- FM mono (channel 2)
- FM2 (MSP-Ch1) and FM1 (MSP-Ch2).

Two programmable registers, to be divided up into Low and High Part, determine frequency of the oscillator, which corresponds to the frequency of the desired audio carrier.

# 4.1.3. Lowpass Filtering Block for Mixed Sound IF Signals

Data shaping and/or FM bandwidth limitation is performed by a linear phase Finite Impulse Response (FIR-filter). Just like the oscillators' frequency, the filter coefficients are programmable and are written into the IC by the CCU via the control bus. Thus, for example, different NICAM versions can easily be implemented. Two not necessarily different sets of coefficients are required, one for MSP-Ch1 (NICAM or FM2) and one for MSP-Ch2 (FM1 = FM-mono). In a corresponding table several coefficient sets are proposed.

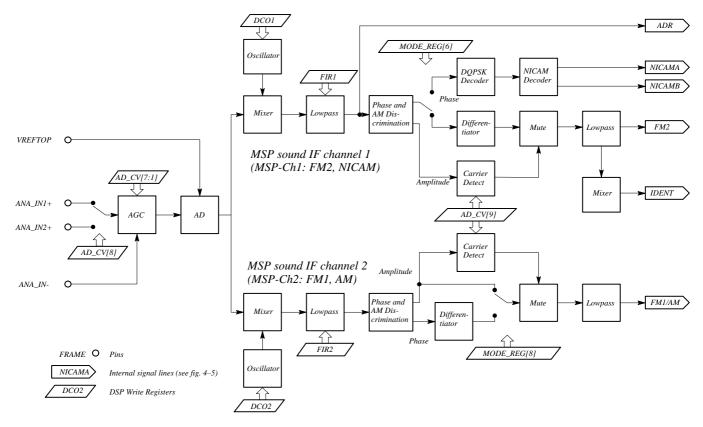


Fig. 4-2: Architecture of demodulator and NICAM decoder section

#### 4.1.4. Phase and AM Discrimination

The filtered sound IF signals are demodulated by means of the phase and amplitude discriminator block. On the output, the phase and amplitude is available for further processing. AM signals are derived from the amplitude information, whereas the phase information serves for FM and NICAM (DQPSK) demodulation.

#### 4.1.5. Differentiators

FM demodulation is completed by differentiating the phase information output.

# 4.1.6. Lowpass Filter Block for Demodulated Signals

The demodulated FM and AM signals are further low-pass filtered and decimated to a final sampling frequency of 32 kHz. The usable bandwidth of the final baseband signals is about 15 kHz.

## 4.1.7. High Deviation FM Mode

By means of MODE\_REG [9], the maximum FM-deviation can be extended to approximately  $\pm 360$  kHz. Since this mode can be applied only for the MSP sound IF channel 2, the corresponding matrices in the baseband processing must be set to sound A. Apart from this, the coefficient sets 380 kHz FIR2 or 500 kHz FIR2 must be chosen for the FIR2. In relation to the normal FM-mode, the audio level of the high-deviation mode is reduced by 6 dB. The FM-prescaler should be adjusted accordingly. In high deviation FM-mode, neither FM-stereo nor FM-identification nor NICAM processing is possible simultaneously.

# 4.1.8. FM Carrier-Mute Function in the Dual Carrier FM Mode

To prevent noise effects or FM identification problems in the absence of one of the two FM carriers, the MSP 3410D offers a carrier detection feature, which must be activated by means of AD\_CV[9]. If no FM carrier is available at the MSPD channel 1, the corresponding channel FM2 is muted. If no FM carrier is available at the MSPD channel 2, the corresponding channel FM1 is muted.

#### 4.1.9. DQPSK-Decoder

In case of NICAM-mode, the phase samples are decoded according the DQPSK-coding scheme. The output of this block contains the original NICAM-bitstream.

## 4.1.10. NICAM-Decoder

Before any NICAM decoding can start, the MSP must lock to the NICAM frame structure by searching and synchronizing to the so-called Frame Alignment Words (FAW).

To reconstruct the original digital sound samples, the NI-CAM-bitstream has to be descrambled, deinterleaved, and rescaled. Also, bit error detection and correction (concealment) is performed in this NICAM specific block.

To facilitate the Central Control Unit CCU to switch the TV-set to the actual sound mode, control information on the NICAM mode and bit error rate are supplied by the the NICAM-Decoder. It can be read out via the I<sup>2</sup>C-Bus.

An automatic switching facility (AUTO\_FM) between NI-CAM and FM/AM reduces the amount of CCU-instructions in case of bad NICAM reception.


12

### 4.2. Analog Section

## 4.2.1. SCART Switching Facilities

The analog input and output sections include full matrix switching facilities, which are shown in Fig. 4–3.To design a TV set with 4 pairs of SCART-inputs and two pairs of SCART-outputs, no external switching hardware is required.

The switches are controlled by the ACB bits defined in the audio processing interface (see section 7. Programming the DSP Section).

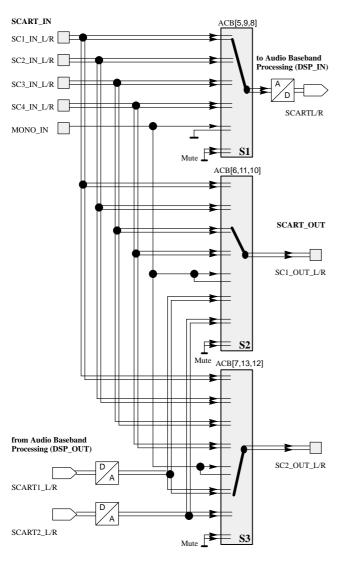

**Fig. 4–3:** SCART-Switching Facilities (s. 7.3.18.) Switch positions show the default configuration after Power On Reset

## 4.2.2. Standby Mode

If the MSP 3410D is switched off by first pulling STAND-BYQ low, and then disconnecting the 5 V, but keeping the 8 V power supply ('**Standby'-mode**), the switches S1, S2, and S3 (see Fig. 4–3) maintain their position and function. This facilitates the copying from selected

SCART-inputs to SCART-outputs in the TV-set's standby mode.

In case of power-on start or starting from standby, the IC switches automatically to the default configuration, shown in Fig. 4–3. This action takes place after the first I<sup>2</sup>C transmission into the DSP part. By transmitting the ACB register first, the individual default setting mode of the TV set can be defined.

## 4.3. DSP Section (Audio Baseband Processing)

All audio baseband functions are performed by digital signal processing (DSP). The DSP functions are grouped into three processing parts: input preprocessing, channel source selection, and channel postprocessing (see Fig. 4–5 and section 7.).

The input preprocessing is intended to prepare the various signals of all input sources in order to form a standardized signal at the input to the channel selector. The signals can be adjusted in volume, are processed with the appropriate deemphasis, and are dematrixed if necessary.

Having prepared the signals that way, the channel selector makes it possible to distribute all possible source signals to the desired output channels.

The ability to route in an external coprocessor for special effects, like surround processing and sound field processing, is of special importance. Routing can be done with each input source and output channel via the I<sup>2</sup>S inputs and outputs.

All input and output signals can be processed simultaneously with the exception that FM2 cannot be processed at the same time as NICAM. FM-identification and adaptive deemphasis are also not possible simultaneously. Note that the NICAM input signals are only available in the MSP 3410B and MSP 3410D versions.

## 4.3.1. Dual Carrier FM Stereo/Bilingual Detection

For the terrestrial dual FM carrier systems, audio information can be transmitted in three modes: Mono, stereo, or bilingual. To obtain information about the current audio operation mode, the MSP 3410D detects the so-called identification signal. Information is supplied via the Stereo Detection Register to an external CCU.

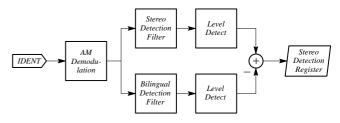


Fig. 4-4: Stereo/bilingual detection

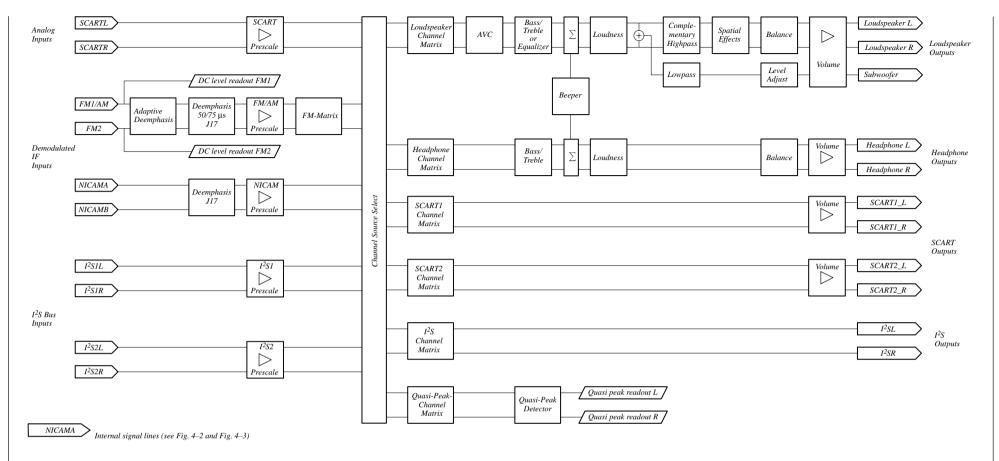


Fig. 4–5: Audio Baseband Processing (DSP-Firmware)

Table 4–1: Some examples for recommended channel assignments for demodulator and audio processing part

Mode	MSP Sound IF- Channel 1	MSP Sound IF- Channel 2	FM- Matrix	Channel- Select	Channel Matrix
B/G-Stereo	FM2 (5.74 MHz): R	FM1 (5.5 MHz): (L+R)/2	B/G Stereo	Speakers: FM	Stereo
B/G-Bilingual	FM2 (5.74 MHz): Sound B	FM1 (5.5 MHz): Sound A	No Matrix	Speakers: FM H. Phone: FM	Speakers: Sound A H. Phone: Sound B
NICAM-I-ST/ FM-mono	NICAM (6.552 MHz)	FM (6.0 MHz): mono	No Matrix	Speakers: NICAM H. Phone: FM	Speakers: Stereo H. Phone: Sound A
Sat-Mono	not used	FM (6.5 MHz): mono	No Matrix	Speakers: FM	Sound A
Sat-Stereo	7.2 MHz: R	7.02 MHz: L	No Matrix	Speakers: FM	Stereo
Sat-Bilingual	7.38 MHz: Sound C	7.02 MHz: Sound A	No Matrix	Speakers: FM H. Phone: FM	Speakers: Sound A H. Phone: Sound B=C
Sat-High Dev. Mode	don't care	6.552 MHz	No Matrix	Speakers: FM H. Phone: FM	Speakers: Sound A H. Phone: Sound A

## 4.4. Audio PLL and Crystal Specifications

The MSP 3410D requires a 18.432 MHz (12 pF, parallel) crystal. The clock supply of the whole system depends on the MSP 3410D operation mode:

### 1. FM-Stereo, FM-Mono:

The system clock runs free on the crystal's 18.432 MHz.

### NICAM:

An integrated clock PLL uses the 364 kHz baud-rate, accomplished in the NICAM demodulator block, to lock the system clock to the bit rate, respectively, 32 kHz sampling rate of the NICAM transmitter. As a result, the whole audio system is supplied with a controlled 18.432 MHz clock.

## 3. I<sup>2</sup>S slave operation:

In this case, the system clock is locked to a synchronizing signal (I<sup>2</sup>S\_CL, I<sup>2</sup>S\_WS) supplied by the coprocessor chip.

### Remark on using the crystal:

External capacitors at each crystal pin to ground are required. They are necessary for tuning the open-loop frequency of the internal PLL and for stabilizing the frequency in closed-loop operation. The higher the capacitors, the lower the clock frequency results. The nominal free running frequency should match the center of the tolerance range between 18.433 and 18.431 MHz as closely as possible.

### 4.5. ADR Bus Interface

For the ASTRA Digital Radio System (ADR), the MSP 3410D performs preprocessing as there are carrier selection and filtering. Via the 3 line ADR-Bus, the resulting signals are transferred to the DRP 3510A, where the source decoding is performed. To be prepared for an upgrade to ADR with an additional DRP board, the following lines of MSP 3410D should be provided on a feature connector:

- AUD CL OUT
- $-I^2S_DA_IN1$  or  $I^2S_DA_IN2$
- I2S\_DA\_OUT
- I<sup>2</sup>S WS
- I2S CLK
- ADR\_CL
- ADR\_WS
- ADR DA

## 4.6. Digital Control Output Pins

The static level of two output pins of the MSP 3410D (D\_CTR\_OUT0/1) is switchable between HIGH and LOW by means of the I<sup>2</sup>C-bus. This enables the controlling of external hardware controlled switches or other devices via I<sup>2</sup>C-bus (see section 7.3.18.)

### 4.7. I<sup>2</sup>S Bus Interface

By means of this standardized interface, additional feature processors can be connected to the MSP 3410D. Two possible formats are supported: The standard mode (MODE\_REG[4]=0) selects the SONY format, where the I<sup>2</sup>S\_WS signal changes at the word boundaries. The so-called PHILIPS format, which is characterized by a change of the I<sup>2</sup>S\_WS signal one I<sup>2</sup>S\_CL period before the word boundaries, is selected by setting MODE\_REG[4]=1.

The MSP 3410D normally serves as the master on the I $^2$ S interface. Here, the clock and word strobe lines are driven by the MSP 3410D. By setting MODE\_REG[3]=1, the MSP 3410D is switched to a slave mode. Now, these lines are input to the MSP 3410D and the master clock is synchronized to 576 times the I $^2$ S\_WS rate (32 kHz). NICAM operation is not possible in this mode.

The I<sup>2</sup>S bus interface consists of five pins:

## 1. I<sup>2</sup>S\_DA\_IN1, I<sup>2</sup>S\_DA\_IN2:

For input, four channels (two channels per line, 2\*16 bits) per sampling cycle (32 kHz) are transmitted.

## 2. I<sup>2</sup>S DA OUT:

For output, two channels (2\*16 bits) per sampling cycle (32 kHz) are transmitted.

## 3. I2S CL:


Gives the timing for the transmission of I<sup>2</sup>S serial data (1.024 MHz).

## 4. I<sup>2</sup>S WS:

The I<sup>2</sup>S\_WS word strobe line defines the left and right sample.

A precise I<sup>2</sup>S timing diagram is shown in the figure below.

## (Data: MSB first)

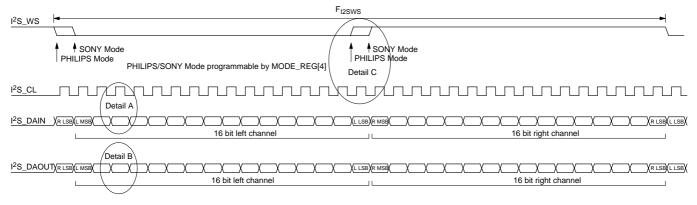


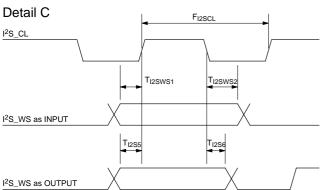


Fig. 4–6: I<sup>2</sup>S Bus Timing Diagram

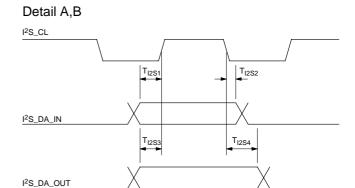

### 5. I<sup>2</sup>C Bus Interface: Device and Subaddresses

As a slave receiver, the MSP 3410D can be controlled via  $I^2C$  bus. Access to internal memory locations is achieved by subaddressing. The demodulator and the DSP processor parts have two separate subaddressing register banks.

In order to allow for more MSP 3410D ICs to be connected to the control bus, an ADR\_SEL pin has been implemented. With ADR\_SEL pulled to high, low, or left open, the MSP 3410D responds to changed device addresses. Thus, three identical devices can be selected.

By means of the RESET bit in the CONTROL register, all devices with the same device address are reset.

The IC is selected by asserting a special device address in the address part of an I<sup>2</sup>C transmission. A device address pair is defined as a write address (80 hex, 84 hex, or 88 hex) and a read address (81 hex, 85 hex, or 89 hex). Writing is done by sending the device write address first, followed by the subaddress byte, two address bytes, and two data bytes. For reading, the read address has to be transmitted first by sending the device write address (80 hex, 84 hex, or 88 hex) followed by the subaddress byte and two address bytes. Without sending a stop condition, reading of the addressed data is done by sending the device read address (81 hex, 85 hex, or 89 hex) and reading two bytes of data. Refer

to Fig. 5–1: I<sup>2</sup>C Bus Protocol and section 5.2. Proposal for MSP 3410D I<sup>2</sup>C Telegrams.

Due to the internal architecture of the MSP 3410D the IC cannot react immediately to an I<sup>2</sup>C request. The typical response time is about 0.3 ms for the DSP processor part and 1 ms for the demodulator part if NICAM processing is active. If the receiver (MSP) can't receive another complete byte of data until it has performed some other function; for example, servicing an internal interrupt, it can hold the clock line I<sup>2</sup>C\_CL LOW to force the transmitter into a wait state. The positions within a transmission where this may happen are indicated by 'Wait' in section 5.1. The maximum Wait-period of the MSP during normal operation mode is less than 1 ms.

## I<sup>2</sup>C-Bus error conditions:

In case of any internal error, the MSPs wait-period is extended to 1.8 ms. Afterwards, the MSP does not acknowledge (NAK) the device address. The data line will be left HIGH by the MSP and the clock line will be released. The master can then generate a STOP condition to abort the transfer.

By means of NAK, the master is able to recognize the error state and to reset the IC via I<sup>2</sup>C-Bus. While transmitting the reset protocol (s. 5.2.4.) to 'CONTROL', the master must ignore the not acknowledge bits (NAK) of the MSP.

A general timing diagram of the  $I^2C$  Bus is shown in Fig. 5–2.

Table 5-1: I<sup>2</sup>C Bus Device Addresses

ADR_SEL	Lo	ow .	High		Left Open	
Mode	Write	Read	Write	Read	Write	Read
MSP device address	80 hex	81 hex	84 hex	85 hex	88 hex	89 hex

Table 5-2: I<sup>2</sup>C Bus Subaddresses

Name	Binary Value	Hex Value	Mode	Function
CONTROL	0000 0000	00	W	software reset
TEST	0000 0001	01	W	only for internal use
WR_DEM	0001 0000	10	W	write address demodulator
RD_DEM	0001 0001	11	W	read address demodulator
WR_DSP	0001 0010	12	W	write address DSP
RD_DSP	0001 0011	13	W	read address DSP

Table 5-3: Control Register (Subaddress: 00 hex)

Name	Subaddress	MSB	14	131	LSB
CONTROL	00 hex	1 : RESET 0 : normal	0	0	0

# 5.1. Protocol Description

## Write to DSP or Demodulator

S	write device address	Wait	ACK	sub-addr	ACK	addr-byte high	ACK	addr-byte low	ACK	data-byte high	ACK	data-byte low	ACK	Р
	address													

## Read from DSP or Demodulator

S	write device address	Wait	ACK	sub-addr	ACK	addr-byte high	ACK	addr-byte low	ACK	S	read device address	Wait	ACK	data-byte high	ACK	data-byte low	NAK	Р
	address										address				111	1		

## Write to Control or Test Registers

S	write device address	Wait	ACK	sub-addr	ACK	data-byte high	ACK	data-byte low	ACK	Р
	aaa. ooo	l								

Note: S = I<sup>2</sup>C-Bus Start Condition from master

I<sup>2</sup>C-Bus Stop Condition from master

 $ACK = Acknowledge-Bit: LOW on I^2C_DA from slave (=MSP, grey)$ 

or master (=CCU, hatched)

NAK = Not Acknowledge-Bit: HIGH on I<sup>2</sup>C\_DA from master (=CCU, hatched) to indicate 'End of Read'

or from MSP indicating internal error state

Wait = I<sup>2</sup>C-Clock line held low by the slave (=MSP) while interrupt is serviced (<1.8 ms)

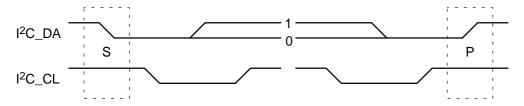


Fig. 5–1: I<sup>2</sup>C bus protocol

(MSB first; data must be stable while clock is high)

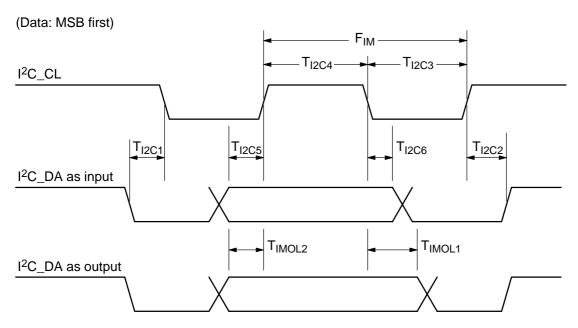


Fig. 5–2: I<sup>2</sup>C bus timing diagram

# 5.2. Proposal for MSP 3410D I<sup>2</sup>C Telegrams

# **5.2.1. Symbols**

daw write device address
 dar read device address
 Start Condition
 Stop Condition
 aa Address Byte
 dd Data Byte

# 5.2.2. Write Telegrams

<daw 00="" d0=""></daw>	write to CONTROL register
<daw 10="" aa="" dd=""></daw>	write data into demodulator
<daw 12="" aa="" dd=""></daw>	write data into DSP

# 5.2.3. Read Telegrams

<daw 11 aa aa <dar dd dd> read data from demodulator
<daw 13 aa aa <dar dd dd> read data from DSP

## 5.2.4. Examples

<80 00 80 00>	RESET MSP statically
<80 00 00 00>	clear RESET
<80 12 00 08 01 20>	set loudspeaker channel source
	to NICAM and Matrix to STEREO

# 5.3. Start Up Sequence: Power Up and I<sup>2</sup>C-Controlling

After power on or RESET (see Fig. 5–3), the IC is in an inactive state. The CCU has to transmit the required coefficient set for a given operation via the I<sup>2</sup>C bus. Initialization should start with the demodulator part. If required for any reason, the audio processing part can be loaded before the demodulator part.

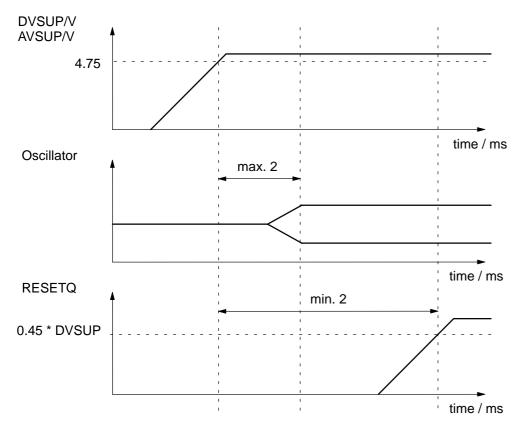


Fig. 5-3: Power-up sequence

**Note:** The reset should not reach high level before the oscillator has started. This requires a reset delay of >2 ms

20

# 6. Programming the Demodulator and NICAM Decoder Section

# 6.1. Autodetection, Short-Programming, and General Programming of the Demodulator Part

The Demodulator Part of the MSP 3410D can be programmed in **three different modes**:

- 1. Autodetection for terrestrial TV-Standards (as part of the below Demodulator Short-Programming) provides the most comfortable way to set up the MSPD-demodulator. This feature facilitates within 0.5 s the detection and set-up of the actual TV-sound standard. Since the detected standard is readable by the control processor, the autodetection feature is mainly recommended for the primary set-up of a TV-set: after having determined once the corresponding TV-channels, their sound standards can be stored and later on programmed by the Demodulator Short-Programming (see sections 6.4.1. and 6.6.1.).
- **2. Demodulator Short-Programming** facilitates a comfortable way to set up the demodulator for many terrestrial TV-sound standards with one single I<sup>2</sup>C-Bus transmission. The coding is listed in section 6.4.1.. If a parameter doesn't coincide with the individual programming concept, it simply can be overwritten by using the General Programming mode. Some bits of the registers AD\_CV (see section 6.5.1.) and MODE\_REG (see section 6.5.2.) are not affected by the short-programming. They must be transmitted once if their reset status does not fit. The Demodulator Short-Programming is not compatible to MSP 3410B and MSP 3400C.
- **3. General Programming** ensures the software compatibility to other MSPs. It offers a very flexible way to apply all of the MSP 3410D demodulator facilities. All registers except 0020hex have to be written with values corresponding to the individual requirements. For satellite applications, with their many variations, this mode must be selected.

All transmissions on the control bus are 16 bits wide. However, data for the demodulator part have only 8 or 12 significant bits. These data have to be inserted LSB-bound and filled with zero bits into the 16-bit transmission word. Table 4–1 explains how to assign FM carriers to the MSP-Sound IF channels and the corresponding matrix modes in the audio processing part.

# 6.2. Demodulator Write Registers: Table and Addresses

# **■ Table 6–1:** Demodulator Write Registers; Subaddress: 10 hex; these registers are not readable!

Demodulator Write Registers	Address (hex)	Function
Demodulator Short- Programming	0020	Write into this register to apply Demodulator Short Programming (s. section 6.4.1.). If the internal setting coincidences with the individual requirements no more of the remaining Demodulator Write Registers have to be transferred.
AUTO_FM/AM	0021	Only for NICAM: Automatic switching between NICAM and FM/AM in case of bad NICAM reception (s. section 6.4.2.)
Write Registers nec	essary for <b>Gene</b>	ral Programming Mode only
AD_CV	00BB	input selection, configuration of AGC, Mute Function and selection of A/D-converter, FM-Carrier-Mute on/off
MODE_REG	0083	mode register
FIR1 FIR2	0001 0005	filter coefficients channel 1 (6 $\cdot$ 8 bit) filter coefficients channel 2 (6 $\cdot$ 8 bit), + 3 $\cdot$ 8 bit offset (total 72 bit)
DCO1_LO DCO1_HI	0093 009B	increment channel 1 Low Part increment channel 1 High Part
DCO2_LO DCO2_HI	00A3 00AB	increment channel 2 Low Part increment channel 2 High Part
PLL_CAPS	001F	switchable PLL capacitors to tune open-loop frequency; to use only if NICAM of MODE_REG = 0 normally not of interest for the customer

# 6.3. Demodulator Read Registers: Table and Addresses

**Table 6–2:** Demodulator Read Registers; Subaddress: 11 hex; these registers are not writeable!

Demodulator Read Registers	Address (hex)	Function
Result of Autodetection	007E	see Table 6–13
C_AD_BITS	0023	NICAM-Sync bit, NICAM-C-Bits, and three LSBs of additional data bits
ADD_BITS	0038	NICAM: bit [10:3] of additional data bits
CIB_BITS	003E	NICAM: CIB1 and CIB2 control bits
ERROR_RATE	0057	NICAM error rate, updated with 182 ms
CONC_CT	0058	only to be used in MSPB compatibility mode
FAWCT_IST	0025	only to be used in MSPB compatibility mode
PLL_CAPS	021F	Not for customer use.
AGC_GAIN	021E	Not for customer use.

# 6.4. Demodulator Write Registers for Short-Programming: Functions and Values

In the following, the functions of some registers are explained and their (default) values are defined:

## 6.4.1. Demodulator Short-Programming

# ■ Table 6-3: MSP 3410D Demodulator Short-Programming

		Demod	ulator Short	t-Programm	ing 00	20 hex			
TV-Sound Stand	lard	Internal Setting							
Description	Code (hex)	AD_CV <sup>2</sup> ) (see Table 6–5)	MODE_ REG <sup>2</sup> ) (see Table 6-8)	DCO1 MHz	DCO2 MHz	FIR1/2 -Coefficients	Identifica- tion Mode		
Autodetection	0001		Detects and sets one of the standards listed below, if available. Results read out of the demodulator read register "Result of Autodetection" (Se						
M Dual-FM	0002	AD_CV- FM	M1	4.72421	4.5		Reset, then Standard M		
B/G Dual-FM	0003	AD_CV- FM	M1	5.74218	5.5	s. Table 6–11:	Dood than		
D/K1 Dual-FM	0004	AD_CV- FM	M1	6.25781	6.5	Terrestrial TV-Stan- dards	Reset, then Standard B/G		
D/K2 Dual-FM	0005	AD_CV- FM	M1	6.74218	6.5				
	0006/ 0007	reserved f	for future Du	ıal FM Stand	dards		AUTO_ FM/AM		
B/G-NICAM-FM	8000	AD_CV- FM	M2	5.85	5.5				
L-NICAM-AM	0009	AD_CV- AM	M3	5.85	6.5	s. Table 6–11:	4)		
I-NICAM-FM	000A	AD_CV- FM	M2	6.552	6.0	Terrestrial TV-Stan- dards	1)		
D/K-NICAM-FM	000B	AD_CV- FM	M2	5.85	6.5				
	>000B	reserved	reserved for future NICAM Standards						

<sup>1)</sup> corresponds to the actual setting of AUTO\_FM (Address = 0021 hex)

**Note:** All parameters in the DSP section (Audio Baseband Processing), except the identification mode register, are not affected by the Demodulator Short-Programming. They still have to be defined by the control processor.

<sup>&</sup>lt;sup>2)</sup> Bits of AD\_CV or MODE\_REG, which are not affected by the short-programming, must be transmitted separately if their reset status does not fit.

# 6.4.2. AUTO\_FM/AM: Automatic Switching between NICAM and FM/AM-Mono

In case of bad NICAM transmission or loss of the NICAM-carrier, the MSPD offers a comfortable mode to switch back to the FM/AM-mono signal. If automatic switching is active, the MSP internally evaluates the ERROR\_RATE. All output channels which are assigned to the NICAM-source are switched back to the FM/AM-mono source without any further CCU instruction, if the NICAM-carrier fails or the ERROR\_RATE exceeds the definable threshold.

Note, that the channel matrix of the corresponding output-channels must be set according to the NICAM-mode and need not be changed in the FM/AM-fall-back case. An appropriate hysteresis algorithm avoids oscillating effects. The MSB of the Register C\_AD\_BITS (Addr: 0023 hex) informs about the actual NICAM-FM/AM-Status (see section 6.6.2.).

There are two possibilities to define the threshold deciding for NICAM or FM/AM-mono (see Table 6–4):

- 1. default value of the MSPD (internal threshold=700, i.e. switch to FM/AM if ERROR\_RATE > 700)
- 2. definable by the customer (recommendable range: threshold = 50....2000, i. e. Bits [10:1] = 25...1000).

#### Note:

The auto\_fm feature is only active if the NICAM-bit of MODE REG is set.

To enable appropriate switching of the channel select matrix of the baseband processing part, the NICAM or FM-identification parameters must be read and evaluated by the CCU. The FM-identification registers are described in section 7.2. To handle the NICAM-sound and to observe the NICAM-quality, at least the registers C\_AD\_BITS and ERROR\_RATE must be read and evaluated by the CCU. Additional data bits and CIB bits, if supplied by the NICAM transmitter, can be obtained by reading the registers ADD\_BITS and CIB\_BITS.

Table 6-4: Coding of automatic NICAM-FM/AM switching; reset status: mode 0

Mode	Auto_fm [110] Addr. = 0021 hex	Selected Sound at the NICAM Channel Select	Threshold	Comment
0. default	Bit [0] = 0 Bits [111] = 0	always NICAM	none	Compatible to MSP 3410B, i.e. automatic switching is disabled
1.	Bit [0] = 1 Bit [11:1] = 0	NICAM or FM/AM, depending on ERROR_RATE	700 int	automatic switching with internal threshold
2.	Bit [0] = 1 Bit [10:1] = 251000 int = threshold/2 Bit [11] = 0	NICAM or FM/AM, depending on ERROR_RATE	set by customer	automatic switching with external threshold
3.	Bit [11] = [0] = 1 Bit [101] = 0	always FM/AM	none	Forced FM-mono mode, i.e. automatic switching is disabled

## 6.5. Demodulator Write Registers for the General Programming Mode: Functions and Values

## 6.5.1. Register 'AD\_CV'

Table 6-5: AD\_CV Register; reset status: all bits are "0"

	AD_CV 00BB <sub>hex</sub>		Set by Short-I	Programming
Bit	Meaning	Settings	AD_CV-FM	AD_CV-AM
AD_CV [0]	not used	must be set to 0	0	0
AD_CV [6:1]	Reference level in case of Automatic Gain Control = on (see Table 6–6). Constant gain factor when Automatic Gain Control = off (see Table 6–7).		101000	100011
AD_CV [7]	Determination of Automatic Gain or Constant Gain	0 = constant gain 1 = automatic gain	1	1
AD_CV [8]	Selection of Sound IF source	0 = ANA_IN1+ 1 = ANA_IN2+	not affected	not affected
AD_CV [9]	MSP-Carrier-Mute Function	0 = off: no mute 1 = on: mute as de- scribed in section 4.1.	1	0
AD_CV [15-10]	not used	must be set to 0	0	0

**Table 6–6:** Reference values for active AGC (AD\_CV[7] = 1)

Application	Input Signal Contains	AD_CV [6:1] Ref. Value	AD_CV [6:1] in integer	Range of Input Signal at pin ANA_IN1+ and ANA_IN2+
Terrestrial TV				
Dual Carr. FM	2 FM Carriers	101000	40	$0.10 - 3 V_{pp}^{1)}$
NICAM/FM	1 FM and 1 NICAM Carrier	101000	40	$0.10 - 3 V_{pp}^{1)}$
NICAM/AM	1 AM and 1 NICAM carrier	100011	35	0.10 - 1.4 V <sub>pp</sub> recommended: 0.10 - 0.8V <sub>pp</sub>
NICAM only	1 NICAM Carrier only	010100	20	0.05 – 1.0 V <sub>pp</sub>
SAT	1 or more FM Carriers	100011	35	0.10 – 3 V <sub>pp</sub> <sup>1)</sup>
ADR	FM a. ADR carriers	s. DRP 3510A data	sheet	

<sup>&</sup>lt;sup>1)</sup> For signals above 1.4 Vpp, the minimum gain of 3 dB is switched, and overflow of the A/D converter may result. Due to the robustness of the internal processing, the IC works up to and even more than 3 Vpp, if norm conditions of FM/ NICAM or FM1/FM2 ratio are supposed. In this overflow case, a loss of FM-S/N-ratio of about 10 dB may appear.

**Table 6–7:** AD\_CV parameters for constant input gain (AD\_CV[7]=0)

Step	AD_CV [6:1] Constant Gain	Gain	Input Level at pin ANA_IN1+ and ANA_IN2+
0	000000	3.00 dB	maximum input level: 3 V <sub>pp</sub> (FM) or 1 V <sub>pp</sub> (NICAM) <sup>1)</sup>
1	000001	3.85 dB	PP ( ) PP ( )
2	000010	4.70 dB	
3	000011	5.55 dB	
4	000100	6.40 dB	
5	000101	7.25 dB	
6	000110	8.10 dB	
7	000111	8.95 dB	
8	001000	9.80 dB	
9	001001	10.65 dB	
10	001010	11.50 dB	
11	001011	12.35 dB	
12	001100	13.20 dB	
13	001101	14.05 dB	
14	001110	14.90 dB	
15	001111	15.75 dB	
16	010000	16.60 dB	
17	010001	17.45 dB	
18	010010	18.30 dB	
19	010011	19.15 dB	
20	010100	20.00 dB	maximum input level: 0.14 V <sub>pp</sub>

<sup>&</sup>lt;sup>1)</sup> For signals above 1.4 Vpp, the minimum gain of 3 dB is switched, and overflow of the A/D converter may result. Due to the robustness of the internal processing, the IC works up to and even more than 3 Vpp, if norm conditions of FM/ NICAM or FM1/FM2 ratio are supposed. In this overflow case, a loss of FM-S/N-ratio of about 10 dB may appear.

26

# 6.5.2. Register 'MODE\_REG'

The register 'MODE\_REG' contains the control bits determining the operation mode of the MSP 3410D; Table 6–8 explains all bit positions.

Table 6-8: Control word 'MODE\_REG'; reset status: all bits are "0"

	MODE_REG 0083 <sub>hex</sub>						
Bit	Function	Comment	Definition	M1	M2	МЗ	
[0]	not used		0 : strongly recommended	0	0	0	
[1]	DCTR_TRI	Digital control out 0/1 tri-state	0 : active 1 : tri-state	Х	Х	Х	
[2]	I2S_TRI	I <sup>2</sup> S outputs tri-state (I2S_CL, I2S_WS, I2S_DA_OUT)	0 : active 1 : tri-state	X	Х	х	
[3]	I <sup>2</sup> S Mode <sup>1)</sup>	Master/Slave mode of the I <sup>2</sup> S bus	0 : Master 1 : Slave	Х	Х	Х	
[4]	I <sup>2</sup> S_WS Mode	WS due to the Sony or Philips-Format	0 : Sony 1 : Philips	Х	Х	Х	
[5]	Audio_CL_OUT	Switch Audio_Clock_Output to tri-state	0 : on 1 : tri-state	Х	Х	Х	
[6]	NICAM <sup>1)</sup>	Mode of MSP-Ch1	0 : FM 1 : Nicam	0	1	1	
[7]	not used		0 : strongly recommended	0	0	0	
[8]	FM AM	Mode of MSP-Ch2	0 : FM 1 : AM	0	0	1	
[9]	HDEV	High Deviation Mode (channel matrix must be sound A)	0 : normal 1 : high deviation mode	0	0	0	
[11:10]	not used		0 : strongly recommended	0	0	0	
[12]	MSP-Ch1 Gain	see also Table 6-11	0 : Gain = 6 dB 1 : Gain = 0 dB	0	0	0	
[13]	FIR1-Filter Coeff. Set	see also Table 6-11	0 : use FIR1 1 : use FIR2	1	0	0	
[14]	ADR	Mode of MSP-Ch1/ ADR-Interface	0 : normal mode/tri-state 1 : ADR-mode/active	0	0	0	
[15]	AM-Gain	Gain for AM Demodulation	0:0 dB (default. of MSPB) 1:12 dB (recommended)	1	1	1	
1) In c	ase of NICAM opera ase of I <sup>2</sup> S-slave mod	tion, I <sup>2</sup> S-slave mode is not pode, no synchronization to NIC	ossible. AM is allowed.		t affected -program		

Table 6-9: Channel modes 'MODE\_REG [6, 8, 9]'

NICAM bit[6]	FM AM bit[8]	HDEV bit[9]	MSP-Ch1	MSP-Ch2
1	0	0	NICAM	FM1
1	1	0	NICAM	AM
0	0	0	FM2	FM1
0	0	1	-:-	High Deviation FM

## 6.5.3. FIR-Parameter

The following data values (see Table 6–10) are to be transferred 8 bits at a time embedded LSB-bound in a 16-bit word.

The loading sequences must be obeyed. To change a coefficient set, the complete block FIR1 or FIR2 must be transmitted.

**Note:** For compatibility with MSP 3410B, IMREG1 and IMREG2 have to be transmitted. The value for IMREG1 and IMREG2 is 004. Due to the partitioning to 8-bit units, the values 04hex, 40hex, and 00hex arise.

**Table 6–10:** Loading sequence for FIR-coefficients

FIR1	FIR1 0001 <sub>hex</sub> (MSP-Ch1: NICAM/FM2)								
No.	Symbol Name	Bits	Value						
1	NICAM/FM2_Coeff. (5)	8							
2	NICAM/FM2_Coeff. (4)	8							
3	NICAM/FM2_Coeff. (3)	8	see Table 6–11						
4	NICAM/FM2_Coeff. (2)	8							
5	NICAM/FM2_Coeff. (1)	8							
6	NICAM/FM2_Coeff. (0)	8							
FIR2	FIR2 0005 <sub>hex</sub> (MSP-Ch2: FM1/AM)								
No.	Symbol Name	Bits	Value						
1	IMREG1	8	04 HEX						
2	IMREG1 / IMREG2	8	40 HEX						
3	IMREG2	8	00 HEX						
4	FM/AM_Coef (5)	8							
5	FM/AM_Coef (4)	8							
6	FM/AM_Coef (3)	8							
7	FM/AM_Coef (2)	8	see Table 6–11						
8	FM/AM_Coef (1)	8							
9	FM/AM_Coef (0)	8							

Table 6-11: 8-bit FIR-coefficients (decimal integer) for MSP 3410D; reset status: all coefficients are "0"

Coefficien	Coefficients for FIR1 0001 <sub>hex</sub> and FIR2 0005 <sub>hex</sub>													
	Terrestrial TV-Standards							FIR fil bandp	Satellite Iter corre pass with of B = 10	a band-			f <sub>c</sub> 1	requency
	B/G-, D/K- I- L- B/G-,D/K-, NICAM-FM NICAM-AM M-Dual FM					130 kHz	180 kHz	200 kHz	280 kHz	380 kHz	500 kHz	Auto- search		
Coef(i)	FIR1	FIR2	FIR1	FIR2	FIR1	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2
0	-2	3	2	3	-2	-4	3	73	9	3	-8	-1	-1	-1
1	-8	18	4	18	-8	-12	18	53	18	18	-8	-9	-1	-1
2	-10	27	-6	27	-10	-9	27	64	28	27	4	-16	-8	-8
3	10	48	-4	48	10	23	48	119	47	48	36	5	2	2
4	50	66	40	66	50	79	66	101	55	66	78	65	59	59
5	86	72	94	72	86	126	72	127	64	72	107	123	126	126
MODE- REG[12]	(	)	(	)	(	)	0	1	1	1	1	1	1	0
MODE- REG[13]	(	)	(	)	(	)	1	1	1	1	1	1	1	0

For compatibility, except for the FIR2-AM and the Autosearch-sets, the FIR-filter programming as used for the MSP 3410B is also possible.

ADR coefficients are listed in the DRP data sheet.

## 6.5.4. DCO-Registers

For a chosen TV standard, a corresponding set of 24-bit registers determining the mixing frequencies of the quadrature mixers, has to be written into the IC. In Table 6–12, some examples of DCO registers are listed. It is necessary to divide them up into low part and high part. The formula for the calculation of the registers for any chosen IF-Frequency is as follows:

INCR<sub>dez</sub> = int(f/fs  $\cdot$  2<sup>24</sup>)

with: int = integer function

f = IF-frequency in MHz

f<sub>S</sub> = sampling frequency (18.432 MHz)

Conversion of INCR into hex-format and separation of the 12-bit low and high parts lead to the required register values (DCO1\_HI or \_LO for MSP-Ch1, DCO2\_HI or LO for MSP-Ch2).

## ■ Table 6–12: DCO registers for the MSP 3410D; reset status: DCO\_HI/LO = "0000"

	DCO1_LO 0093 <sub>hex</sub> , DCO1_HI 009B <sub>hex</sub> ; DCO2_LO 00A3 <sub>hex</sub> , DCO2_HI 00AB <sub>hex</sub>									
Frq. MHz	DCO_HI/hex	DCO_LO/hex	Frq. MHz	DCO_HI/hex	DCO_LO/hex					
4.5	03E8	000								
5.04 5.5 5.58 5.7421875	0460 04C6 04D8 04FC	0000 038E 0000 00AA	5.76 5.85 5.94	0500 0514 0528	0000 0000 0000					
6.0 6.2 6.5 6.552	0535 0561 05A4 05B0	0555 0C71 071C 0000	6.6 6.65 6.8	05BA 05C5 05E7	0AAA 0C71 01C7					
7.02	0618	0000	7.2	0640	0000					
7.38	0668	0000	7.56	0690	0000					

30

# 6.6. Demodulator Read Registers: Functions and Values

All registers except C\_AD\_BITs are 8 bit wide. They can be read out of the RAM of the MSP 3410D.

All transmissions take place in 16-bit words. The valid 8 bit data are the 8 LSBs of the received data word.

To enable appropriate switching of the channel select matrix of the baseband processing part, the NICAM or FM-identification parameters must be read and evaluated by the CCU. The FM-identification registers are described in section 7.2. To handle the NICAM-sound and to observe the NICAM-quality, at least the registers C\_AD\_BITS and ERROR\_RATE must be read and evaluated by the CCU. Additional data bits and CIB bits, if supplied by the NICAM transmitter, can be obtained by reading the registers ADD\_BITS and CIB\_BITS.

Observing the presence and quality of NICAM can be delegated to the MSP 3410D, if the automatic switching feature (AUTO\_FM, section 6.6.1.) is applied.

Table 6-13: Result of Autodetection

	Result of Autodetect	007E hex						
Code (Data) hex	Detected TV-Sound Standard Note: After detection the detected standard is set automatically according to Table 6–3.							
>07FF	autodetect still active		_					
0000	no TV Sound Standard was detected; select so	ound standard manually						
0002	M Dual-FM, even if only FM1 is available							
0003	B/G Dual-FM, even if only FM1 is available							
8000	B/G-FM-NICAM, only if NICAM is available							
	L_AM-NICAM, whenever a 6.5 MHz carrier is detected, even if NICAM is not If also D/K might be possible a decision has to be made according to the vide							
		Video = SECAM_EAS	ST					
0009		CAD_BITS[0] = 0	CAD_BITS[0] = 1					
	Video = SECAM_L —> no more activities necessary	To be set by means or mode:	f the short programming					
		D/K1 or D/K2 see section 6.6.1.	D/K-NICAM (standard 000Bhex)					
000A	I-FM-NICAM, even if NICAM is not available							

**Note:** Similar as for the Demodulator Short-Programming the Autodetection does not affect most of the parameters of the DSP section (Audio Baseband Processing): The following exceptions are to be considered:

- identification mode: Autodetection resets and sets the detected mode
- Prescale FM/AM & FM matrix and Deemphasis FM are undefined after Autodetection

### 6.6.1. Autodetect of Terrestrial TV-Audio Standards

By means of autodetect, the MSP 3410D offers a simple and fast (<0.5 s) facility to detect the actual TV-audio standard. The algorithm checks for the FM-mono and NICAM carriers of all common TV-Sound Standards. The following notes must be considered when applying the autodetect feature:

- 1. Since there is no way to distinguish between AM and FM-carrier, a carrier detected at 6.5 MHz is interpreted as an AM-carrier. If video detection results in SECAM-East, the MSPD result "9" of autodetect must be reinterpreted as "Bhex" in case of CAD\_BITS[0] = 1, or as "4" or "5" by using the demodulator short programming mode. A simple decision can be made between the two D/K FM-stereo standards by setting D/K1 and D/K2 using the short programming mode and checking the identification of both versions (see Table 6–13).
- 2. During active autodetect, no I<sup>2</sup>C-transfers besides reading the autodetect result are recommended. Results exceeding 07FFhex indicate an active autodetect.
- 3. The results are to be understood as static information, i.e. no evaluation of FM or NICAM identification concerning the dynamic mode (stereo, bilingual, or mono) are done.
- 4. Before switching to autodetect, the audio processing part should be muted. Do not forget to demute after having received the result.

6.6.2. C\_AD\_BITS

NICAM operation mode control bits and A[2:0] of the additional data bits.

Format:

MSB	C_AD_BITS 0023 <sub>hex</sub>									
11	 7	6	5	4	3	2	1	0		
Auto _FM	 A[2]	A[1]	A[0]	C4	C3	C2	C1	S		

**Important:** "S" = Bit[0] indicates correct NICAM-synchronization (S=1). If S=0, the MSP 3410D has not yet synchronized correctly to frame and sequence, or has lost synchronization. The remaining read registers are therefore not valid. The MSP 3410D mutes the NICAM output automatically and tries to synchronize again as long as MODE\_REG[6] is set.

The operation mode is coded by C4-C1 as shown in Table 6–14.

**Table 6–14:** NICAM operation modes as defined by the EBU NICAM 728 specification

C4	C3	C2	C1	Operation Mode
0	0	0	0	Stereo sound (NICAMA/B), independent mono sound (FM1)
0	0	0	1	Two independent mono signals (NICAMA, FM1)
0	0	1	0	Three independent mono channels (NICAMA, NICAMB, FM1)
0	0	1	1	Data transmission only; no audio
1	0	0	0	Stereo sound (NICAMA/B), FM1 carries same channel
1	0	0	1	One mono signal (NICAMA). FM1 carries same channel as NICAMA
1	0	1	0	Two independent mono channels (NICAMA, NICAMB). FM1 carries same channel as NICAMA
1	0	1	1	Data transmission only; no audio
х	1	х	х	Unimplemented sound coding option (not yet defined by EBU NICAM 728 specification)

AUTO\_FM: monitor bit for the AUTO\_FM Status:

0: NICAM source is NICAM1: NICAM source is FM

# 6.6.3. ADD\_BITS [10:3] 0038<sub>hex</sub>

Contains the remaining 8 of the 11 additional data bits. The additional data bits are not yet defined by the NI-CAM 728 system.

### Format:

MSB		ADD_BITS 0038 <sub>hex</sub> LSI								
7	6	5	4	3	2	1	0			
A[10]	A[9]	A[8]	A[7]	A[6]	A[5]	A[4]	A[3]			

# 6.6.4. CIB\_BITS

Cib bits 1 and 2 (see NICAM 728 specifications)

### Format:

MSB		CIB_BITS 003E <sub>hex</sub> LSB							
7	6	5	4	3	2	1	0		
х	х	х	х	х	х	CIB1	CIB2		

## 6.6.5. ERROR\_RATE 0057<sub>hex</sub>

Average error rate of the NICAM reception in a time interval of 182 ms, which should be close to 0.. The initial and maximum value of ERROR\_RATE is 2047. This value is also active, if the NICAM bit of MODE\_REG is not set. Since the value is achieved by filtering, a certain transition time (appr. 0.5 sec) is unavoidable. Acceptable audio may have error\_rates up to a value of 700int. Individual evaluation of this value by the CCU and an appropriate threshold may define the fallback mode from NICAM to FM/AM-mono in case of poor NICAM reception.

The bit error rate per second (BER) can be calculated by means of the following formula:

BER= ERROR RATE \* 7.8\*10-6/s

If the automatic switching feature (AUTO\_FM; section 6.4.2.) is applied, reading of ERROR\_RATE can be omitted.

## 6.6.6. CONC\_CT (for compatibility with MSP 3410B)

This register contains the actual number of bit errors of the previous 728-bit data frame. Evaluation of CONC\_CT is no longer recommended.

## 6.6.7. FAWCT\_IST (for compatibility with MSP3410B)

For compatibility with MSP 3410B this value equals 12 as long as NICAM quality is sufficient. It decreases to 0 if NICAM reception gets poor. Evaluation of FAWCT\_IST is no longer recommended.

# 6.6.8. PLL\_CAPS

It is possible to read out the actual setting of the PLL\_CAPS. In standard applications, this register is not of interest for the customer.

PLL_CAPS	021F <sub>hex</sub>	
minimum frequency	0111 1111	7F <sub>hex</sub>
nominal frequency	0101 0110 RESET	56 <sub>hex</sub>
maximum frequency	0000 0000	00 <sub>hex</sub>

### 6.6.9. AGC GAIN

It is possible to read out the actual setting of AGC\_GAIN in Automatic Gain Mode. In standard applications, this register is not of interest for the customer.

AGC_GAIN	021E <sub>hex</sub>	
max. amplification (20 dB)	0001 0100	14 <sub>hex</sub>
min. amplification (3 dB)	0000 0000	00 <sub>hex</sub>

# 6.7. Sequences to Transmit Parameters and to Start Processing

After having been switched on, the MSP has to be initialized by transmitting the parameters according to the LOAD\_SEQ\_1/2 of Table 6–15. The data are immediately active after transmission into the MSP. It is no longer necessary to transmit LOAD\_REG\_1/2 or LOAD\_REG\_1 as it was for MSP 3410B. Nevertheless, transmission of LOAD\_REG\_1/2 or LOAD\_REG\_1 does no harm.

For NICAM operation, the following steps listed in 'NI-CAM\_WAIT, \_READ and \_Check' in Table 6–15 must be taken.

For FM-stereo operation, the evaluation of the identification signal must be performed. For a positive identification check, the MSP 3410D sound channels have to be switched corresponding to the detected operation mode.

Table 6-15: Sequences to initialize and start the MSP 3410D

LOAD_SEQ_1/2: General Initialization					
General Programming Mode	Demodulator Short Programming				
Write into MSP 3410D:	Write into MSP 3410D:				
1. AD_CV 2. FIR1 3. FIR2 4. MODE_REG 5. DCO1_LO 6. DCO1_HI 7. DCO2_LO 8. DCO2_HI	For example: Addr: 0020hex, Data 0008hex Alternatively, for terrestrial reception, the autodetect feature can be applied.				

## **AUDIO PROCESSING INIT**

Initialization of Audio Baseband Processing section, which may be customer dependant (see section 7.).

NICAM WAIT: Automatic Start of the NICAM-Decoder if Bit[6] of MODE REG is set to 1

1. Wait at least 0.25 s

NICAM\_CHECK: Read NICAM specific information and check for presence, operation mode, and quality of NICAM signal.

Read out of MSP 3410D:

- 1. C\_AD\_BITS
- 2. CONC\_CT or ERROR\_RATE; if AUTO\_FM is active, reading of CONC\_CT or ERROR\_RATE can be omitted.

Evaluation of C\_AD\_BITS and CONC\_CT or ERROR\_RATE in the CCU (see section 6.6.).

If necessary, switch the corresponding sound channels within the audio baseband processing section.

FM\_WAIT: Automatic start of the FM-identification process if Bit[6] of MODE\_REG is set to 0.

- 1. Ident Reset
- 2. Wait at least 0.5 s

FM\_IDENT\_CHECK: Read FM specific information and check for presence, operation mode, and quality of dual carrier FM.

Read out of MSP 3410D:

1. Stereo detection register (DSP register 0018<sub>hex</sub>, high part)

Evaluation of the stereo detection register (see section 7.5.1.)

If necessary, switch the corresponding sound channels within the audio baseband processing section

## LOAD\_SEQ\_1: Reinitialization of Channel 1 without affecting Channel 2

Write into MSP 3410D:		Write into MSP 3410D:
1. FIR1 2. MODE_REG 3. DCO1_LO 4. DCO1_HI	(6 · 8 bit) (12 bit) (12 bit)	For example: Addr: 0020hex, Data: 0003hex

PAUSE: Duration of "Pause" determines the repetition rate of the NICAM or the FM\_IDENT-check.

Note: If downwards compatibility to the MSP3410B is required, the MSP 3410D may be programmed according to the MSP 3410B data sheet.


## 6.8. Software Proposals for Multistandard TV-Sets

To familiarize the reader with the programming scheme of the MSP 3410D demodulator part, three examples in the shape of flow diagrams are shown in the following sections.

# 6.8.1. Multistandard Including System B/G with NI-CAM/FM-Mono only

Fig. 6–1 shows a flow diagram for the CCU software, applied for the MSP 3410D in a TV set, which facilitates NICAM and FM-mono sound. For the instructions, please refer to Table 6–15.

If the program is changed, resulting in another program within the Scandinavian System B/G, no parameters of the MSP 3410D need be modified. To facilitate the check for NICAM, the CCU has only to continue at the 'NICAM\_WAIT' instruction. During the NICAM-identification process, the MSP 3410D must be switched to the FM-mono sound.

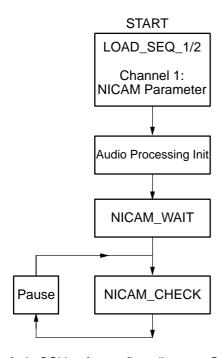

**Fig. 6–1:** CCU software flow diagram: Standard B/G/I NICAM/FM mono only

# 6.8.2. Multistandard Including System I with NICAM/FM-Mono only

This case is identical to the one above. The only difference consists in selecting the UK parameters for DCO1\_LO/HI, DCO2\_LO/HI, and FIR1.

## 6.8.3. Multistandard Including System B/G with NI-CAM/FM-Mono and German DUAL FM

Fig. 6–3 shows a flow diagram for the CCU software, applied for the MSP 3410D in a TV set, which facilitates all standards according to System B/G. For the instructions used in the diagram, please refer to Table 6–15.

After having switched on the TV-set and having initialized the MSP 3410D (LOAD\_SEQ\_1/2), FM-mono sound is available.

Fig. 6–3 shows that to check for any stereo or bilingual audio information in channel 1, its parameter should be loaded with NICAM and FM2 parameters, alternately (LOAD\_SEQ\_1). If successful, the MSP 3410 D must switch to the desired audio mode.

## 6.8.4. Satellite Mode

Fig. 6–2 shows the simple flow diagram to be used for the MSP 3410D in a satellite receiver. For FM-mono operation, the corresponding FM carrier should preferably be processed at the MSP-channel 2.


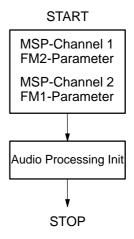


Fig. 6–2: CCU software flow diagram: SAT-mode

# 6.8.5. Automatic Search Function for FM-Carrier Detection

The AM demodulation ability of the MSP 3410D offers the possibility to calculate the "field strength" of the momentarily selected FM carrier, which can be read out by the CCU. In SAT receivers, this feature can be used to make automatic FM carrier search possible.

Therefore, the MSPD has to be switched to AM-mode (MODE\_REG[8]), FM-Prescale must be set to  $7F_{hex}$ =+127 $_{dez}$ , and the FM DC notch must be switched off. The sound-IF frequency range must now be "scanned" in the MSPD-channel 2 by means of the programmable quadrature mixer with an appropriate incremental frequency (i.e. 10 kHz).

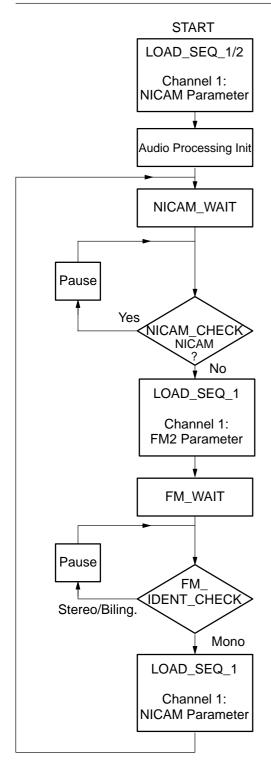

**Fig. 6–3:** CCU software flow diagram: Standard B/G with NICAM or FM stereo

After each incrementation, a field strength value is available at the quasi-peak detector output (quasi-peak detector source must be set to FM), which must be examined for relative maxima by the CCU. This results in either continuing search or switching the MSP 3410D back to FM demodulation mode.

During the search process, the FIR2 must be loaded with the coefficient set "AUTOSEARCH", which enables small bandwidth, resulting in appropriate field strength characteristics. The absolute field strength value (can be read out of "quasi peak detector output FM1") also gives information on whether a main FM carrier or a subcarrier was detected, and as a practical consequence, the FM bandwidth (FIR1/2) and the deemphasis (50  $\mu s$  or adaptive) can be switched automatically.

Due to the fact that a constant demodulation frequency offset of a few kHz, leads to a DC-level in the demodulated signal, further fine tuning of the found carrier can be achieved by evaluating the "DC Level Readout FM1". Therefore, the FM DC Notch must be switched on, and the demodulator part must be switched back to FM-demodulation mode.

For a detailed description of the automatic search function, please refer to the corresponding MSP 3410D Windows software.

**Note:** The automatic search is still possible by evaluating only the DC Level Readout FM1 (DC Notch On) as it is described with the MSP 3410B, but the above mentioned method is faster. If this DC Level method is applied with the MSP 3410D, it is recommended to set MODE\_REG[15] to 1 (AM-Gain= 12 dB) and to use the new Autosearch FIR2 coefficient set as given in Table 6–11

36 MICRONAS INTERMETALL

# 7. Programming the DSP Section (Audio Baseband Processing)

# 7.1. DSP Write Registers: Table and Addresses

**Table 7–1:** DSP Write Registers; Subaddress: 12 hex; if necessary these registers are readable as well.

DSP Write Register	Address	High/ Low	Adjustable Range, Operational Modes	Reset Mode
Volume loudspeaker channel	0000 <sub>hex</sub>	Н	[+12 dB –114 dB, MUTE]	MUTE
Volume / Mode loudspeaker channel		L	1/8 dB Steps, Reduce Volume / Tone Control	00 <sub>hex</sub>
Balance loudspeaker channel [L/R]	0001 <sub>hex</sub>	Н	[0100 / 100 % and vv][-1270 / 0 dB and vv]	100%/100%
Balance Mode loudspeaker		L	[Linear mode / logarithmic mode]	linear mode
Bass loudspeaker channel	0002 <sub>hex</sub>	Н	[+20 dB –12 dB]	0 dB
Treble loudspeaker channel	0003 <sub>hex</sub>	Н	[+15 dB –12 dB]	0 dB
Loudness loudspeaker channel	0004 <sub>hex</sub>	Н	[0 dB +17 dB]	0 dB
Loudness Filter Characteristic		L	[NORMAL, SUPER_BASS]	NORMAL
Spatial effect strength loudspeaker ch.	0005 <sub>hex</sub>	Н	[-100%OFF+100%]	OFF
Spatial effect mode/customize		L	[SBE, SBE+PSE]	SBE+PSE
Volume headphone channel	0006 <sub>hex</sub>	Н	[+12 dB –114 dB, MUTE]	MUTE
Volume / Mode headphone channel	•	L	1/8 dB Steps, Reduce Volume / Tone Control	00 <sub>hex</sub>
Volume SCART1 channel	0007 <sub>hex</sub>	Н	[00 <sub>hex</sub> 7F <sub>hex</sub> ],[+12 dB –114 dB, MUTE]	00 <sub>hex</sub>
Volume / Mode SCART1 channel		L	[Linear mode / logarithmic mode]	linear mode
Loudspeaker channel source	0008 <sub>hex</sub>	Н	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM
Loudspeaker channel matrix		L	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA
Headphone channel source	0009 <sub>hex</sub>	Н	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM
Headphone channel matrix		L	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA
SCART1 channel source	000a <sub>hex</sub>	Н	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM
SCART1 channel matrix		L	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA
I <sup>2</sup> S channel source	000b <sub>hex</sub>	Н	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM
I <sup>2</sup> S channel matrix		L	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA
Quasi-peak detector source	000c <sub>hex</sub>	Н	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM
Quasi-peak detector matrix	•	L	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA
Prescale SCART	000d <sub>hex</sub>	Н	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	00 <sub>hex</sub>
Prescale FM/AM	000e <sub>hex</sub>	Н	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	00 <sub>hex</sub>
FM matrix	1	L	[NO_MAT, GSTEREO, KSTEREO]	NO_MAT
Deemphasis FM	000f <sub>hex</sub>	Н	[OFF, 50 μs, 75 μs, J17]	50 μs
Adaptive Deemphasis FM		L	[OFF, WP1]	OFF
Prescale NICAM	0010 <sub>hex</sub>	Н	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	00 <sub>hex</sub>
Prescale I <sup>2</sup> S2	0012 <sub>hex</sub>	Н	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	10 <sub>hex</sub>

DSP Write Register	Address	High/ Low	Adjustable Range, Operational Modes	Reset Mode
ACB Register (SCART Switching Facilities and Digital Control Output Pins)	0013 <sub>hex</sub>	H/L	Bits [150]	00 <sub>hex</sub>
Beeper	0014 <sub>hex</sub>	H/L	[00 <sub>hex</sub> 7F <sub>hex</sub> ]/[00 <sub>hex</sub> 7F <sub>hex</sub> ]	0/0
Identification Mode	0015 <sub>hex</sub>	L	[B/G, M]	B/G
Prescale I <sup>2</sup> S1	0016 <sub>hex</sub>	Н	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	10 <sub>hex</sub>
FM DC Notch	0017 <sub>hex</sub>	L	[ON, OFF]	ON
Mode Tone Control	0020 <sub>hex</sub>	Н	[BASS/TREBLE, EQUALIZER]	BASS/TREB
Equalizer loudspeaker ch. band 1	0021 <sub>hex</sub>	Н	[+12 dB –12 dB]	0 dB
Equalizer loudspeaker ch. band 2	0022 <sub>hex</sub>	Н	[+12 dB –12 dB]	0 dB
Equalizer loudspeaker ch. band 3	0023 <sub>hex</sub>	Н	[+12 dB –12 dB]	0 dB
Equalizer loudspeaker ch. band 4	0024 <sub>hex</sub>	Н	[+12 dB –12 dB]	0 dB
Equalizer loudspeaker ch. band 5	0025 <sub>hex</sub>	Н	[+12 dB –12 dB]	0 dB
Automatic Volume Correction	0029 <sub>hex</sub>	Н	[off, on, decay time]	off
Volume Subwoofer channel	002Chex	Н	[0dB30 dB, mute]	0 dB
Subwoofer Channel Corner Frequency	002Dhex	Н	[50 Hz 400 Hz]	
Subwoofer: Complementary Highpass		L	[off, on]	off
Balance headphone channel [L/R]	0030 <sub>hex</sub>	Н	[0100 / 100% and vv][-1270 / 0 dB and vv]	100%/100%
Balance Mode headphone		L	[Linear mode / logarithmic mode]	linear mode
Bass headphone channel	0031 <sub>hex</sub>	Н	[+20 dB –12 dB]	0 dB
Treble headphone channel	0032 <sub>hex</sub>	Н	[+15 dB –12 dB]	0 dB
Loudness headphone channel	0033 <sub>hex</sub>	Н	[0 dB +17 dB]	0 dB
Loudness filter characteristic		L	[NORMAL, SUPER_BASS]	NORMAL
Volume SCART2 channel	0040 <sub>hex</sub>	Н	[00 <sub>hex</sub> 7F <sub>hex</sub> ],[+12 dB114 dB, MUTE]	00 <sub>hex</sub>
Volume / Mode SCART2 channel		L	[Linear mode / logarithmic mode]	linear mode
SCART2 channel source	0041 <sub>hex</sub>	Н	[FM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM
SCART2 channel matrix		L	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA

38 MICRONAS INTERMETALL

MSP 3410D

# 7.2. DSP Read Registers: Table and Addresses

**Table 7–2:** DSP Read Registers; Subaddress: 13 hex; these registers are not writeable.

DSP Read Register	Address	High/Low	Output Range
Stereo detection register	0018 <sub>hex</sub>	Н	[80 <sub>hex</sub> 7F <sub>hex</sub> ] 8 bit two's complement
Quasi peak readout left	0019 <sub>hex</sub>	H&L	[00 <sub>hex</sub> 7FFF <sub>hex</sub> ] 16 bit two's complement
Quasi peak readout right	001a <sub>hex</sub>	H&L	[00 <sub>hex</sub> 7FFF <sub>hex</sub> ] 16 bit two's complement
DC level readout FM1/Ch2-L	001b <sub>hex</sub>	H&L	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ] 16 bit two's complement
DC level readout FM2/Ch1-R	001c <sub>hex</sub>	H&L	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ] 16 bit two's complement
MSP hardware version code	001e <sub>hex</sub>	Н	[00 <sub>hex</sub> FF <sub>hex</sub> ]
MSP major revision code		L	[00 <sub>hex</sub> FF <sub>hex</sub> ]
MSP product code	001f <sub>hex</sub>	Н	[00 <sub>hex</sub> 0A <sub>hex</sub> ]
MSP ROM version code		L	[00 <sub>hex</sub> FF <sub>hex</sub> ]

## 7.3. DSP Write Registers: Functions and Values

Write registers are 16 bit wide, whereby the MSB is denoted bit [15]. Transmissions via I<sup>2</sup>C bus have to take place in 16-bit words. Some of the defined 16-bit words are divided into low [7:0] and high [15:8] byte, or in an other manner, thus holding two different control entities. All write registers are readable. Unused parts of the 16-bit registers must be zero. Addresses not given in this table must not be written at any time!

7.3.1. Volume Loudspeaker and Headphone Channel

Volume Loudspeaker	0000 <sub>hex</sub>	[15:4]
Volume Headphone	0006 <sub>hex</sub>	[15:4]
+12 dB	0111 1111 0000	7F0 <sub>hex</sub>
+11.875 dB	0111 1110 1110	7EE <sub>hex</sub>
+0.125 dB	0111 0011 0010	732 <sub>hex</sub>
0 dB	0111 0011 0000	730 <sub>hex</sub>
-0.125 dB	0111 0010 1110	72E <sub>hex</sub>
-113.875 dB	0000 0001 0010	012 <sub>hex</sub>
–114 dB	0000 0001 0000	010 <sub>hex</sub>
Mute	0000 0000 0000 RESET	000 <sub>hex</sub>
Fast Mute	1111 1111 1110	FFE <sub>hex</sub>

The highest given positive 12-bit number (7F0<sub>hex</sub>) yields in a maximum possible gain of 12 dB. Decreasing the volume register by 2 LSBs decreases the volume by 0.125 dB. Volume settings lower than the given minimum mute the output. With large scale input signals, positive volume settings may lead to signal clipping.

The MSPD loudspeaker and headphone volume function is divided up into a digital and an analog section.

With Fast Mute, volume is reduced to mute position by digital volume only. Analog volume is not changed. This reduces any audible DC plops. Going back from Fast Mute should be done to the volume step before Fast Mute was activated.

Clipping Mode Loudspeaker	0000 <sub>hex</sub>	[3:0]
Clipping Mode Headphone	0006 <sub>hex</sub>	[3:0]
Reduce Volume	0000 RESET	0 <sub>hex</sub>
Reduce Tone Control	0001	1 <sub>hex</sub>
Compromise Mode	0010	2 <sub>hex</sub>

If the clipping mode is set to "Reduce Volume", the following clipping procedure is used: To prevent severe clipping effects with bass, treble, or equalizer boosts, the internal volume is automatically limited to a level where, in combination with either bass, treble, or equalizer setting, the amplification does not exceed 12 dB.

If the clipping mode is "Reduce Tone Control", the bass or treble value is reduced if amplification exceeds 12 dB. If the equalizer is switched on, the gain of those bands is reduced, where amplification together with volume exceeds 12 dB.

If the clipping mode is "Compromise Mode", the bass or treble value and volume are reduced half and half if amplification exceeds 12 dB. If the equalizer is switched on, the gain of those bands is reduced half and half, where amplification together with volume exceeds 12 dB.

Example:	Vol.: +6 dB	Bass: +9 dB	Treble: +5 dB
Red. Volume	3	9	5
Red. Tone Con.	6	6	5
Compromise	4.5	7.5	5

# 7.3.2. Balance Loudspeaker and Headphone Channel

Positive balance settings reduce the left channel without affecting the right channel; negative settings reduce the right channel leaving the left channel unaffected. In linear mode, a step by 1 LSB decreases or increases the balance by about 0.8% (exact figure: 100/127). In logarithmic mode, a step by 1 LSB decreases or increases the balance by 1 dB.

Balance Mode Loudspeaker	0001 <sub>hex</sub>	[3:0]
Balance Mode Headphone	0030 <sub>hex</sub>	[3:0]
linear	0000 RESET	0 <sub>hex</sub>
logarithmic	0001	1 <sub>hex</sub>

Linear Mode			
Balance Loudspeaker Channel [L/R]	0001 <sub>hex</sub>	н	
Balance Headphone Channel [L/R]	0030 <sub>hex</sub>	Н	
Left muted, Right 100%	0111 1111	7F <sub>hex</sub>	
Left 0.8%, Right 100%	0111 1110	7E <sub>hex</sub>	
Left 99.2%, Right 100%	0000 0001	01 <sub>hex</sub>	
Left 100%, Right 100%	0000 0000 RESET	00 <sub>hex</sub>	
Left 100%, Right 99.2%	1111 1111	FF <sub>hex</sub>	
Left 100%, Right 0.8%	1000 0010	82 <sub>hex</sub>	
Left 100%, Right muted	1000 0001	81 <sub>hex</sub>	

Logarithmic Mode				
Balance Loudspeaker Channel [L/R]	0001 <sub>hex</sub>	Н		
Balance Headphone Channel [L/R]	0030 <sub>hex</sub>	Н		
Left –127 dB, Right 0 dB	0111 1111	7F <sub>hex</sub>		
Left –126 dB, Right 0 dB	0111 1110	7E <sub>hex</sub>		
Left -1 dB, Right 0 dB	0000 0001	01 <sub>hex</sub>		
Left 0 dB, Right 0 dB	0000 0000 RESET	00 <sub>hex</sub>		
Left 0 dB, Right –1 dB	1111 1111	FF <sub>hex</sub>		
Left 0 dB, Right –127 dB	1000 0001	81 <sub>hex</sub>		
Left 0 dB, Right –128 dB	1000 0000	80 <sub>hex</sub>		

# 7.3.3. Bass Loudspeaker and Headphone Channel

Bass Loudspeaker	0002 <sub>hex</sub>	Н
Bass Headphone	0031 <sub>hex</sub>	Н
+20 dB	0111 1111	7F <sub>hex</sub>
+18 dB	0111 1000	78 <sub>hex</sub>
+16 dB	0111 0000	70 <sub>hex</sub>
+14 dB	0110 1000	68 <sub>hex</sub>
+12 dB	0110 0000	60 <sub>hex</sub>
+11 dB	0101 1000	58 <sub>hex</sub>
+1 dB	0000 1000	08 <sub>hex</sub>
. 1 /OID		
+1/8 dB	0000 0001	01 <sub>hex</sub>
0 dB	0000 0001 0000 0000 RESET	01 <sub>hex</sub>
,	0000 0000	
0 dB	0000 0000 RESET	00 <sub>hex</sub>
0 dB -1/8 dB	0000 0000 RESET 1111 1111	00 <sub>hex</sub>

With positive bass settings, internal overflow may occur even with overall volume less than 0 dB. This will lead to a clipped output signal. Therefore, it is not recommended to set bass to a value that, in conjunction with volume, would result in an overall positive gain.

Loudspeaker channel: Bass and Equalizer cannot work simultaneously (see Table: Mode Tone Control). If Equalizer is used, Bass and Treble coefficients must be set to zero and vice versa.

# 7.3.4. Treble Loudspeaker and Headphone Channel

Treble Loudspeaker	0003 <sub>hex</sub>	Н
Treble Headphone	0032 <sub>hex</sub>	Н
+15 dB	0111 1000	78 <sub>hex</sub>
+14 dB	0111 0000	70 <sub>hex</sub>
+1 dB	0000 1000	08 <sub>hex</sub>
+1/8 dB	0000 0001	01 <sub>hex</sub>
0 dB	0000 0000 RESET	00 <sub>hex</sub>
-1/8 dB	1111 1111	FF <sub>hex</sub>
–1 dB	1111 1000	F8 <sub>hex</sub>
–11 dB	1010 1000	A8 <sub>hex</sub>
–12 dB	1010 0000	A0 <sub>hex</sub>

With positive treble settings, internal overflow may occur even with overall volume less than 0 dB. This will lead to a clipped output signal. Therefore, it is not recommended to set treble to a value that, in conjunction with volume, would result in an overall positive gain.

Loudspeaker channel: Treble and Equalizer cannot work simultaneously (see Table: Mode Tone Control). If Equalizer is used, Bass and Treble coefficients must be set to zero and vice versa.

7.3.5. Loudness Loudspeaker and Headphone Channel

Loudness Loudspeaker	0004 <sub>hex</sub>	Н
Loudness Headphone	0033 <sub>hex</sub>	Н
+17 dB	0100 0100	44 <sub>hex</sub>
+16 dB	0100 0000	40 <sub>hex</sub>
+1 dB	0000 0100	04 <sub>hex</sub>
0 dB	0000 0000 RESET	00 <sub>hex</sub>

Mode Loudness Loudspeaker	0004 <sub>hex</sub>	L
Mode Loudness Headphone	0033 <sub>hex</sub>	٦
Normal (constant volume at 1 kHz)	0000 0000 RESET	00 <sub>hex</sub>
Super Bass (constant volume at 2 kHz)	0000 0100	04 <sub>hex</sub>

Loudness increases the volume of low and high frequency signals, while keeping the amplitude of the 1 kHz reference frequency constant. The intended loudness has to be set according to the actual volume setting. Because loudness introduces gain, it is not recommended to set loudness to a value that ,in conjunction with volume, would result in an overall positive gain.

By means of 'Mode Loudness', the corner frequency for bass amplification can be set to two different values. In Super Bass mode, the corner frequency is shifted up. The point of constant volume is shifted from 1 kHz to 2 kHz.

## 7.3.6. Spatial Effects Loudspeaker Channel

Spatial Effect Strength Loudspeaker	0005 <sub>hex</sub>	Н
Enlargement 100%	0111 1111	7F <sub>hex</sub>
Enlargement 50%	0011 1111	3F <sub>hex</sub>
Enlargement 1.5%	0000 0001	01 <sub>hex</sub>
Effect off	0000 0000 RESET	00 <sub>hex</sub>
Reduction 1.5%	1111 1111	FF <sub>hex</sub>
Reduction 50%	1100 0000	C0 <sub>hex</sub>
Reduction 100%	1000 0000	80 <sub>hex</sub>

Spatial Effect Mode Loudspeaker	0005 <sub>hex</sub>	[7:4]
Stereo Basewidth Enlargement (SBE) and Pseudo Stereo Effect (PSE). (Mode A)	0000 RESET 0000	0 <sub>hex</sub>
Stereo Basewidth Enlargement (SBE) only. (Mode B)	0010	2 <sub>hex</sub>

Spatial Effect Customize Coefficient Loudspeaker	0005 <sub>hex</sub>	[3:0]
max high pass gain	0000 RESET	0 <sub>hex</sub>
2/3 high pass gain	0010	2 <sub>hex</sub>
1/3 high pass gain	0100	4 <sub>hex</sub>
min high pass gain	0110	6 <sub>hex</sub>
automatic	1000	8 <sub>hex</sub>

There are several spatial effect modes available:

Mode A (low byte =  $00_{hex}$ ) is compatible to the formerly used spatial effect. Here, the kind of spatial effect depends on the source mode. If the incoming signal is in mono mode, Pseudo Stereo Effect is active; for stereo signals, Pseudo Stereo Effect and Stereo Basewidth Enlargement is effective. The strength of the effect is controllable by the upper byte. A negative value reduces the stereo image. A rather strong spatial effect is recommended for small TV sets where loudspeaker spacing is rather close. For large screen TV sets, a more moderate spatial effect is recommended. In mode A, even in case of stereo input signals, Pseudo Stereo Effect is active, which reduces the center image.

In Mode B, only Stereo Basewidth Enlargement is effective. For mono input signals, the Pseudo Stereo Effect has to be switched on.

It is worth mentioning, that all spatial effects affect amplitude and phase response. With the lower 4 bits, the frequency response can be customized. A value of  $0000_{bin}$  yields a flat response for center signals (L = R) but a high pass function of L or R only signals. A value of  $0110_{bin}$  has a flat response for L or R only signals but a lowpass function for center signals. By using  $1000_{bin}$ , the frequency response is automatically adapted to the sound material by choosing an optimal high pass gain.

#### 7.3.7. Volume SCART1 and SCART2 Channel

Volume Mode SCART1	0007 <sub>hex</sub>	[3:0]
Volume Mode SCART2	0040 <sub>hex</sub>	[3:0]
linear	0000 RESET	0 <sub>hex</sub>
logarithmic	0001	1 <sub>hex</sub>

Linear Mode		
Volume SCART1	0007 <sub>hex</sub>	н
Volume SCART2	0040 <sub>hex</sub>	н
OFF	0000 0000 RESET	00 <sub>hex</sub>
0 dB gain (digital full scale (FS) to 2 V <sub>RMS</sub> output)	0100 0000	40 <sub>hex</sub>
+6 dB gain (–6 dBFS to 2 V <sub>RMS</sub> output)	0111 1111	7F <sub>hex</sub>

Logarithmic Mode		
Volume SCART1	0007 <sub>hex</sub>	[15:4]
Volume SCART2	0040 <sub>hex</sub>	[15:4]
+12 dB	0111 1111 0000	7F0 <sub>hex</sub>
+11.875 dB	0111 1110 1110	7EE <sub>hex</sub>
+0.125 dB	0111 0011 0010	732 <sub>hex</sub>
0 dB	0111 0011 0000	730 <sub>hex</sub>
–0.125 dB	0111 0010 1110	72E <sub>hex</sub>
-113.875dB	0000 0001 0010	012 <sub>hex</sub>
–114 dB	0000 0001 0000	010 <sub>hex</sub>
Mute	0000 0000 0000 RESET	000 <sub>hex</sub>

## 7.3.8. Channel Source Modes

Loudspeaker Source	0008 <sub>hex</sub>	Н
Headphone Source	0009 <sub>hex</sub>	н
SCART1 Source	000a <sub>hex</sub>	н
SCART2 Source	0041 <sub>hex</sub>	н
I <sup>2</sup> S Source	000b <sub>hex</sub>	Н
Quasi-Peak Detector Source	000c <sub>hex</sub>	Н
FM/AM	0000 0000 RESET	00 <sub>hex</sub>
NICAM	0000 0001	01 <sub>hex</sub>
none (MSPB/C: SBUS12)	0000 0011	03 <sub>hex</sub>
none (MSPB/C: SBUS34)	0000 0100	04 <sub>hex</sub>
SCART	0000 0010	02 <sub>hex</sub>
l <sup>2</sup> S1	0000 0101	05 <sub>hex</sub>
l <sup>2</sup> S2	0000 0110	06 <sub>hex</sub>

# 7.3.9. Channel Matrix Modes

Loudspeaker Matrix	0008 <sub>hex</sub>	L
Headphone Matrix	0009 <sub>hex</sub>	L
SCART1 Matrix	000a <sub>hex</sub>	L
SCART2 Matrix	0041 <sub>hex</sub>	L
I <sup>2</sup> S Matrix	000b <sub>hex</sub>	L
Quasi-Peak Detector Matrix	000c <sub>hex</sub>	L
SOUNDA / LEFT / MSP-IF-CHANNEL2	0000 0000 RESET	00 <sub>hex</sub>
SOUNDB / RIGHT / MSP-IF-CHANNEL1	0001 0000	10 <sub>hex</sub>
STEREO	0010 0000	20 <sub>hex</sub>
MONO	0011 0000	30 <sub>hex</sub>
SUM/DIFF	0100 0000	40 <sub>hex</sub>
AB_XCHANGE	0101 0000	50 <sub>hex</sub>
PHASE_CHANGE_B	0110 0000	60 <sub>hex</sub>
PHASE_CHANGE_A	0111 0000	70 <sub>hex</sub>
A_ONLY	1000 0000	80 <sub>hex</sub>
B_ONLY	1001 0000	90 <sub>hex</sub>

The sum/difference mode can be used together with the quasi-peak detector to determine the sound material mode. If the difference signal on channel B (right) is near to zero, and the sum signal on channel A (left) is high, the incoming audio signal is mono. If there is a significant level on the difference signal, the incoming audio is stereo.

# 7.3.10. SCART Prescale

Volume Prescale SCART	000d <sub>hex</sub>	Н
OFF	0000 0000 RESET	00 <sub>hex</sub>
0 dB gain (2 V <sub>RMS</sub> input to digital full scale)	0001 1001	19 <sub>hex</sub>
+14 dB gain (400 mV <sub>RMS</sub> input to digital full scale)	0111 1111	7F <sub>hex</sub>

#### 7.3.11. FM/AM Prescale

Volume Prescale FM (Normal FM Mode)	000e <sub>hex</sub>	Н
OFF	0000 0000 RESET	00 <sub>hex</sub>
Maximum Volume (28 kHz deviation 1) recommended FIR- bandwidth: 130 kHz)	0111 1111	7F <sub>hex</sub>
Deviation 50 kHz <sup>1)</sup> recommended FIR- bandwidth: 200 kHz	0100 1000	48 <sub>hex</sub>
Deviation 75 kHz <sup>1)</sup> recommended FIR- bandwidth: 200 or 280 kHz	0011 0000	30 <sub>hex</sub>
Deviation 150 kHz <sup>1)</sup> recommended FIR- bandwidth: 380 kHz	0001 1000	18 <sub>hex</sub>
Maximum deviation 192 kHz <sup>1)</sup> recommended FIR- bandwidth: 380 kHz	0001 0011	13 <sub>hex</sub>
Prescale for adaptive deemphasis WP1 recommended FIR- bandwidth: 130 kHz	0001 0000	10 <sub>hex</sub>
Volume Prescale FM (High Dev Mode)	000e <sub>hex</sub>	Н
OFF	0000 0000 RESET	00 <sub>hex</sub>
Deviation 150 kHz <sup>1)</sup> recommended FIR-bandwidth: 380 kHz	0011 0000	30 <sub>hex</sub>
Maximum deviation 384 kHz <sup>1)</sup> recommended FIR- bandwidth: 500 kHz	0001 0100	14 <sub>hex</sub>
Volume Prescale AM	000e <sub>hex</sub>	Н
OFF	0000 0000 RESET	00 <sub>hex</sub>
SIF input level:		
0.1 Vpp – 0.8 Vpp <sup>1) 2)</sup> 0.8 Vpp – 1.4 Vpp <sup>1)</sup>	0111 1100	7C <sub>hex</sub> <7C <sub>hex</sub>
Note: For AM the bit MC	DE_REG[15] mu	ıst be 1

For the **High Deviation Mode**, the FM prescaling values can be used in the range from  $13_{hex}$  to  $30_{hex}$ . Please consider the internal reduction of 6 dB for this mode. The FIR-bandwidth should be selected to 500 kHz.

<sup>1)</sup> Given deviations will result in internal digital full scale signals. Appropriate clipping headroom has to be set by the customer. This can be done by decreasing the listed values by a specific factor.

<sup>2)</sup> In the mentioned SIF-level range, the AM-output level remains stable and independent of the actual SIF-level. In this case, only the AM degree of audio signals above 40 Hz determines the AM-output level.

#### **7.3.12. FM Matrix Modes** (see also Table 4–1)

FM Matrix	000e <sub>hex</sub>	L
NO MATRIX	0000 0000 RESET	00 <sub>hex</sub>
GSTEREO	0000 0001	01 <sub>hex</sub>
KSTEREO	0000 0010	02 <sub>hex</sub>

NO\_MATRIX is used for terrestrial mono or satellite stereo sound. GSTEREO dematrixes [(L+R)/2, R] to [L, R] and is used for German dual carrier stereo system (Standard B/G). KSTEREO dematrixes [(L+R)/2, (L-R)/2] to [L, R] and is used for the Korean dual carrier stereo system (Standard M).

# 7.3.13. FM Fixed Deemphasis

Deemphasis FM	000f <sub>hex</sub>	Н
50 μs	0000 0000 RESET	00 <sub>hex</sub>
75 μs	0000 0001	01 <sub>hex</sub>
J17	0000 0100	04 <sub>hex</sub>
OFF	0011 1111	3F <sub>hex</sub>

#### 7.3.14. FM Adaptive Deemphasis

FM Adaptive Deemphasis WP1	000f <sub>hex</sub>	L
OFF	0000 0000 RESET	00 <sub>hex</sub>
WP1	0011 1111	3F <sub>hex</sub>

## 7.3.15. NICAM Prescale

Volume Prescale NICAM	0010 <sub>hex</sub> H
OFF	00 <sub>hex</sub> RESET
0 dB gain	20 <sub>hex</sub>
+12 dB gain	7F <sub>hex</sub>

# 7.3.16. NICAM Deemphasis

A J17 Deemphasis is always applied to the NICAM signal. It is not switchable.

# 7.3.17. I<sup>2</sup>S1 and I<sup>2</sup>S2 Prescale

Prescale I <sup>2</sup> S1	0016 <sub>hex</sub> H
Prescale I <sup>2</sup> S2	0012 <sub>hex</sub> H
OFF	00 <sub>hex</sub>
0 dB gain	10 <sub>hex</sub> RESET
+18 dB gain	7F <sub>hex</sub>

# 7.3.18. ACB Register

# **Definition of Digital Control Output Pins**

ACB Register	0013 <sub>hex</sub>	[15:14]
D_CTR_OUT0 low (RESET) high	x0 x1	
D_CTR_OUT1 low (RESET) high	0x 1x	

**Definition of SCART-Switching Facilities** (see Fig. 4–3)

ACB Register	0013 <sub>hex</sub> [13:0]
DSP IN Selection of Source: * SC1_IN_L/R MONO_IN SC2_IN_L/R SC3_IN_L/R SC4_IN_L/R Mute	xx xx00 xx00 0000 xx xx01 xx00 0000 xx xx10 xx00 0000 xx xx11 xx00 0000 xx xx00 xx10 0000 xx xx11 xx10 0000
SC1_OUT_L/R Selection of Source: * SC3_IN_L/R SC2_IN_L/R MONO_IN SCART1_L/R via D/A SCART2_L/R via D/A SC1_IN_L/R SC4_IN_L/R Mute	xx 00xx x0x0 0000 xx 01xx x0x0 0000 xx 10xx x0x0 0000 xx 11xx x0x0 0000 xx 00xx x1x0 0000 xx 01xx x1x0 0000 xx 10xx x1x0 0000 xx 11xx x1x0 0000
SC2_OUT_L/R Selection of Source: * SCART1_L/R via D/A SC1_IN_L/R MONO_IN SCART2_L/R via D/A SC2_IN_L/R SC3_IN_L/R SC4_IN_L/R Mute	00 xxxx 0xx0 0000 01 xxxx 0xx0 0000 10 xxxx 0xx0 0000 00 xxxx 1xx0 0000 01 xxxx 1xx0 0000 10 xxxx 1xx0 0000 11 xxxx 1xx0 0000 11 xxxx 0xx0 0000

<sup>\* =</sup> RESET position, which becomes active at the time of the first write transmission on the control bus to the audio processing part (DSP). By writing to the ACB register first, the RESET state can be redefined.

**Note:** If "MONO\_IN" is selected at the DSP\_IN selection, the channel matrix mode of the corresponding output channel(s) must be set to "sound A".

#### 7.3.19. Beeper

Beeper Volume	0014 <sub>hex</sub>	Н
OFF	0000 0000 RESET	00 <sub>hex</sub>
Maximum Volume (full digital scale FDS)	0111 1111	7F <sub>hex</sub>
Beeper Frequency	0014	
	0014 <sub>hex</sub>	L
16 Hz (lowest)	0014 <sub>hex</sub>	01 <sub>hex</sub>
		01 <sub>hex</sub>

A squarewave beeper can be added to the loudspeaker channel and the headphone channel. The addition point is just before loudness and volume adjustment.

#### 7.3.20. Identification Mode

Identification Mode	0015 <sub>hex</sub>	L
Standard B/G (German Stereo)	0000 0000 RESET	00 <sub>hex</sub>
Standard M (Korean Stereo)	0000 0001	01 <sub>hex</sub>
Reset of Ident-Filter	0011 1111	3F <sub>hex</sub>

To shorten the response time of the identification algorithm after a program change between two FM-stereo capable programs, the reset of the ident-filter can be applied.

# Sequence:

- 1. Program change
- 2. Reset ident-filter
- 3. Set identification mode back to standard B/G or M
- 4. Read stereo detection register

#### 7.3.21. FM DC Notch

The DC compensation filter (FM DC Notch) for FM input can be switched off. This is used to speed up the automatic search function (see section 6.8.5.). In normal FM-mode, the FM DC Notch should be switched on.

FM DC Notch	0017 <sub>hex</sub>	L
ON	0000 0000 Reset	00 <sub>hex</sub>
OFF	0011 1111	3F <sub>hex</sub>

#### 7.3.22. Mode Tone Control

Mode Tone Control	00020 <sub>hex</sub>	н
Bass and Treble	0000 0000 RESET	00 <sub>hex</sub>
Equalizer	1111 1111	FF <sub>hex</sub>

By means of 'Mode Tone Control', Bass/Treble or Equalizer may be activated.

# 7.3.23. Automatic Volume Correction (AVC)

AVC	on/off	0029hex	[15:12]
AVC	off and Reset of int. variables	0000 RESET	0hex
AVC	on	1000	8hex
AVC	Decay Time	0029hex	[11:8]
AVC	Decay Tille	UUZSIIEX	[11.0]

Different sound sources (e.g. Terrestrial channels, SAT channels, or SCART) fairly often do not have the same volume level. Advertisement during movies, as well, usually has a different (higher) volume level than the movie itself. The Automatic Volume Correction (AVC) solves this problem and equalizes the volume levels.

The absolute value of the incoming signal is fed into a filter with 16 ms attack time and selectable decay time. The decay time must be adjusted as shown in the table above. This attack/decay filter block works similar to a peak hold function. The volume correction value with its quasi continuous step width is calculated using the attack/decay filter output.

The Automatic Volume Correction works with an internal reference level of –18 dBFS. This means, input signals with a volume level of –18 dBFS will not be affected by the AVC. If the input signals vary in a range of –24 dB to 0 dB, the AVC compensates this.

Example: A static input signal of 1 kHz on Scart has an output level as shown in the table below.

Scart Input 0 dbr = 2 Vrms	Volume Correc- tion	Main Output 0 dBr = 1.4 Vrms
0 dBr	–18 dB	–18 dBr
–6 dBr	–12 dB	–18 dBr
–12 dBr	–6 dB	–18 dBr
–18 dBr	–0 dB	–18 dBr
–24 dBr	+ 6 dB	–18 dBr
–30 dBr	+ 6 dB	–24 dBr
Loudspeaker Volume = 73h = 0 dBFS Scart Prescale = 20h i.e. 2.0 Vrms = 0 dBFS		

To reset the internal variables, the AVC should be switched off and on during any channel or source change. For standard applications, the recommended decay time is 4 sec.

**Note:** AVC should not be used in any Dolby Prologic mode, except PANORAMA, where no other than the loudspeaker output is active.

#### 7.3.24. Subwoofer Channel

The subwoofer channel is created by combining the left and right channels directly behind the tone control filter block. A third order lowpass filter with programmable corner frequency and volume adjustment respectively to the main channel output is performed to the bass-signal. Additionally, at the loudspeaker channels, a complementary high pass filter can be switched on.

Subwoofer Channel Volume Adjust	002Chex	Н
0 dB	0000 0000 RESET	00hex
–1 dB	1111 1111	FFhex
–29 dB	1110 0011	E3hex
-30 dB	1110 0010	E2hex
Mute	1000 0000	80hex
Subwoofer Channel Corner Frequency	002Dhex	Н
	002Dhex 0000 0101 0010 1000	05hex 28hex
Corner Frequency  50 Hz 400 Hz e.g. 50 Hz = 5 int	0000 0101	05hex
50 Hz 400 Hz e.g. 50 Hz = 5 int 400 Hz = 40 int Subwoofer: Comple-	0000 0101 0010 1000	05hex 28hex

#### 7.3.25. Equalizer Loudspeaker Channel

Band 1 (below 120 Hz)	0021 <sub>hex</sub>	Н
Band 2 (Center: 500 Hz)	0022 <sub>hex</sub>	Н
Band 3 (Center: 1.5 kHz)	0023 <sub>hex</sub>	Н
Band 4 (Center: 5 kHz)	0024 <sub>hex</sub>	Н
Band 5 (above 10 kHz)	0025 <sub>hex</sub>	Н
+12 dB	0110 0000	60 <sub>h</sub>
+11 dB	0101 1000	58 <sub>h</sub>
+1 dB	0000 1000	08 <sub>h</sub>
+1/8 dB	0000 0001	01 <sub>h</sub>
0 dB	0000 0000 RESET	00 <sub>h</sub>
-1/8 dB	1111 1111	FF <sub>h</sub>
−1 dB	1111 1000	F8 <sub>h</sub>
–11dB	1010 1000	A8 <sub>h</sub>
−12 dB	1010 0000	A0 <sub>h</sub>

With positive equalizer settings, internal overflow may occur even with overall volume less than 0 dB. This will lead to a clipped output signal. Therefore, it is not recommended to set equalizer bands to a value that, in conjunction with volume, would result in an overall positive gain.

Equalizer must not be used simultaneously with Bass and Treble (Mode Tone Control must be set to FF to use the Equalizer). If Bass and Treble are used, Equalizer coefficients must be set to zero.

# 7.4. Exclusions for the Audio Baseband Features

In general, all functions can be switched independently of the others. One exception exists:

- 1. NICAM cannot be processed simultaneously with the FM2 channel.
- 2. FM adaptive deemphasis WPI cannot be processed simultaneously with the FM-identification.

## 7.5. DSP Read Registers: Functions and Values

All readable registers are 16-bit wide. Transmissions via  $I^2C$  bus have to take place in 16-bit words. Single data entries are 8 bit. Some of the defined 16-bit words are divided into low and high byte, thus holding two different control entities.

These registers are not writeable.

# 7.5.1. Stereo Detection Register

Stereo Detection Register	0018 <sub>hex</sub> H	
Stereo Mode	Reading (two's complement)	
MONO	near zero	
STEREO	positive value (ideal reception: 7F <sub>hex</sub> )	
BILINGUAL	negative value (ideal reception: 80 <sub>hex)</sub>	

## 7.5.2. Quasi-Peak Detector

Quasi-Peak Readout Left	0019 <sub>hex</sub>	H+L
Quasi-Peak Readout Right	001a <sub>hex</sub>	H+L
Quasi peak readout	[0 <sub>hex</sub> 7FF values are 1 complement	6 bit two's

The quasi peak readout register can be used to read out the quasi peak level of any input source, in order to adjust all inputs to the same normal listening level. The refresh rate is 32 kHz. The feature is based on a filter time constant:

attack-time: 1.3 ms decay-time: 37 ms

#### 7.5.3. DC Level Register

DC Level Readout FM1 (MSP-Ch2)	001b <sub>hex</sub>	H+L
DC Level Readout FM2 (MSP-Ch1)	001c <sub>hex</sub>	H+L
DC Level	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ] values are 16 bit two's complement	

The DC level register measures the DC component of the incoming FM signals (FM1 and FM2). This can be used for seek functions in satellite receivers and for IF FM frequencies fine tuning. A too low demodulation frequency (DCO) results in a positive DC-Level and vice versa. For further processing, the DC content of the demodulated FM signals is suppressed. The time constant  $\tau$ , defining the transition time of the DC Level Register, is approximately 28 ms.

#### 7.5.4. MSP Hardware Version Code

Hardware Version	001e <sub>hex</sub> H	
Hardware Version	[00 <sub>hex</sub> FF <sub>hex</sub> ]	
MSP 3410D – <b>B</b> 4	02 <sub>hex</sub>	

A change in the hardware version code defines hardware optimizations that may have influence on the chip's behavior. The readout of this register is identical to the hardware version code in the chip's imprint.

#### 7.5.5. MSP Major Revision Code

Major Revision	001e <sub>hex</sub> L
MSP 3410 <b>D</b>	04 <sub>hex</sub>

The MSP 3410D is the fourth generation of ICs in the MSP family.

#### 7.5.6. MSP Product Code

Product	001f <sub>hex</sub>	Н
MSP 34 <b>00</b> C	0000 0000	00 <sub>hex</sub>
MSP 34 <b>10</b> D	0000 1010	0A <sub>hex</sub>

By means of the MSP-Product Code, the control processor is able to decide whether or not NICAM-controlling should be accomplished.

#### 7.5.7. MSP ROM Version Code

ROM Version	001f <sub>hex</sub> L	
Major software revision	[00 <sub>hex</sub> FF <sub>hex</sub> ]	
MSP 3410D – B <b>4</b>	0010 0100 24 <sub>hex</sub>	

A change in the ROM version code defines internal software optimizations, that may have influence on the chip's behavior, e.g. new features may have been included. While a software change is intended to create no compatibility problems, customers that want to use the new functions can identify new MSP 3410D versions according to this number. To avoid compatibility problems with MSP 3410B, an offset of 20 hex is added to the ROM version code of the chip's imprint.

MSP 3410D

# 8. Differences between MSP 3400C, MSP 3410B, and MSP 3410D

Feature		MSP 3400C	MSP 3410B-F7	MSP 3410D-B4
Hardware				
NICAM		No	Yes	Yes
SBUS Output		No	S_DA_OUT	No
SBUS Input		S_DA_IN	S_DA_IN	No
Second I <sup>2</sup> S data inp	out	I2S_DA_IN2	No	I2S_DA_IN2
ADR Interface		ADR_CL, ADR_WS, ADR_DA	No	ADR_CL, ADR_WS, ADR_DA
Second Scart D/A C	Converter	No	No	Yes
Demodulator				
Demodulator Short	Programming	No	No	yes
Autodetection for ter	restrial TV-Sound Standards	No	No	yes
Automatic switching	from NICAM to FM and vv.	No	No	yes
ADCV[10]	Carrier Mute Level	Carrier Mute Level	Fifo Watchdog On/Off	not used
ADCV[11]	Carrier Mute Level	Carrier Mute Level	not used	not used
MODE_REG[1]:	Tri-state digital outputs	0: active 1: tri-state	enable Pay-TV	0: active 1: tri-state
MODE_REG[2]:	Tri-state digital outputs	0: active 1: tri-state	disable NICAM Descrambler	0: active 1: tri-state
MODE_REG[6]:	NICAM	no function	0: FM 1: NICAM	0: FM 1: NICAM
MODE_REG[7]:	FM1FM2	no function	0: NICAM 1: FM	no function
MODE_REG[10]:	S-Bus Setting	no function	NICAM/FM on SBUS	no function
MODE_REG[11]:	S-Bus Mode	no function	Mode of internal SBUS	no function
MODE_REG[12]:	6 dB gain in MSP-Ch1	0: on 1: off	always on	0: on 1: off
MODE_REG[13]:	FIR filter coeff. set for MSP-Ch1	0: use FIR1 1: use FIR2	always FIR1	0: use FIR1 1: use FIR2
MODE_REG[14]:	Mode of ADR Interface	0: normal mode 1: ADR/SaRa	No	0: normal mode 1: ADR/SaRa


Feature		MSP 3400C	MSP 3410B-F7	MSP 3410D-B4
Demodulator				
MODE_REG[15]:	Gain for AM-Demodu- lation	0: 0 dB <sup>1)</sup> 1: 12 dB	No	0: 0 dB 1: 12 dB
FAWCT_SOLL	(DEMOD W Addr. 107 <sub>hex</sub> )	Not necessary	Yes	Not necessary
FAWCT_ER_TOL	(DEMOD W Addr. 10F <sub>hex</sub> )	Not necessary	Yes	Not necessary
AUDIO_PLL	(DEMOD W Addr. 2D7 <sub>hex</sub> )	Not necessary	Yes	Not necessary
LOAD_REG_1/2	(DEMOD W Addr. 56 <sub>hex</sub> )	Not necessary	Yes	Not necessary
LOAD_REG_1	(DEMOD W Addr. 60 <sub>hex</sub> )	Not necessary	Yes	Not necessary
SEARCH_NICAM	(DEMOD W Addr. 78 <sub>hex</sub> )	No	Yes	Not necessary
SELF_TEST	(DEMOD W Addr. 792 <sub>hex</sub> )	No	values as de- scribed in Mubi software	not compatible, not for custome use,
FAWCT_IST	(DEMOD R Addr. 25 <sub>hex</sub> )	No	Yes	Yes, but not necessary
CONC_CT	(DEMOD R Addr. 58 <sub>hex</sub> )	No	Yes	Yes, but not recommended
ERROR_RATE	(DEMOD R Addr. 57 <sub>hex</sub> )	No	No	Yes
Reading out RMS value of AGC		I <sup>2</sup> C Addr. 001E <sub>hex</sub>	not possible	I <sup>2</sup> C Addr. 021E <sub>hex</sub>
Reading out internal	PLL capacitance switches	I <sup>2</sup> C Addr. 001F <sub>hex</sub>	not possible	I <sup>2</sup> C Addr. 021F <sub>hex</sub>
Audio Baseband P	rocessing			
Improved oversamp D/A converters	ling filters for all	Yes	No	Yes
Mode Loudness Lou	udspeaker channel (DSP W Addr. 0004 <sub>hex</sub> L)	00 <sub>hex</sub> : normal 04 <sub>hex</sub> : Super Bass	00 <sub>hex</sub> : normal 04 <sub>hex</sub> : Super Version >= F7	00 <sub>hex</sub> : normal 04 <sub>hex</sub> : Super Bass
Spatial Effect Louds	peaker (DSP W Addr. 05 <sub>hex</sub> L)	Mode/ Customize	always 0	Mode/ Customize
Prescale I <sup>2</sup> S2	(DSP W Addr. 0012 <sub>hex</sub> H)	Yes <sup>1)</sup>	No	Yes
Prescale I <sup>2</sup> S1	(DSP W Addr. 0016 <sub>hex</sub> H)	Yes <sup>1)</sup>	No	Yes
FM DC Notch switchable (DSP W Addr. 0017 <sub>hex</sub> )		Yes	No	Yes
Mode Tone Control	Loudspeaker channel (DSP W Addr. 0020 <sub>hex</sub> H)	00 <sub>hex</sub> : Bass/ Treble FF <sub>hex</sub> :Equalizer	always Bass/ Treble	00 <sub>hex</sub> : Bass/ Treble FF <sub>hex</sub> :Equalizer
5 Band Equalizer	(DSP W Addr. 0021 <sub>hex</sub> – 0025 <sub>hex</sub> )	[+1212 dB]	not implemented	[+1212 dB]
Balance Headphone channel	e (DSP W Addr. 0030 <sub>hex</sub> H)	Yes <sup>1)</sup>	No	Yes

Feature	MSP 3400C	MSP 3410B-F7	MSP 3410D-B4
Audio Baseband Processing			
Bass for Loudspeaker and Headphone channel DSP W Addr. 0002/0031 <sub>hex</sub> H	Yes <sup>1)</sup> [+2012 dB]	No	Yes [+2012 dB]
Treble for Loudspeaker and Headphone channel DSP W Addr. 0003/0032 <sub>hex</sub> H	Yes <sup>1)</sup> [+15–12 dB]	No	Yes [+1512 dB]
Loudness Headphone (DSP W Addr. 0033 <sub>hex</sub> H) channel	Yes <sup>1)</sup>	No	Yes
Mode Loudness Headphone channel (DSP W Addr. 0033 <sub>hex</sub> L)	00 <sub>hex</sub> : normal 04 <sub>hex</sub> : Super Bass <sup>1)</sup>	No	00 <sub>hex</sub> : normal 04 <sub>hex</sub> : Super Bass
SCART1/2 Volume in dB (DSP W Addr 0007/ 0040hex	Yes <sup>1)</sup> (SCART1)	No	Yes
Scart 2 Volume (DSP W Addr. 0040 <sub>hex</sub> H)	No	No	Yes
Scart 2 Source (DSP W Addr. 0041 <sub>hex</sub> H)	No	No	Yes
Scart 2 Matrix (DSP W Addr. 0041 <sub>hex</sub> L)	No	No	Yes
Full SCART I/O Matrix without restrictions	No	No	Yes
Balance of loudspeaker and headphone channels in dB units (DSP W Addr 0016/0012hex)	Yes <sup>1)</sup>	No	Yes
Subwoofer output	No	No	Yes
Automatic Volume Correction (AVC)	No	No	Yes
1) This feature will be implemented in MSP 3400C	from version C7 on.		

**MSP 3410D** 

# 9. Specifications

#### 9.1. Outline Dimensions

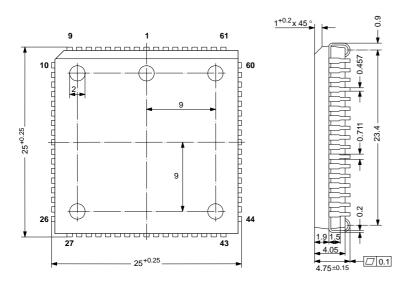

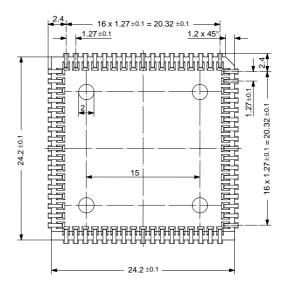


Fig. 9–1: 68-Pin Plastic Leaded Chip Carrier Package (PLCC68) Weight approximately 4.8 g Dimensions in mm

SPGS7004-3/4E

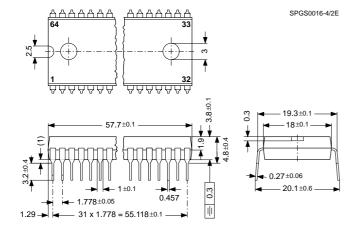


Fig. 9–2: 64-Pin Plastic Shrink Dual Inline Package (PSDIP64) Weight approximately 9.0 g Dimensions in mm

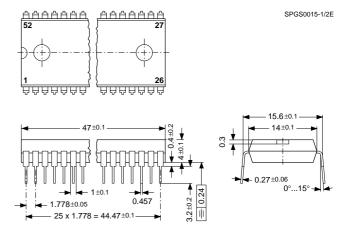
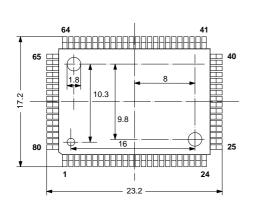
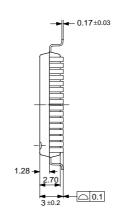


Fig. 9–3: 52-Pin Plastic Shrink Dual In Line Package (PSDIP52) Weight approximately 5.5 g Dimensions in mm

SPGS0025-1/1E





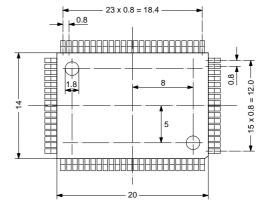


Fig. 9–4: 80-Pin Plastic Quad Flat Pack Package (PQFP80) Weight approximately 1.61 g Dimensions in mm

# 9.2. Pin Connections and Short Descriptions

NC = not connected; leave vacant LV = if not used, leave vacant DVSS: if not used, connect to DVSS X = obligatory; connect as described in circuit diagram AHVSS: connect to AHVSS

	Pin	No.		Pin Name	Туре	Connection	Short Description
PLCC 68-pin	PSDIP 64-pin	PSDIP 52-pin	PQFP 80-pin			(if not used)	
1	16	14	9	ADR_WS	OUT	LV	ADR wordstrobe
2	-	_	-	NC		LV	Not connected
3	15	13	8	ADR_DA	OUT	LV	ADR data output
4	14	12	7	I <sup>2</sup> S_DA_IN1	IN	LV	I <sup>2</sup> S1 data input
5	13	11	6	I <sup>2</sup> S_DA_OUT	OUT	LV	I <sup>2</sup> S data output
6	12	10	5	I <sup>2</sup> S_WS	IN/OUT	LV	I <sup>2</sup> S wordstrobe
7	11	9	4	I <sup>2</sup> S_CL	IN/OUT	LV	I <sup>2</sup> S clock
8	10	8	3	I <sup>2</sup> C_DA	IN/OUT	X	I <sup>2</sup> C data
9	9	7	2	I <sup>2</sup> C_CL	IN/OUT	Х	I <sup>2</sup> C clock
10	8	_	1	NC		LV	Not connected
11	7	6	80	STANDBYQ	IN	X	Standby (low-active)
12	6	5	79	ADR_SEL	IN	X	I <sup>2</sup> C Bus address select
13	5	4	78	D_CTR_OUT0	OUT	LV	Digital control output 0
14	4	3	77	D_CTR_OUT1	OUT	LV	Digital control output 1
15	3	-	76	NC		LV	Not connected
16	2	_	75	NC		LV	Not connected

	Pin	No.		Pin Name	Туре	Connection	Short Description
PLCC 68-pin	PSDIP 64-pin	PSDIP 52-pin	PQFP 80-pin			(if not used)	
17	_	1	_	NC		LV	Not connected
18	1	2	74	AUD_CL_OUT	OUT	LV	Audio clock output (18.432 MHz)
19	64	1	73	NC		LV	Test pin
20	63	52	72	XTAL_OUT	OUT	Х	Crystal oscillator
21	62	51	71	XTAL_IN	IN	Х	Crystal oscillator
22	61	50	70	TESTEN	IN	Х	Test pin
23	60	49	69	ANA_IN2+	IN	LV	IF input 2 (if ANA_IN1+ is used only, connect to AVSS with 50 pF capacitor)
24	59	48	68	ANA_IN-	IN	LV	IF common
25	58	47	67	ANA_IN1+	IN	LV	IF input 1
26	57	46	66	AVSUP		X	Analog power supply +5 V
_	ı	ı	65	AVSUP		Х	Analog power supply +5 V
_	-	ı	64	NC		LV	Not connected
_	-	-	63	NC		LV	Not connected
27	56	45	62	AVSS		X	Analog ground
_	ı	ı	61	AVSS		X	Analog ground
28	55	44	60	MONO_IN	IN	LV	Mono input
_	_	_	59	NC		LV	Not connected
29	54	43	58	VREFTOP		Х	Reference voltage IF A/D converter
30	53	42	57	SC1_IN_R	IN	LV	Scart input 1 in, right
31	52	41	56	SC1_IN_L	IN	LV	Scart input 1 in, left
32	51	_	55	ASG1		AHVSS	Analog Shield Ground 1
33	50	40	54	SC2_IN_R	IN	LV	Scart input 2 in, right
34	49	39	53	SC2_IN_L	IN	LV	Scart input 2 in, left
35	48	_	52	ASG2		AHVSS	Analog Shield Ground 2
36	47	38	51	SC3_IN_R	IN	LV	Scart input 3 in, right
37	46	37	50	SC3_IN_L	IN	LV	Scart input 3 in, left
38	45	1	49	ASG4		AHVSS	Analog Shield Ground 4
39	44	-	48	SC4_IN_R	IN	LV	Scart input 4 in, right
40	43	1	47	SC4_IN_L	IN	LV	Scart input 4 in, left

	Pin	No.		Pin Name	Туре	Connection	Short Description
PLCC 68-pin	PSDIP 64-pin	PSDIP 52-pin	PQFP 80-pin			(if not used)	·
41	_	_	46	NC		LV or AHVSS	Not connected
42	42	36	45	AGNDC		Х	Analog reference voltage high voltage part
43	41	35	44	AHVSS		Х	Analog ground
-	ı	1	43	AHVSS		X	Analog ground
_	-	_	42	NC		LV	Not connected
_	_	_	41	NC		LV	Not connected
44	40	34	40	CAPL_M		Х	Volume capacitor MAIN
45	39	33	39	AHVSUP		Х	Analog power supply 8.0 V
46	38	32	38	CAPL_A		Х	Volume capacitor AUX
47	37	31	37	SC1_OUT_L	OUT	LV	Scart output 1, left
48	36	30	36	SC1_OUT_R	OUT	LV	Scart output 1, right
49	35	29	35	VREF1		Х	Reference ground 1 high voltage part
50	34	28	34	SC2_OUT_L	OUT	LV	Scart output 2, left
51	33	27	33	SC2_OUT_R	OUT	LV	Scart output 2, right
52	_	_	32	ASG3		AHVSS <sup>1)</sup>	Analog Shield Ground 3
53	32	_	31	NC		LV	Not connected
54	31	26	30	DACM_SUB		LV	Subwoofer output
55	30	_	29	NC		LV	Not connected
56	29	25	28	DACM_L	OUT	LV	Loudspeaker out, left
57	28	24	27	DACM_R	OUT	LV	Loudspeaker out, right
58	27	23	26	VREF2		Х	Reference ground 2 high voltage part
59	26	22	25	DACA_L	OUT	LV	Headphone out, left
60	25	21	24	DACA_R	OUT	LV	Headphone out, right
_	_	_	23	NC		LV	Not connected
_	_	_	22	NC		LV	Not connected
61	24	20	21	RESETQ	IN	Х	Power-on-reset
62	23	-	20	NC		LV	Not connected
63	22	_	19	NC		LV	Not connected
64	21	19	18	NC		LV	Not connected

	Pin	No.		Pin Name	Туре	Connection	Short Description
PLCC 68-pin	PSDIP 64-pin	PSDIP 52-pin	PQFP 80-pin			(if not used)	
65	20	18	17	I <sup>2</sup> S_DA_IN2	IN	LV	I <sup>2</sup> S2-data input
66	19	17	16	DVSS		Х	Digital ground
_	-	-	15	DVSS		Х	Digital ground
_	-	-	14	DVSS		Х	Digital ground
67	18	16	13	DVSUP		Х	Digital power supply +5 V
_	-	_	12	DVSUP		Х	Digital power supply +5 V
_	_	_	11	DVSUP		Х	Digital power supply +5 V
68	17	15	10	ADR_CL	OUT	LV	ADR clock
1) D	4	411a 1114a	MODOA	10D it is possible to		th DVCC as well	

<sup>1)</sup> Due to compatibility with MSP 3410B, it is possible to connect with DVSS as well.

# 9.3. Pin Configurations

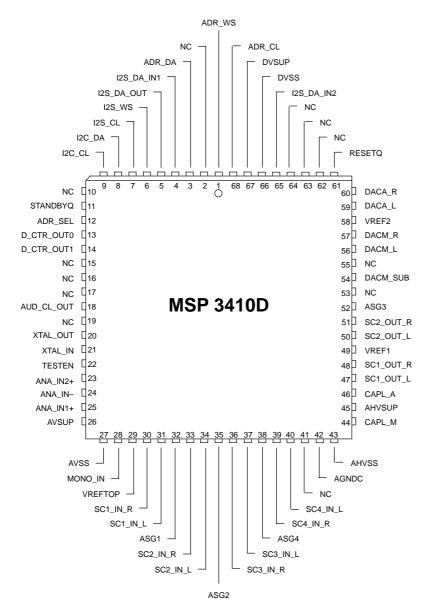
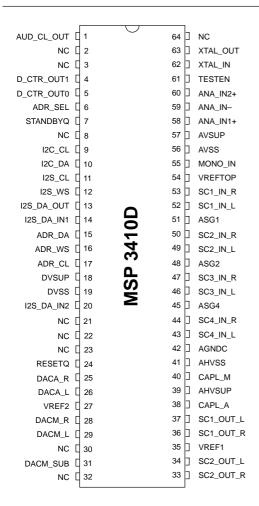


Fig. 9-5: 68-pin PLCC package



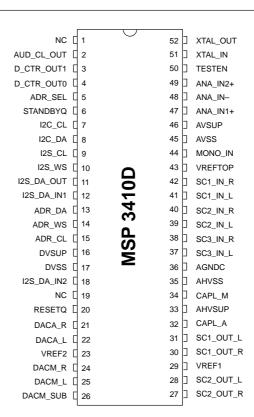


Fig. 9-7: 52-pin PSDIP package

Fig. 9-6: 64-pin PSDIP package


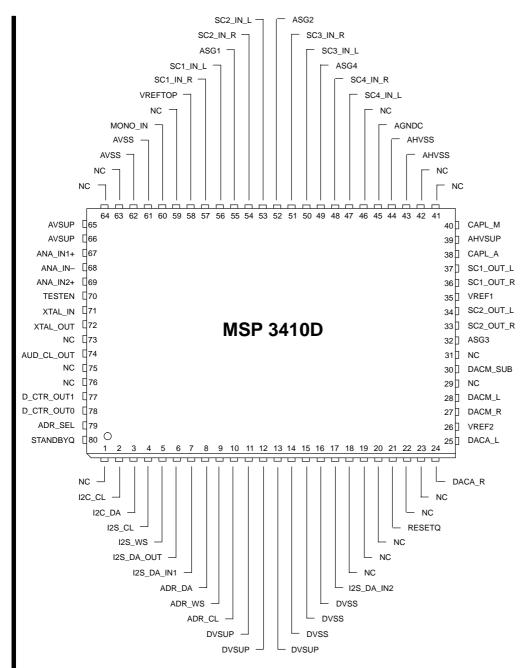



Fig. 9-8: 80-pin PQFP package

MSP 3410D


# 9.4. Pin Circuits (pin numbers refer to PLCC68 package)

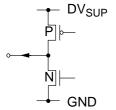


**Fig. 9–9:** Output Pins 1, 3, 5, 13, 14, and 68 (ADR\_WS, ADR\_CL, ADR\_DA,  $I^2S_DA_OUT$ , D\_CTR\_OUT0/1)

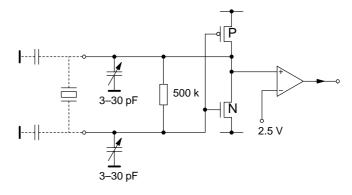

**Fig. 9–13:** Output/Input Pins 18, 20, and 21 (AUD\_CL\_OUT, XTALIN/OUT)

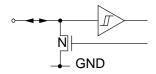


**Fig. 9–10:** Input/Output Pins 8 and 9 (I<sup>2</sup>C\_DA, I<sup>2</sup>C\_CL)

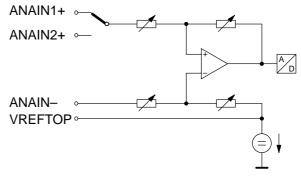


**Fig. 9–14:** Input Pins 23–25 and 29 (ANA\_IN2+, ANA\_IN-, ANA\_IN1+, VREFTOP)



**Fig. 9–11:** Input Pins 4, 11, 12, 61, 62, and 65 (STANDBYQ, ADR\_SEL, RESETQ, TESTEN, I2S\_DA\_IN1, I2S\_DA\_IN2)

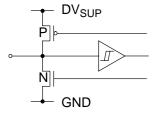

**Fig. 9–12:** Input/Output Pins 6 and 7 ( $I^2S_WS$ ,  $I^2S_CL$ )

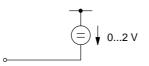

**Fig. 9–15:** Capacitor Pins 44 and 46 (CAPL\_M, CAPL\_A)

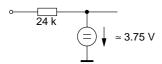


Fig. 9-16: Input Pin 28 (MONO\_IN)


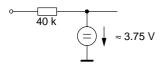


Fig. 9–17: Input Pins 30, 31, 33, 34, 36, 37, 40, and 41 (SC1–4\_IN\_L/R)

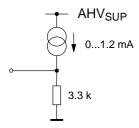

**Fig. 9–18:** Output Pins 56, 57, 59, 60 and 54 (DACA\_L/R, DACM\_L/R, DACM\_SUB)


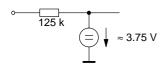


Fig. 9-19: Pin 42 (AGNDC)

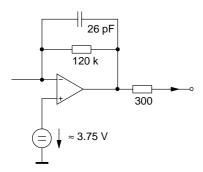

**Fig. 9–20:** Output Pins 47, 48, 50, and 51  $(SC_1/2\_OUT\_L/R)$ 

MSP 3410D

## 9.5. Electrical Characteristics

# 9.5.1. Absolute Maximum Ratings

Symbol	Parameter	Pin Name	Min.	Max.	Unit
T <sub>A</sub>	Ambient Operating Temperature	_	0	70	°C
T <sub>S</sub>	Storage Temperature	_	-40	125	°C
V <sub>SUP1</sub>	First Supply Voltage	AHVSUP	-0.3	9.0	V
V <sub>SUP2</sub>	Second Supply Voltage	DVSUP	-0.3	6.0	V
V <sub>SUP3</sub>	Third Supply Voltage AVSUP		-0.3	6.0	V
dV <sub>SUP23</sub>	Voltage between AVSUP and DVSUP	AVSUP AVSUP, DVSUP		0.5	V
P <sub>TOT</sub>	Chip Power Dissipation PLCC68 without Heat Spreader PSDIP64 without Heat Spreader PSDIP52 without Heat Spreader	AHVSUP, DVSUP, AVSUP		1200 1300 1200	mW
V <sub>Idig</sub>	Input Voltage, all Digital Inputs		-0.3	V <sub>SUP2</sub> +0.3	V
I <sub>Idig</sub>	Input Current, all Digital Pins	_	-20	+20	mA <sup>1)</sup>
V <sub>lana</sub>	Input Voltage, all Analog Inputs	SCn_IN_s, <sup>2)</sup> MONO_IN	-0.3	V <sub>SUP1</sub> +0.3	V
I <sub>lana</sub>	Input Current, all Analog Inputs	SCn_IN_s, <sup>2)</sup> MONO_IN	<b>-</b> 5	+5	mA <sup>1)</sup>
I <sub>Oana</sub>	Output Current, all SCART Outputs	SCn_OUT_s <sup>2)</sup>	3), 4)	3), 4)	
l <sub>Oana</sub>	Output Current, all Analog Outputs except SCART Outputs	DACp_s <sup>2)</sup>	3)	3)	
I <sub>Cana</sub>	Output Current, other pins connected to capacitors	CAPL_p, <sup>2)</sup> AGNDC	3)	3)	

<sup>1)</sup> positive value means current flowing into the circuit

Stresses beyond those listed in the "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only. Functional operation of the device at these or any other conditions beyond those indicated in the "Recommended Operating Conditions/Characteristics" of this specification is not implied. Exposure to absolute maximum ratings conditions for extended periods may affect device reliability.

<sup>2) &</sup>quot;n" means "1", "2", "3", or "4", "s" means "L" or "R", "p" means "M" or "A"

<sup>3)</sup> The Analog Outputs are short circuit proof with respect to First Supply Voltage and Ground.

<sup>4)</sup> Total chip power dissipation must not exceed absolute maximum rating.

# 9.5.2. Recommended Operating Conditions

(at  $T_A = 0$  to 70 °C)

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
V <sub>SUP1</sub>	First Supply Voltage	AHVSUP	7.6	8.0	8.4	V
V <sub>SUP2</sub>	Second Supply Voltage	DVSUP	4.75	5.0	5.25	V
V <sub>SUP3</sub>	Third Supply Voltage	AVSUP	4.75	5.0	5.25	V
V <sub>REIL</sub>	RESET Input High-Low and Low- High Transition Voltage	RESETQ	0.45		0.8	V <sub>SUP2</sub>
t <sub>REIL</sub>	RESET Low Time after DVSUP Stable and Oscillator Startup		5			μs
V <sub>DIGIL</sub>	Digital Input Low Voltage	STANDBYQ,			0.2	V <sub>SUP2</sub>
V <sub>DIGIH</sub>	Digital Input High Voltage	ADR_SEL, TESTEN	0.8			V <sub>SUP2</sub>
t <sub>STBYQ1</sub>	STANDBYQ Setup Time before Turn-off of Second Supply Voltage	STANDBYQ, 1 DVSUP				μs
I <sup>2</sup> C-Bus Rec	commendations					
V <sub>IMIL</sub>	I <sup>2</sup> C-BUS Input Low Voltage	I <sup>2</sup> C_CL,			0.3	V <sub>SUP2</sub>
V <sub>IMIH</sub>	I <sup>2</sup> C-BUS Input High Voltage	I <sup>2</sup> C_DA	0.6			V <sub>SUP2</sub>
f <sub>IM</sub>	I <sup>2</sup> C-BUS Frequency	I <sup>2</sup> C_CL			1.0	MHz
t <sub>I2C1</sub>	I <sup>2</sup> C START Condition Setup Time	I <sup>2</sup> C_CL,	120			ns
t <sub>l2C2</sub>	I <sup>2</sup> C STOP Condition Setup Time	I <sup>2</sup> C_DA	120			ns
t <sub>I2C3</sub>	I <sup>2</sup> C-Clock Low Pulse Time	I <sup>2</sup> C_CL	500			ns
t <sub>I2C4</sub>	I <sup>2</sup> C-Clock High Pulse Time		500			ns
t <sub>I2C5</sub>	I <sup>2</sup> C-Data Setup Time Before Rising Edge of Clock	I <sup>2</sup> C_CL, I <sup>2</sup> C_DA	55			ns
t <sub>I2C6</sub>	I <sup>2</sup> C-Data Hold Time after Falling Edge of Clock		55			ns
I <sup>2</sup> S-Bus Rec	ommendations					
V <sub>I2SIL</sub>	I <sup>2</sup> S-Data Input Low Voltage	I2S_DA_IN1/2			0.25	V <sub>SUP2</sub>
V <sub>I2SIH</sub>	I <sup>2</sup> S-Data Input High Voltage		0.75			V <sub>SUP2</sub>
t <sub>l2S1</sub>	I <sup>2</sup> S-Data Input Setup Time before Rising Edge of Clock	I2S_DA_IN1/2, I2S_CL	20			ns
t <sub>l2S2</sub>	I <sup>2</sup> S-Data Input Hold Time after Falling Edge of Clock		0			ns
V <sub>I2SIDL</sub>	I <sup>2</sup> S-Input Low Voltage when MSP 3410D in I2S-Slave-Mode	I2S_CL, I2S_WS			0.25	V <sub>SUP2</sub>
V <sub>I2SIDH</sub>	I <sup>2</sup> S-Input High Voltage when MSP 3410D in I2S-Slave-Mode		0.75			V <sub>SUP2</sub>

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
f <sub>I2SCL</sub>	I <sup>2</sup> S-Clock Input Frequency when MSP 3410D in I2S-Slave-Mode	I2S_CL		1.024		MHz
R <sub>I2SCL</sub>	I <sup>2</sup> S-Clock Input Ratio when MSP 3410D in I2S-Slave-Mode		0.9		1.1	
f <sub>I2SWS</sub>	I <sup>2</sup> S-Wordstrobe Input Frequency when MSP 3410D in I2S-Slave- Mode	I2S_WS		32.0		kHz
t <sub>I2SWS1</sub>	I <sup>2</sup> S-Wordstrobe Input Setup Time before Rising Edge of Clock when MSP 3410D in I2S-Slave-Mode	I2S_WS, I2S_CL	60			ns
t <sub>l2SWS2</sub>	I <sup>2</sup> S-Wordstrobe Input Hold Time after Falling Edge of Clock when MSP 3410D in I2S-Slave-Mode		0			ns
Crystal Reco	ommendations for Master-Slave Applica	ation				
f <sub>P</sub>	Parallel Resonance Frequency at 12 pF Load Capacitance			18.432		MHz
f <sub>TOL</sub>	Accuracy of Adjustment		-20		+20	ppm
D <sub>TEM</sub>	Frequency Variation versus Temperature		-20		+20	ppm
R <sub>R</sub>	Series Resistance			8	25	Ω
C <sub>0</sub>	Shunt (Parallel) Capacitance			6.2	7.0	pF
C <sub>1</sub>	Motional (Dynamic) Capacitance		19	24		fF
Load Capac	itance Recommendations for Master-Si	ave Applications				
C <sub>L</sub>	External Load Capacitance <sup>1)</sup>	XTAL_IN, XTAL_OUT	PSDIP PLCC	1.5 3.3		pF pF
f <sub>CL</sub>	Required Open Loop Clock Frequency (T <sub>amb</sub> = 25°C)		18.431		18.433	MHz

<sup>1)</sup> External capacitors at each crystal pin to ground are required. They are necessary to tune the open-loop frequency of the internal PLL and to stabilize the frequency in closed-loop operation. The higher the capacitors, the lower the clock frequency results. The nominal free running frequency should match 18.432 MHz as closely as possible. Due to different layouts of customer PCBs, the matching capacitor size should be defined in the application. The suggested values (1.5 pF/3.3 pF) are figures based on experience with various PCB layouts.

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
Crystal Reco	ommendations for <b>FM / NICAM</b> Applica	tions (No Master-Sla	ave Mode	possible)		
f <sub>P</sub>	Parallel Resonance Frequency at 12 pF Load Capacitance			18.432		MHz
$f_{TOL}$	Accuracy of Adjustment		-30		+30	ppm
$D_TEM$	Frequency Variation vs Temp.		-30		+30	ppm
$R_R$	Series Resistance			8	25	Ω
C <sub>0</sub>	Shunt (Parallel) Capacitance			6.2	7.0	pF
C <sub>1</sub>	Motional (Dynamic) Capacitance		15			fF
Load Capac	itance Recommendations for FM / NIC	AM Applications (No	Master-S	lave Mode	e possible)	
C <sub>L</sub>	External Load Capacitance <sup>1)</sup>	XTAL_IN, XTAL_OUT	PSDIP PLCC	3.3	1.5	pF pF
f <sub>CL</sub>	Required Open Loop Clock Frequency (T <sub>amb</sub> = 25 °C)		18.4305		18.4335	MHz
Crystal Reco	ommendations for FM Application (No N	Master-Slave Mode	oossible)			
f <sub>P</sub>	Parallel Resonance Frequency at 12 pF Load Capacitance			18.432		MHz
f <sub>TOL</sub>	Accuracy of Adjustment		-100		+100	ppm
D <sub>TEM</sub>	Frequency Variation versus Temperature		-50		+50	ppm
R <sub>R</sub>	Series Resistance			8	25	Ω
C <sub>0</sub>	Shunt (Parallel) Capacitance			6.2	7.0	pF
Load Capac	itance Recommendations for FM Applic	cation (No Master-S	lave Mode	possible)		
C <sub>L</sub>	External Load Capacitance <sup>1)</sup>	XTAL_IN, XTAL_OUT	PSDIP PLCC	1.5 3.3		pF pF
Amplitude R	ecommendation for Operation with Exte	ernal Clock Input (C	<sub>load</sub> after r	eset = 22	pF)	
V <sub>XCA</sub>	External Clock Amplitude	XTAL_IN	0.7			V <sub>pp</sub>
Analog Inpu	t and Output Recommendations				<u> </u>	
C <sub>AGNDC</sub>	AGNDC-Filter-Capacitor	AGNDC	-20%	3.3		μF
	Ceramic Capacitor in Parallel		-20%	100		nF

<sup>1)</sup> External capacitors at each crystal pin to ground are required. They are necessary to tune the open-loop frequency of the internal PLL and to stabilize the frequency in closed-loop operation. The higher the capacitors, the lower the clock frequency results. The nominal free running frequency should match 18.432 MHz as closely as possible. Due to different layouts of customer PCBs, the matching capacitor size should be defined in the application. The suggested values (1.5 pF/3.3 pF) are figures based on experience with various PCB layouts.

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
C <sub>inSC</sub>	DC-Decoupling Capacitor in front of SCART Inputs	SCn_IN_s <sup>1)</sup>	-20%	330	+20%	nF
V <sub>inSC</sub>	SCART Input Level				2.0	V <sub>RMS</sub>
V <sub>inMONO</sub>	Input Level, Mono Input	MONO_IN			2.0	V <sub>RMS</sub>
R <sub>LSC</sub>	SCART Load Resistance	SCn_OUT_s1)	10			kΩ
C <sub>LSC</sub>	SCART Load Capacitance				6.0	nF
C <sub>VMA</sub>	Main/AUX Volume Capacitor	CAPL_M, CAPL_A		10		μF
C <sub>FMA</sub>	Main/AUX Filter Capacitor	DACM_s, DACA_s <sup>1)</sup>	-10%	1	+10%	nF
Recommend	ations for Analog Sound IF Input Signa	ıl				
C <sub>VREFTOP</sub>	VREFTOP-Filter-Capacitor	VREFTOP	-20%	10		μF
	Ceramic Capacitor in Parallel		-20%	100		nF
F <sub>IF_FM</sub>	Analog Input Frequency Range		0		9	MHz
V <sub>IF_FM</sub>	Analog Input Range FM/NICAM		0.1	0.8	3	Vpp
V <sub>IF_AM</sub>	Analog Input Range AM/NICAM		0.1	0.45	0.8	Vpp
R <sub>FMNI</sub>	Ratio: NICAM Carrier/FM Carrier (unmodulated carriers) BG: I:		-20 -23	-7 -10	0 0	dB dB
R <sub>AMNI</sub>	Ratio: NICAM Carrier/AM Carrier (unmodulated carriers)		-25	-11	0	dB dB
R <sub>FM</sub>	Ratio: FM-Main/FM-Sub Satellite	ANIA INIA.		7		dB
R <sub>FM1/FM2</sub>	Ratio: FM1/FM2 German FM-System	ANA_IN1+, ANA_IN2+, ANA_IN-		7		dB
R <sub>FC</sub>	Ratio: Main FM Carrier/ Color Carrier		15	_	_	dB
R <sub>FV</sub>	Ratio: Main FM Carrier/ Luma Components		15	_	_	dB
PR <sub>IF</sub>	Passband Ripple		_	_	±2	dB
SUP <sub>HF</sub>	Suppression of Spectrum Above 9.0 MHz		15		-	dB
FM <sub>MAX</sub>	Maximum FM-Deviation (apprx.) normal mode high deviation mode				±192 ±360	kHz

68 MICRONAS INTERMETALL

# 9.5.3. Characteristics

at  $T_A$  = 0 to 70 °C,  $f_{CLOCK}$  = 18.432 MHz,  $V_{SUP1}$  = 7.6 to 8.4 V,  $V_{SUP2}$  = 4.75 to 5.25 V for min./max. values at  $T_A$  = 60 °C,  $f_{CLOCK}$  = 18.432 MHz,  $V_{SUP1}$  = 8 V,  $V_{SUP2}$  = 5 V for typical values,  $T_J$  = Junction Temperature MAIN (M) = Loudspeaker Channel, AUX (A) = Headphone Channel

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
f <sub>CLOCK</sub>	Clock Input Frequency	XTAL_IN		18.432		MHz	
D <sub>CLOCK</sub>	Clock High to Low Ratio		45		55	%	
UITTER	Clock Jitter (Verification not provided in Production test)				50	ps	
V <sub>xtalDC</sub>	DC-Voltage Oscillator			2.5		V	
t <sub>Startup</sub>	Oscillator Startup Time at VDD Slew-rate of 1 V/1 μs	XTAL_IN, XTAL_OUT		0.4	2	ms	
I <sub>SUP1A</sub>	First Supply Current (active) Analog Volume for Main and Aux at 0dB Analog Volume for Main and Aux at –30dB	AHVSUP	9.6 6.3	17.1 11.2	24.6 16.1	mA mA	
I <sub>SUP2A</sub>	Second Supply Current (active)	DVSUP	86	95	102	mA	
I <sub>SUP3A</sub>	Third Supply Current (active)	AVSUP	15	25	35	mA	
I <sub>SUP1S</sub>	First Supply Current (standby mode) at T <sub>j</sub> = 27 °C	AHVSUP	3.5	5.6	7.7	mA	STANDBYQ = low
V <sub>ACLKAC</sub>	Audio Clock Output AC Voltage	AUD_CL_OUT	1.2	1.8		V <sub>pp</sub>	load = 40 pF
V <sub>ACLKDC</sub>	Audio Clock Output DC Voltage		0.4		0.6	V <sub>SUP3</sub>	I <sub>max</sub> = 0.2 mA
r <sub>outHF_ACL</sub>	HF Output Resistance			140		Ω	
a <sub>ACL</sub>	Open Circuit Gain	AUD_CL_OUT XTAL_OUT		0.5			
V <sub>DCTROL</sub>	Digital Output Low Voltage	D_CTR_OUT0			0.4	V	I <sub>DDCTR</sub> = 1 mA
V <sub>DCTROH</sub>	Digital Output High Voltage	D_CTR_OUT1	4.0			V	I <sub>DDCTR</sub> = −1 mA
V <sub>IMOL</sub>	I <sup>2</sup> C-Data Output Low Voltage	I <sup>2</sup> C_DA			0.4	V	I <sub>IMOL</sub> = 3 mA
I <sub>IMOH</sub>	I <sup>2</sup> C-Data Output High Current				1.0	μА	V <sub>IMOH</sub> = 5 V
t <sub>IMOL1</sub>	I <sup>2</sup> C-Data Output Hold Time after Falling Edge of Clock	I <sup>2</sup> C_DA, I <sup>2</sup> C_CL	15			ns	
t <sub>IMOL2</sub>	I <sup>2</sup> C-Data Output Setup Time before Rising Edge of Clock		100			ns	f <sub>IM</sub> = 1 MHz
V <sub>I2SOL</sub>	I <sup>2</sup> S Output Low Voltage	I <sup>2</sup> S_WS,			0.4	V	I <sub>I2SOL</sub> = 1 mA
V <sub>I2SOH</sub>	I <sup>2</sup> S Output High Voltage	I <sup>2</sup> S_CL, I <sup>2</sup> S_DA_OUT	4.0			V	I <sub>I2SOH</sub> = -1 mA
f <sub>l2SCL</sub>	I <sup>2</sup> S-Clock Output Frequency	I <sup>2</sup> S_CL		1024		kHz	NICAM-PLL closed
f <sub>I2SWS</sub>	I <sup>2</sup> S-Wordstrobe Output Frequency	I <sup>2</sup> S_WS		32.0		kHz	NICAM-PLL closed
t <sub>l2S1/l2s2</sub>	I <sup>2</sup> S-Clock High/Low-Ratio	I <sup>2</sup> S_CL	0.9	1.0	1.1		
t <sub>I2S3</sub>	I <sup>2</sup> S-Data Setup Time before Rising Edge of Clock	I <sup>2</sup> S_CL, I <sup>2</sup> S_DA_OUT	200			ns	C <sub>L</sub> = 30 pF
t <sub>l2S4</sub>	I <sup>2</sup> S-Data Hold Time after Falling Edge of Clock				180	ns	C <sub>L</sub> = 30 pF

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
t <sub>l2S5</sub>	I <sup>2</sup> S-Wordstrobe Setup Time before Rising Edge of Clock	I <sup>2</sup> S_CL, I <sup>2</sup> S_WS	200			ns	C <sub>L</sub> = 30 pF
t <sub>12S6</sub>	I <sup>2</sup> S-Wordstrobe Hold Time after Falling Edge of Clock				180	ns	C <sub>L</sub> = 30 pF
Analog Grou	ınd						
V <sub>AGNDC0</sub>	AGNDC Open Circuit Voltage	AGNDC	3.63	3.73	3.83	V	$R_{load} \ge 10 \text{ M}\Omega$
R <sub>outAGN</sub>	AGNDC Output Resistance		70	125	180	kΩ	3 V ≤ V <sub>AGNDC</sub> ≤ 4 V
Analog Input	t Resistance						
R <sub>inSC</sub>	SCART Input Resistance from T <sub>A</sub> = 0 to 70 °C	SCn_IN_s <sup>1)</sup>	25	40	58	kΩ	f <sub>signal</sub> = 1 kHz, I = 0.05 mA
R <sub>inMONO</sub>	MONO Input Resistance from T <sub>A</sub> = 0 to 70 °C	MONO_IN	15	24	35	kΩ	f <sub>signal</sub> = 1 kHz, I = 0.1 mA
Audio Analo	g-to-Digital-Converter						
V <sub>AICL</sub>	Effective Analog Input Clipping Level for Analog-to-Digital- Conversion	SCn_IN_s, <sup>1)</sup> MONO_IN	2.00		2.25	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz
SCART Outp	puts		•	<u>'</u>	•		
R <sub>outSC</sub>	SCART Output Resistance at $T_j = 27 ^{\circ}\text{C}$ from $T_A = 0$ to $70 ^{\circ}\text{C}$	SCn_OUT_s <sup>1)</sup>	200 200	330	460 500	Ω Ω	f <sub>signal</sub> = 1 kHz, I = 0.1 mA
dV <sub>OUTSC</sub>	Deviation of DC-Level at SCART Output from AGNDC Voltage		-70		+70	mV	
A <sub>SCtoSC</sub>	Gain from Analog Input to SCART Output	SCn_IN_s <sup>1)</sup> MONO_IN	-1.0		+0.5	dB	f <sub>signal</sub> = 1 kHz
f <sub>rSCtoSC</sub>	Frequency Response from Analog Input to SCART Output bandwidth: 0 to 20000 Hz	→ SCn_OUT_s <sup>1)</sup>	-0.5		+0.5	dB	with resp. to 1 kHz
	Effective Signal Level at SCART-	SCn_OUT_s <sup>1)</sup>	1.8	1.9	2.0	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Main and Al	JX Outputs		•		•	•	
R <sub>outMA</sub>	Main/AUX Output Resistance at $T_j = 27 ^{\circ}\text{C}$ from $T_A = 0$ to $70 ^{\circ}\text{C}$	DACp_s <sup>1</sup> )	2.1 2.1	3.3	4.6 5.0	kΩ kΩ	f <sub>signal</sub> = 1 kHz, I = 0.1 mA
V <sub>outDCMA</sub>	DC-Level at Main/AUX-Output for Analog Volume at 0 dB for Analog Volume at –30 dB		1.80	2.04 61	2.28	V mV	
$V_{outMA}$	Effective Signal Level at Main/ AUX-Output during full-scale digi- tal input signal from DSP for Ana- log Volume at 0 dB		1.23	1.37	1.51	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz
Analog Perfo	ormance						
SNR	Signal-to-Noise Ratio						
	from Analog Input to DSP	MONO_IN, SCn_IN_s <sup>1)</sup>	85	88		dB	Input Level = $-20$ dB with resp. to $V_{AICL}$ , $f_{sig}$ =1 kHz, equally weighted 20 Hz16 kHz <sup>2</sup> )
	from Analog Input to SCART Output	MONO_IN, $SCn_IN_s^{1}$ $\rightarrow$ $SCn_OUT_s^{1}$	93	96		dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, equally weighted 20 Hz20 kHz
	from DSP to SCART Output	SCn_OUT_s <sup>1)</sup>	85	88		dB	Input Level = $-20 \text{ dB}$ , $f_{sig} = 1 \text{ kHz}$ , equally weighted $20 \text{ Hz} \dots 15 \text{ kHz}^3$
	from DSP to Main/AUX-Output for Analog Volume at 0 dB for Analog Volume at –30 dB	DACp_s <sup>1)</sup>	85 78	88 83		dB dB	Input Level = -20 dB, f <sub>sig</sub> =1 kHz, equally weighted 20 Hz15 kHz <sup>3</sup> )
THD	Total Harmonic Distortion						
	from Analog Input to DSP	MONO_IN, SCn_IN_s <sup>1)</sup>		0.01	0.03	%	Input Level = $-3$ dBr with resp. to $V_{AICL}$ , $f_{sig} = 1$ kHz, equally weighted 20 Hz16 kHz <sup>2</sup> )
	from Analog Input to SCART Output	MONO_IN, SCn_IN_s → SCn_OUT_s <sup>1)</sup>		0.01	0.03	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, equally weighted 20 Hz20 kHz
	from DSP to SCART Output	SCn_OUT_s <sup>1)</sup>		0.01	0.03	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, equally weighted 20 Hz16 kHz <sup>3)</sup>
	from DSP to Main or AUX Output	DACA_s, DACM_s <sup>1)</sup>		0.01	0.03	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, equally weighted 20 Hz16 kHz <sup>3)</sup>

<sup>1) &</sup>quot;n" means "1", "2", "3", or "4"; "s" means "L" , "R", or "SUB"; "p" means "M" or "A" 2) DSP measured at I<sup>2</sup>S-Output 3) DSP Input at I<sup>2</sup>S-Input

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
XTALK	Crosstalk attenuation - PLCC68 - PSDIP64						Input Level = $-3$ dB, $f_{sig}$ = 1 kHz, unused analog inputs connected to ground by Z < 1 k $\Omega$
	between left and right channel within SCART Input/Output pair (L→R, R→L)						equally weighted 20 Hz 20 kHz
	SCn_IN → SCn_OUT <sup>1)</sup>	PLCC68 PSDIP64	80 80			dB dB	
	SC1_IN or SC2_IN → DSP <sup>1)</sup>	PLCC68 PSDIP64	80 80			dB dB	2)
	SC3_IN → DSP <sup>1)</sup>	PLCC68 PSDIP64	80 80			dB dB	
	$DSP \to SCn\_OUT^{1)}$	PLCC68 PSDIP64	80 80			dB dB	3)
	between left and right channel withir Main or AUX Output pair	า					equally weighted 20 Hz16 kHz
	$DSP \to DACp^{1)}$	PLCC68 PSDIP64	80 75			dB dB	3)
	between SCART Input/Output pairs <sup>1)</sup> D = disturbing program O = observed program						(equally weighted 20 Hz20 kHz) same signal source on left and right disturbing chan- nel, effect on each ob-
	$ \begin{array}{c} \text{D: MONO/SCn\_IN} \rightarrow \text{SCn\_OUT} \\ \text{O: MONO/SCn\_IN} \rightarrow \text{SCn\_OUT}^1) \end{array} $	PLCC68 PSDIP64	100 100			dB dB	served output channel
	D: MONO/SCn_IN $\rightarrow$ SCn_OUT or 0: MONO/SCn_IN $\rightarrow$ DSP <sup>1)</sup>	unsel. PLCC68 PSDIP64	100 95			dB dB	2)
	D: MONO/SCn_IN $\rightarrow$ SCn_OUT O: DSP $\rightarrow$ SCn_OUT <sup>1)</sup>	PLCC68 PSDIP64	100 100			dB dB	3)
	D: MONO/SCn_IN → unselected O: DSP → SC1_OUT <sup>1)</sup>	PLCC68 PSDIP64	100 100			dB dB	3)
	Crosstalk between Main and AUX Output pairs						(equally weighted 20 Hz16 kHz) <sup>3)</sup> same signal source on left
	DSP → DACp <sup>1)</sup>	PLCC68 PSDIP64	95 90			dB dB	and right disturbing chan- nel, effect on each ob- served output channel

<sup>&</sup>quot;s" means "L" or "R"; "p" means "M" or "A"

<sup>1) &</sup>quot;n" means "1", "2", "3", or "4"; 2) DSP measured at I<sup>2</sup>S-Output 3) DSP Input at I<sup>2</sup>S-Input

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
XTALK	Crosstalk from Main or AUX Output to SCART Output and vice versa  D = disturbing program O = observed program						(equally weighted 20 Hz20 kHz) same signal source on left and right disturbing chan- nel, effect on each ob- served output channel
	$\begin{array}{c} \text{D: MONO/SCn\_IN/DSP} \rightarrow \text{SCn\_OI} \\ \text{O: DSP} \rightarrow \text{DACp}^1) \end{array}$	JT PLCC68 PSDIP64	85 80			dB dB	SCART output load resistance 10 kΩ
	$\begin{array}{c} \text{D: MONO/SCn\_IN/DSP} \rightarrow \text{SCn\_OI} \\ \text{O: DSP} \rightarrow \text{DACp}^1) \end{array}$	JT PLCC68 PSDIP64	90 85			dB dB	SCART output load resistance 30 kΩ
	D: DSP → DACp O: MONO/SCn_IN → SCn_OUT <sup>1)</sup>	PLCC68 PSDIP64	100 95			dB dB	3)
	$\begin{array}{c} \text{D: DSP} \rightarrow \text{DACM} & \text{PLCC68} \\ \text{O: DSP} \rightarrow \text{SCn\_OUT}^1) & \text{PSDIP64} \end{array}$					dB dB	
PSRR: reject	tion of noise on AHVSUP at 1 kHz						
	AGNDC	AGNDC		80		dB	
	From Analog Input to DSP	MONO_IN, SCn_IN_s <sup>1)</sup>		70		dB	
	From Analog Input to SCART Output	MONO_IN, SCn_IN_s <sup>1)</sup> SCn_OUT_s <sup>1)</sup>		70		dB	
	From DSP to SCART Output	SCn_OUT_s <sup>1)</sup>		60		dB	
	From DSP to MAIN/AUX Output	DACp_s <sup>1)</sup>		80		dB	
S/N <sub>FM</sub>	FM Input to Main/AUX/SCART Output	DACp_s, SCn_OUT_s <sup>1)</sup>	73			dB	1 FM-carrier 5.5 MHz, 50 μs, 1 kHz, 40 kHz devi- ation; RMS, unweighted 0 to 15 kHz (for S/N); full in- put range, FM-Pres- cale = 46 h, Vol = 0 dB —> Output Level 1 Vrms at DACp_s; SPM = 3
THD <sub>FM</sub>	Total Harmonic Distortion + Noise of FM demodulated signal on Main/AUX/SCART output	DACp_s, SCn_OUT_s <sup>1)</sup>			0.1	%	
S/N <sub>NICAM</sub>	Signal to Noise ratio of NICAM baseband signal on Main/AUX/ SCART outputs	DACp_s, SCn_OUT_s <sup>1)</sup>	72			dB	NICAM: -6 dB, 1 kHz, RMS unweighted 0 to 15 kHz, Vol = 9 dB NIC_Presc = 7Fh Output level 1 V <sub>RMS</sub> at DACp_s;SPM = 8
THD <sub>NICAM</sub>	Total Harmonic Distortion + Noise of NICAM baseband signal on Main/AUX/SCART output	DACp_s, SCn_OUT_s <sup>1)</sup>			0.1	%	2.12 kHz, Modulator input level = 0 dBref SPM = 8
BER <sub>NI</sub>	NICAM: Bit Error Rate	_			1	10 <sup>-7</sup>	FM+NICAM, norm conditions
S/N <sub>AM</sub>	Signal to Noise ratio of AM base- band signal on Main/AUX/SCART outputs	DACp_s, SCn_OUT_s <sup>1)</sup>	48			dB	SIF input range: 0.1–0.8 Vpp; AM = 70%, 1 kHz, RMS unweighted (S/N); 0 to 15 kHz, FM/AM-Prescale=3Chex, Vol=0dB —> Output level: 0.5 V <sub>RMS</sub> at DACp_s FM+NICAM, norm conditions; SPM = 9
THD <sub>AM</sub>	Total Harmonic Distortion + Noise of AM demodulated signal on Main/AUX/SCART output	DACp_s, SCn_OUT_s <sup>1)</sup>			0.3	%	


<sup>1) &</sup>quot;n" means "1", "2", "3", or "4"; 2) DSP measured at I<sup>2</sup>S-Output 3) DSP Input at I<sup>2</sup>S-Input "s" means "L" or "R"; "p" means "Loudspeaker (Main)" or "Headphone (AUX)"

SPM: Short Programming Mode

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
R <sub>IFIN</sub>	Input Impedance	ANA_IN1+, ANA_IN2+, ANA_IN-	1.5 10.5	2 14.1	2.5 17.6	kΩ kΩ	Gain AGC = 20 dB Gain AGC = 3 dB
DC <sub>VREFTOP</sub>	DC voltage at VREFTOP	VREFTOP	2.4	2.6	2.7	V	
DC <sub>ANA_IN</sub>	DC voltage on IF inputs	ANA_IN1+, ANA_IN2+ ANA_IN-	1.3	1.5	1.7	٧	
XTALK <sub>IF</sub>	Crosstalk attenuation	ANA_IN1+, - ANA_IN2+ ANA_IN-	40			dB	f <sub>signal</sub> = 1 MHz Input Level = –2 dBr
BW <sub>IF</sub>	3 dB Bandwidth		10			MHz	input Level = -2 dbi
AGC	AGC Step Width			0.85		dB	
dV <sub>FMOUT</sub>	Tolerance of output voltage of FM demodulated signal	DACp_s, SCn_OUT_s <sup>1)</sup>	-1.5		+1.5	dB	1 FM-carrier, 50 μs, 1 kHz 40 kHz deviation; RMS
dV- NICAMOUT	Tolerance of output voltage of NICAM baseband signal	DACp_s, SCn_OUT_s <sup>1)</sup>	-1.5		+1.5	dB	2.12 kHz, Modulator input level = 0 dBref
fR <sub>FM</sub>	FM Frequency Response on Main/ AUX/SCART Outputs, Bandwidth 20 to 15000 Hz	DACp_s, SCn_OUT_s <sup>1)</sup>	-1.0		+1.0	dB	1 FM-carrier 5.5 MHz, 50 μs, Modulator input level = –14.6 dBref; RMS
fR <sub>NICAM</sub>	NICAM Frequency Response on Main/AUX/SCART Outputs, Bandwidth 20 to 15000 Hz	DACp_s, SCn_OUT_s <sup>1)</sup>	-1.0		+1.0	dB	Modulator input level = -12 dB dBref; RMS
SEP <sub>FM</sub>	FM Channel Separation (Stereo)	DACp_s, SCn_OUT_s <sup>1)</sup>	50			dB	2 FM-carriers 5.5/5.74 MHz, 50 μs, 1 kHz, 40 kHz deviation; RMS
SEP <sub>NICAM</sub>	NICAM Channel Separation (Stereo)	DACp_s, SCn_OUT_s <sup>1)</sup>	80			dB	
XTALK <sub>FM</sub>	FM Crosstalk Attenuation (Dual)	DACp_s, SCn_OUT_s <sup>1)</sup>	80			dB	2 FM-carriers 5.5/5.74 MHz, 50 μs, 1 kHz, 40 kHz deviation; RMS
XTALK- NICAM	NICAM Crosstalk Attenuation (Dual)	DACp_s, SCn_OUT_s <sup>1)</sup>	80			dB	

 $<sup>^{1)}</sup>$  "n" means "1", "2", "3", or "4"; "s" means "L" or "R"; "p" means "M" or "A"

# 10. Application Circuit

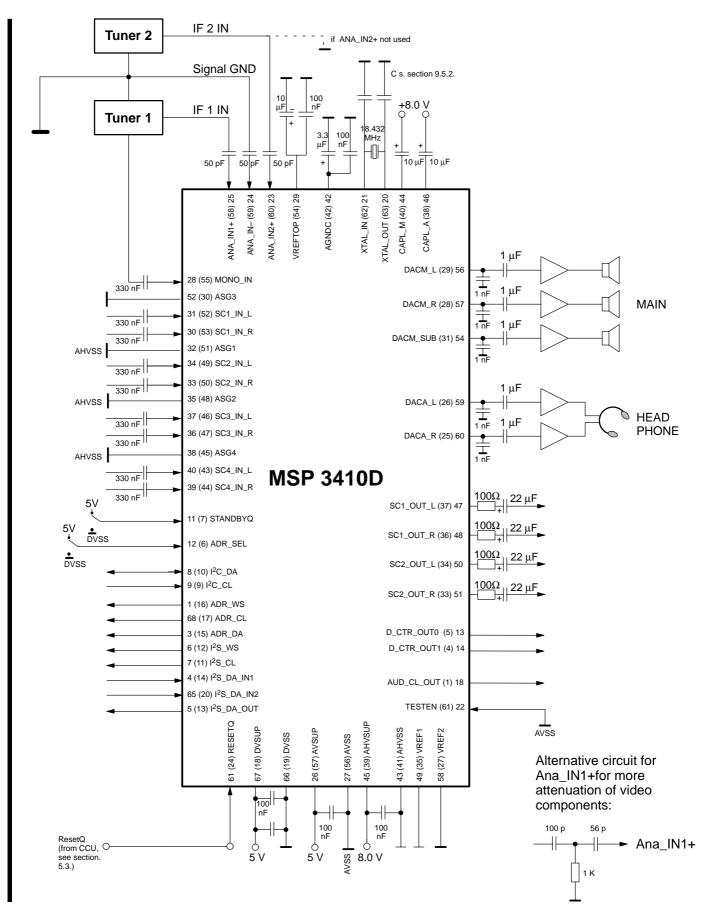

Note: Pin numbers refer to the PLCC68 package, numbers in brackets refer to the PSDIP64 package.

#### 11. Appendix A: MSP 3410D Version History

#### **A1**

First hardware release, which is completely compatible to MSP 3410B.

#### **A2**

Hardware as A1 with additional features:

- Automatic NICAM-FM switching
- Demodulator Short Programming
- Automatic Standard Detection

#### **B3**

Hardware as A2 with additional features:

- Automatic Volume Correction (AVC)
- Subwoofer Output
- Improved Automatic Standard Detection
- extended Short Programming Mode
- automatic reset and selection of identification for Demodulator Short Programming

#### **B4**

Hardware and firmware as B3:

 Carrier Mute Function not recommended in High Deviation Mode

#### 12. Data Sheet History

- 1. Preliminary Data Sheet: "MSP 3410D Multistandard Sound Processor", Feb. 12, 1997, 6251-422-1PD. First release of the preliminary data sheet.
- 2. Preliminary Data Sheet: "MSP 3410D Multistandard Sound Processor", Sept. 23, 1997, 6251-422-2PD. Second release of the preliminary data sheet. Major changes:
- detailed description of various features
- unification of nomenclature
- AM-demodulation prescaling values and AM-specification
- specification of equalizer; processing, however, has not been changed
- additional section 4.6. Digital Control Output Pins
- section 9.1.: Outline Dimensions changed
- additional pin package: PQFP80
- 3. Preliminary Data Sheet: "MSP 3410D Multistandard Sound Processor", Jan. 15, 1998, 6251-422-3PD. Third release of the preliminary data sheet. Major changes:
- section 9.2.: PQFP80 pinning changed
- section 9.3. Fig. 9-8: PQFP80 pinning changed
- section 10.: pin numbers for I<sup>2</sup>C\_CL corrected

MICRONAS INTERMETALL GmbH Hans-Bunte-Strasse 19 D-79108 Freiburg (Germany) P.O. Box 840 D-79008 Freiburg (Germany) Tel. +49-761-517-0 Fax +49-761-517-2174 F-mail: docservice@intermetall.de

E-mail: docservice@intermetall.de Internet: http://www.intermetall.de

Printed in Germany Order No. 6251-422-3PD All information and data contained in this data sheet are without any commitment, are not to be considered as an offer for conclusion of a contract nor shall they be construed as to create any liability. Any new issue of this data sheet invalidates previous issues. Product availability and delivery dates are exclusively subject to our respective order confirmation form; the same applies to orders based on development samples delivered. By this publication, MICRONAS INTERMETALL GmbH does not assume responsibility for patent infringements or other rights of third parties which may result from its use. Reprinting is generally permitted, indicating the source. However, our prior consent must be obtained in all cases.