

# 2SK2737

Silicon N Channel MOS FET  
High Speed Power Switching

## HITACHI


ADE-208-533  
1st. Edition

### Features

- Low on-resistance  
 $R_{DS(on)} = 10 \text{ m}\Omega \text{ typ.}$
- Low drive current
- High speed switching

### Outline

TO-220CFM

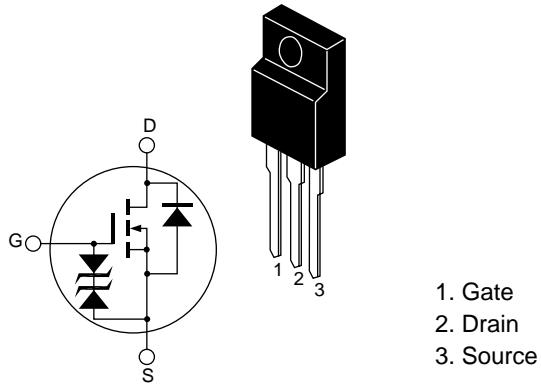

**Absolute Maximum Ratings (Ta = 25°C)**

Item	Symbol	Ratings	Unit
Drain to source voltage	V <sub>DSS</sub>	30	V
Gate to source voltage	V <sub>GSS</sub>	±20	V
Drain current	I <sub>D</sub>	45	A
Drain peak current	I <sub>D(pulse)</sub> <sup>*1</sup>	180	A
Body to drain diode reverse drain current	I <sub>DR</sub>	45	A
Channel dissipation	Pch <sup>*2</sup>	30	W
Channel temperature	T <sub>ch</sub>	150	°C
Storage temperature	T <sub>stg</sub>	-55 to +150	°C

Notes: 1. PW ≤ 10μs, duty cycle ≤ 1 %





2. Value at Tc = 25°C





**Electrical Characteristics (Ta = 25°C)**





Item	Symbol	Min	Typ	Max	Unit	Test Conditions
Drain to source breakdown voltage	V <sub>(BR)DSS</sub>	30	—	—	V	I <sub>D</sub> = 10mA, V <sub>GS</sub> = 0
Gate to source breakdown voltage	V <sub>(BR)GSS</sub>	±20	—	—	V	I <sub>G</sub> = ±100μA, V <sub>DS</sub> = 0
Gate to source leak current	I <sub>GSS</sub>	—	—	±10	μA	V <sub>GS</sub> = ±16V, V <sub>DS</sub> = 0
Zero gate voltage drain current	I <sub>DSS</sub>	—	—	10	μA	V <sub>DS</sub> = 30 V, V <sub>GS</sub> = 0
Gate to source cutoff voltage	V <sub>GS(off)</sub>	1.0	—	2.0	V	I <sub>D</sub> = 1mA, V <sub>DS</sub> = 10V <sup>*1</sup>
Static drain to source on state resistance	R <sub>DS(on)</sub>	—	10	14	mΩ	I <sub>D</sub> = 20A, V <sub>GS</sub> = 10V <sup>*1</sup>
	R <sub>DS(on)</sub>	—	15	25	mΩ	I <sub>D</sub> = 20A, V <sub>GS</sub> = 4V <sup>*1</sup>
Forward transfer admittance	y <sub>fs</sub>	20	30	—	S	I <sub>D</sub> = 20A, V <sub>DS</sub> = 10V <sup>*1</sup>
Input capacitance	C <sub>iss</sub>	—	1550	—	pF	V <sub>DS</sub> = 10V
Output capacitance	C <sub>oss</sub>	—	1050	—	pF	V <sub>GS</sub> = 0
Reverse transfer capacitance	C <sub>rss</sub>	—	330	—	pF	f = 1MHz
Turn-on delay time	t <sub>d(on)</sub>	—	20	—	ns	V <sub>GS</sub> = 10V, I <sub>D</sub> = 20A
Rise time	t <sub>r</sub>	—	370	—	ns	R <sub>L</sub> = 0.5Ω
Turn-off delay time	t <sub>d(off)</sub>	—	170	—	ns	
Fall time	t <sub>f</sub>	—	180	—	ns	
Body to drain diode forward voltage	V <sub>DF</sub>	—	0.95	—	V	I <sub>D</sub> = 45A, V <sub>GS</sub> = 0
Body to drain diode reverse recovery time	t <sub>rr</sub>	—	75	—	ns	I <sub>F</sub> = 45A, V <sub>GS</sub> = 0 dI/F/ dt = 50A/μs



Note: 1. Pulse test

## Main Characteristics

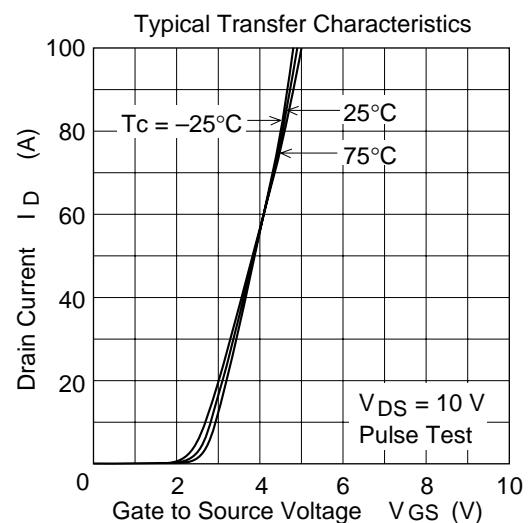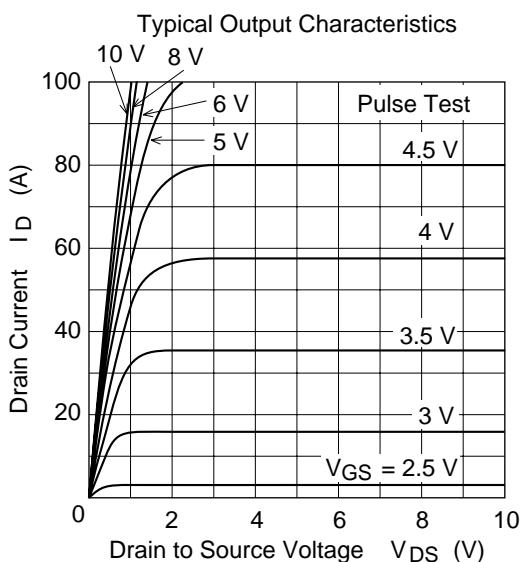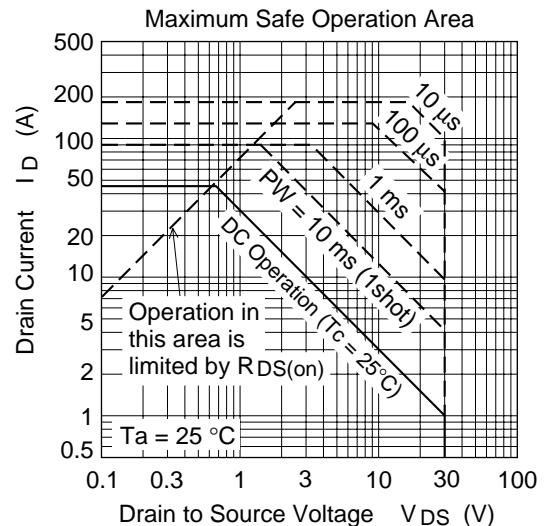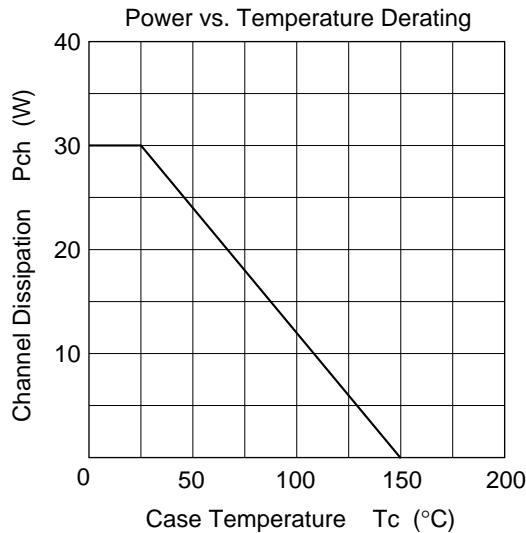


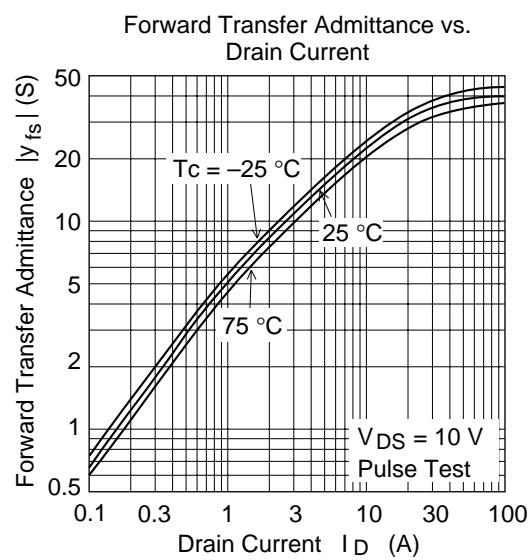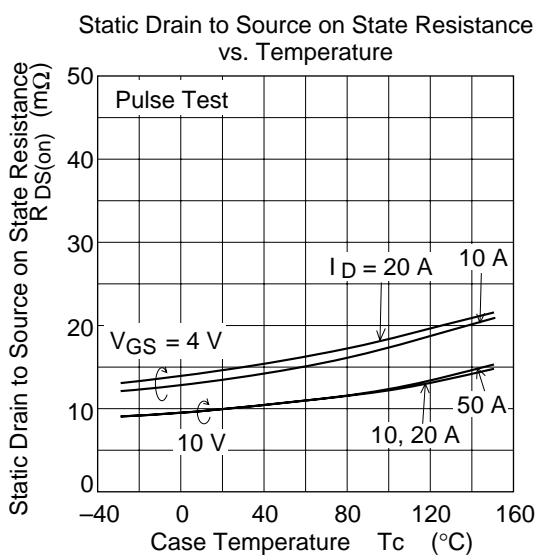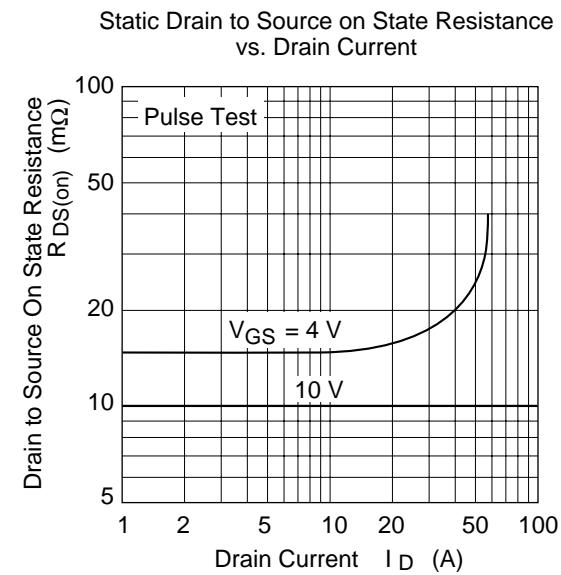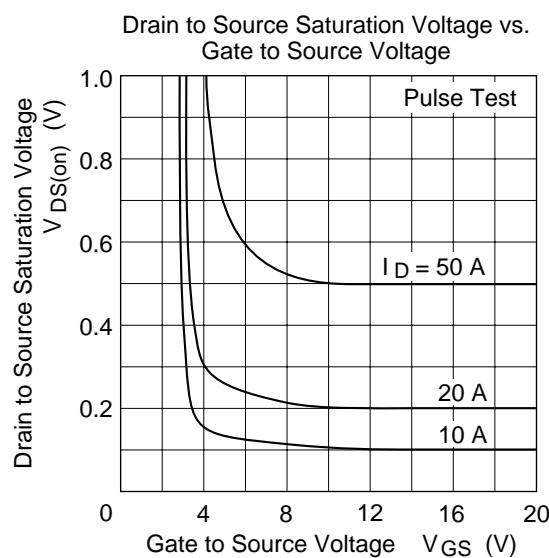

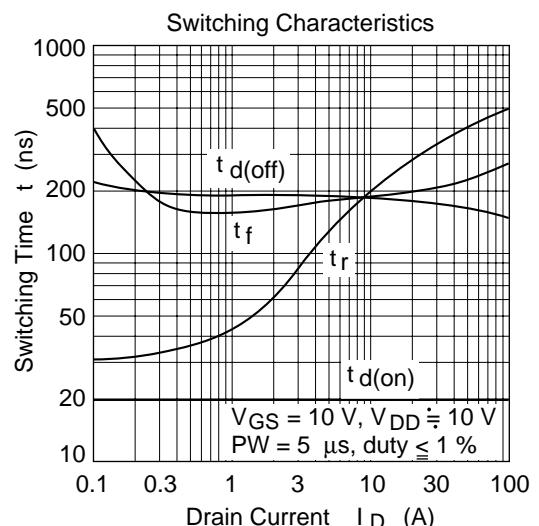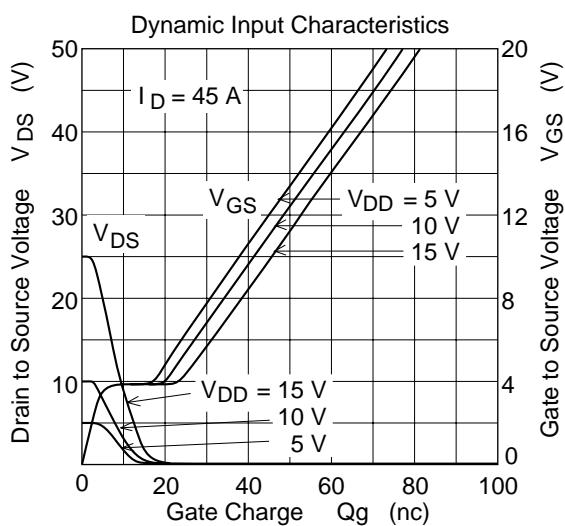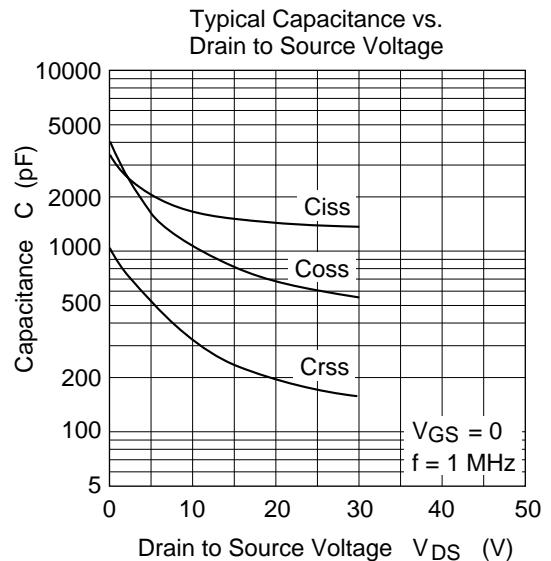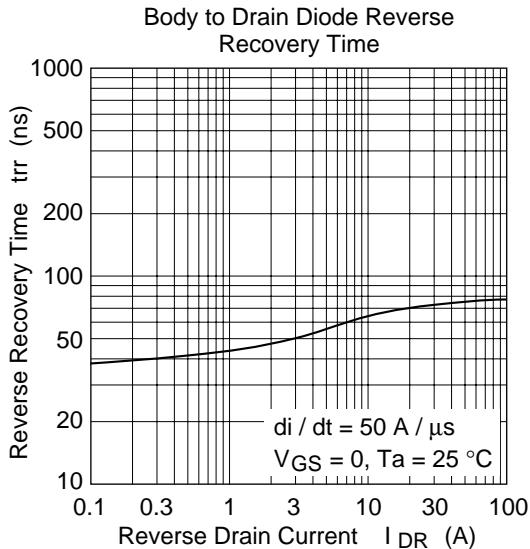


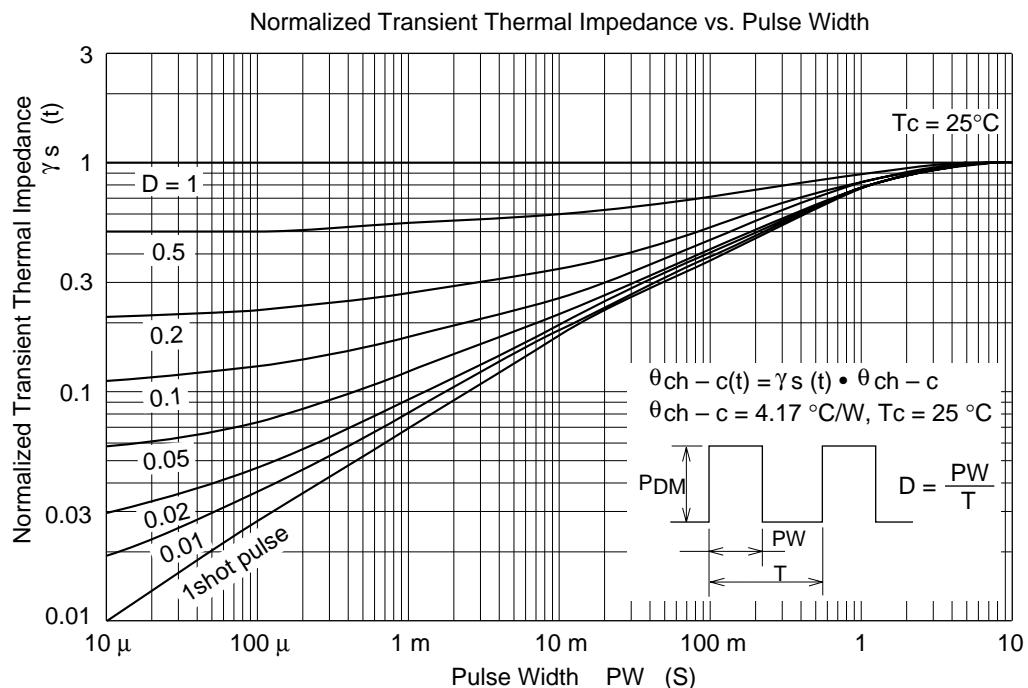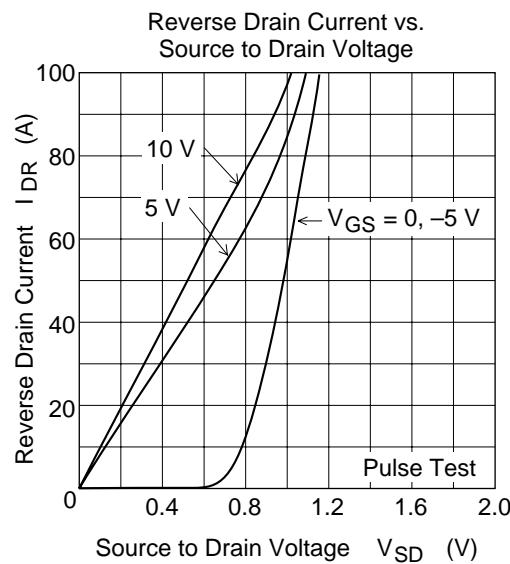

Switching Time Test Circuit

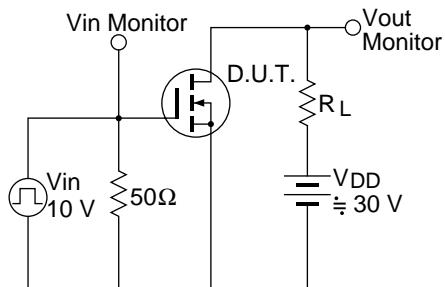


Switching Time Waveforms

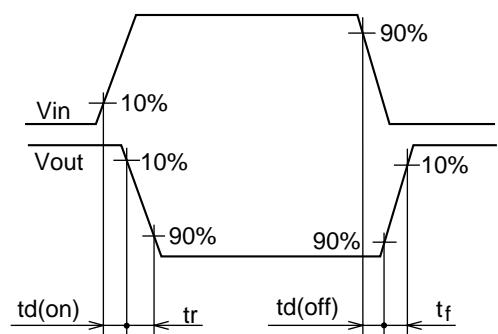

## Package Dimensions

Unit: mm

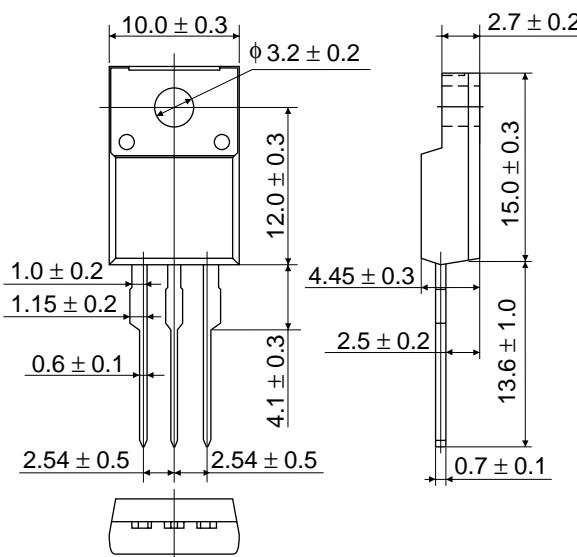

Hitachi Code	TO-220CFM
EIAJ	—
JEDEC	—

When using this document, keep the following in mind:

1. This document may, wholly or partially, be subject to change without notice.
2. All rights are reserved: No one is permitted to reproduce or duplicate, in any form, the whole or part of this document without Hitachi's permission.
3. Hitachi will not be held responsible for any damage to the user that may result from accidents or any other reasons during operation of the user's unit according to this document.
4. Circuitry and other examples described herein are meant merely to indicate the characteristics and performance of Hitachi's semiconductor products. Hitachi assumes no responsibility for any intellectual property claims or other problems that may result from applications based on the examples described herein.
5. No license is granted by implication or otherwise under any patents or other rights of any third party or Hitachi, Ltd.
6. MEDICAL APPLICATIONS: Hitachi's products are not authorized for use in MEDICAL APPLICATIONS without the written consent of the appropriate officer of Hitachi's sales company. Such use includes, but is not limited to, use in life support systems. Buyers of Hitachi's products are requested to notify the relevant Hitachi sales offices when planning to use the products in MEDICAL APPLICATIONS.

---

---

# HITACHI

**Hitachi, Ltd.**

Semiconductor &amp; IC Div.

Nippon Bldg., 2-6-2, Ohte-machi, Chiyoda-ku, Tokyo 100, Japan

Tel: Tokyo (03) 3270-2111

Fax: (03) 3270-5109

**For further information write to:**

Hitachi America, Ltd.

Semiconductor &amp; IC Div.

2000 Sierra Point Parkway

Brisbane, CA. 94005-1835

U S A

Tel: 415-589-8300

Fax: 415-583-4207

Hitachi Europe GmbH

Electronic Components Group

Continental Europe

Dornacher Straße 3

D-85622 Feldkirchen

München

Tel: 089-9 91 80-0

Fax: 089-9 29 30 00

Hitachi Europe Ltd.

Electronic Components Div.

Northern Europe Headquarters

Whitebrook Park

Lower Cookham Road

Maidenhead

Berkshire SL6 8YA

United Kingdom

Tel: 0628-585000

Fax: 0628-778322

Hitachi Asia Pte. Ltd.

16 Collyer Quay #20-00

Hitachi Tower

Singapore 0104

Tel: 535-2100

Fax: 535-1533

Hitachi Asia (Hong Kong) Ltd.

Unit 706, North Tower,

World Finance Centre,

Harbour City, Canton Road

Tsim Sha Tsui, Kowloon

Hong Kong

Tel: 27359218

Fax: 27306071

Copyright © Hitachi, Ltd., 1997. All rights reserved. Printed in Japan.